


ASSEMBLY AND INSTALLATION INSTRUCTIONS

H0268

WARNING: TO AVOID RISK OF ELECTRICAL SHOCK, BE SURE TO SHUT OFF POWER BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTES: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. READ AND SAVE THIS INSTRUCTIONS.

Hardware Package (included):

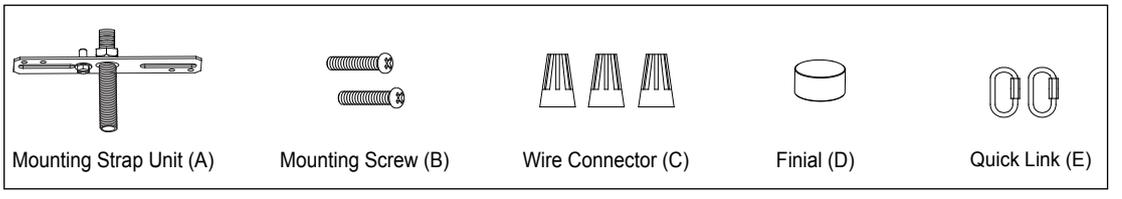

Installation Steps

Turn off the power at fuse or circuit box.

1. Attach the mounting strap unit (A) to the outlet box using two mounting screws (B).

2. Rod Connections:

- Thread the fixture wire from the fixture through the lower rod, and then secure the lower rod onto fixture using the threaded pipe.
- Thread the fixture wire through the middle rod, and then secure the middle rod onto the lower rod using the threaded pipe.
- Thread the fixture wire through the upper rod, and then secure the upper rod onto the middle rod using the threaded pipe.
- Thread the fixture wire through the loop and fixture canopy, and then secure the loop onto the upper rod using the threaded pipe.

Note: Length adjustable from 10-3/4" to 73-1/4".
Use fewer rods if shorter length is desired.

3. Take a quick link (E), open the locking tube, and then hook it onto the loop of fixture canopy and the loop of upper rod. Close back the locking tube of the quick link (E).



4. Attach the cord clamp onto the mounting strap unit (A).

5. Pull out the source wires from the outlet box. Make wire connections using wire connectors (C) as follows:
---Connect the smooth-coated wire (marked) from the fixture to the black wire from the power source.

---Connect the ribbed-coated wire (unmarked) from the fixture to the white wire from the power source.

---Attach the fixture ground wire to the mounting strap unit (A) with the green ground screw, then connect it to the house ground wire with a wire connector (C).

Carefully put the wires back into the outlet box.

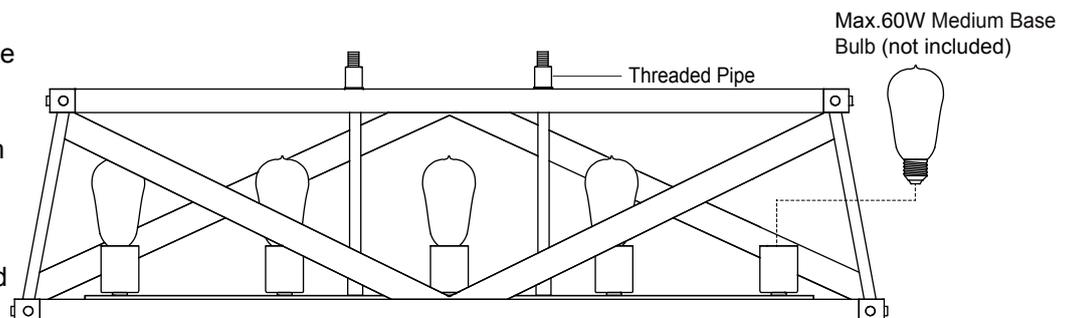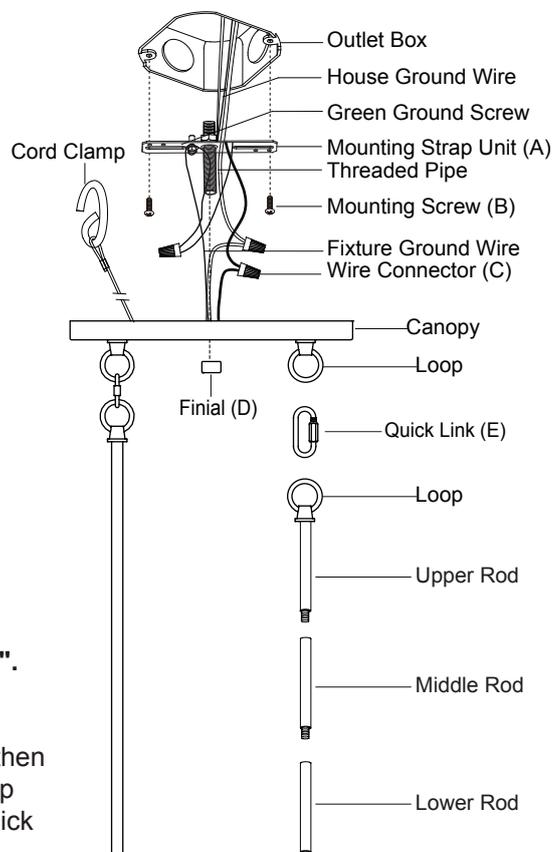

6. Attach the canopy to the mounting strap unit (A) and secure it with a finial (D).

7. Install 5 x 60W max. medium base bulbs (not included). See relamping label at socket area or packaging for maximum wattage allowed.

Turn on the power at fuse or circuit box.

The following parts are available for re-order if damaged or missing.

Spare Parts List:

