Progressive® ASSEMBLY INSTRUCTION Item No: D857-61

Description:DINING CHAIR



IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check to be sure that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten all screws/bolts until all completely assembled.
- Keep all hardware parts out of reach of children.

Each chair

PARTS LIST			
NO.	COMPONENT	QTY.	
1	CHAIR BACK	1PC	
2	STRETCHER	1PC	
3	LEG LEFT	1PC	
4	LEG RIGHT	1PC	
5	CHAIR SEAT	1PC	

HARDWARE LIST				
NO.	DESCRIPTION		QTY	
A		Bolt Φ1/4" x 80mm	4 PCS	
В		Bolt Φ1/4" x 50mm	4 PCS	
С		Bolt Φ1/4" x 40mm	3 PCS	
D		Flat washer Φ 1/4"	11 PCS	
Е		Lock washerΦ1/4"	11 PCS	
F		Allen wrenchM4 *58mm	1 PC	
G		Wood Screw #8*38mm	4 PCS	



