#### ASSEMBLY INSTRUCTION FOR ACME FURNITURE

#### MODEL#AC00543

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screws until fully assembled.\*\*\*

## DRESSER



-DIMENSIONS

Width - 47.24"


Depth - 16.22"

Height - 30.14"

#### **PRECAUTIONS**

Because our products may be challenging for beginners, we deeply understand that you may encounter some difficulties. To avoid discouragement, we have provided some useful tips, as follows.




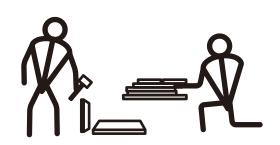

## **Enough Open Space** -

Ensure that there is enough space for movement during assembly.



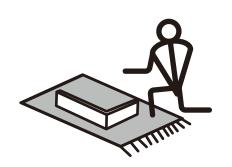

## Prevent Scratching -

When assembling furniture, use cardboard, blankets or a carpet areas to prevent scratches.





## More than two people -

Always have at least two people to help transport and assemble the product to avoid potential injury and/or damage.




#### Question -

If there is any problem with the assembly process, you can call us.


#### CAM LOCK FASTENER


Every cam bolt must have a cam lock connector to hold the parts together.

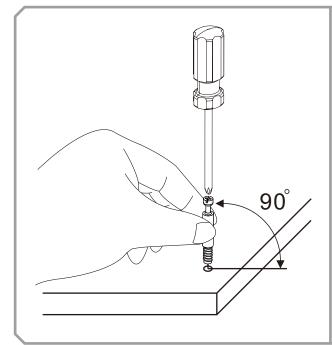

1.

  
When assembling, the hardware parts and the wooden board must be kept vertical, and the tools must be in full contact with the hardware groove.






Caution:

Do not use excessive force to advoid over-fastening, or even exceed the entire board.

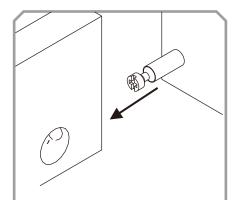


2.

Insert the cam lock pin into the hole of joint panel.

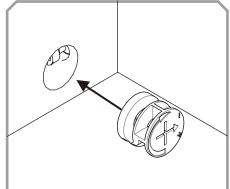

3.

The cam lock nut opening side (or arrow) aligned with the cam lock pin.

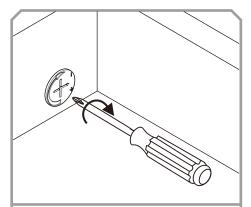

4.

Slowly rotate the cam lock clockwise until it stops rotating.






Caution:


When assembling the cam lock, do not use an electric screwdriver to avoid damage to the board or hardware due to excessive force.

#### SLIDE RAIL

The holes of the slide rail are in the same direction as the following page.

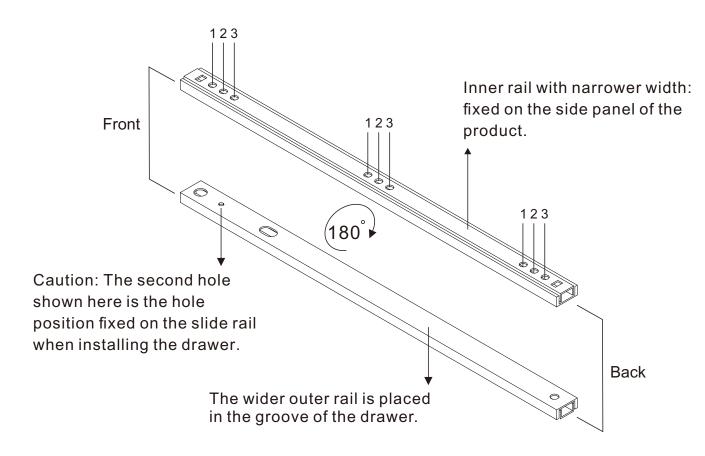

#### **DOWEL**

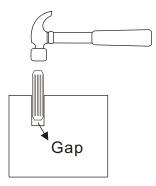

#### ATTENTION

Inserting wood dowels is likely to be tight, so wood dowels may not easily touch the bottom and damage the side panels during installation. It is recommended to slight hit the wooden pins with a hammer to eliminate the gap between the wood dowel and board.




#### OPTIONAL


It is recommended to use white glue to increase the safety of the produst. If you are worried about assembly errors, you can temporarily not add it, and then add it after confirming.

## AC00543


#### **PARTS LIST**

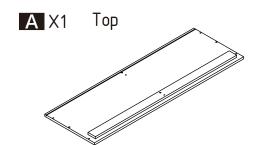

**G** X2 Top drawer head

 


M X6 Drawer support

 


B X1 Bottom



 **H** X2 Middle drawer head



N X6 Drawer bottom

 


C X1 Left side



X2 Bottom drawer head



 
O X2 Back



D X1 Right side




 J X6 Drawer left




E X1 Front middle

 
**F** X1




K X6 Drawer right

 

Back middle L X6 Drawer back

 

 

#### HARDWARE LIST



7\*35\*12.5mm



2 X30

Cam lock

15\*12mm



(3) X18

Dowel

8\*30mm



4 X24

Wood screw

8#\*1-1/4"



(5) X6

Coarse screw

7\*11\*50mm



6 X12

Slide rail

17\*310mm



(7) X24

Wood screw

6#\*1/2"



(8) X12

Fixing screw

M4\*12mm



(9) X6

Handle



(10) X12

Handle screw

M4\*19mm



(1) X5

Foot



(12) X5 Foot pad



(13) X20

T-head screw

4\*16mm



(14) X8

Fixative plate



(15) X8

Wood screw

3\*19mm



(16) X1

Wall mounted strap

25\*152mm



① X1

T-head screw

8#\*5/8"



(18) X1

Wall anchor

1-1/8"

(19) X1

T-head screw

8#\*1"



20 X1

Allen wrench



②1) X1


Glue





#### Attention

Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.


## Step 1.

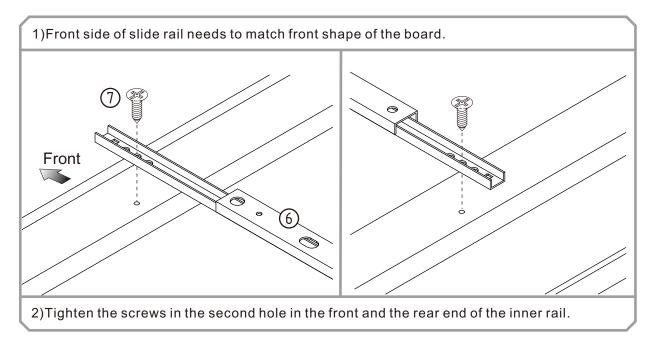

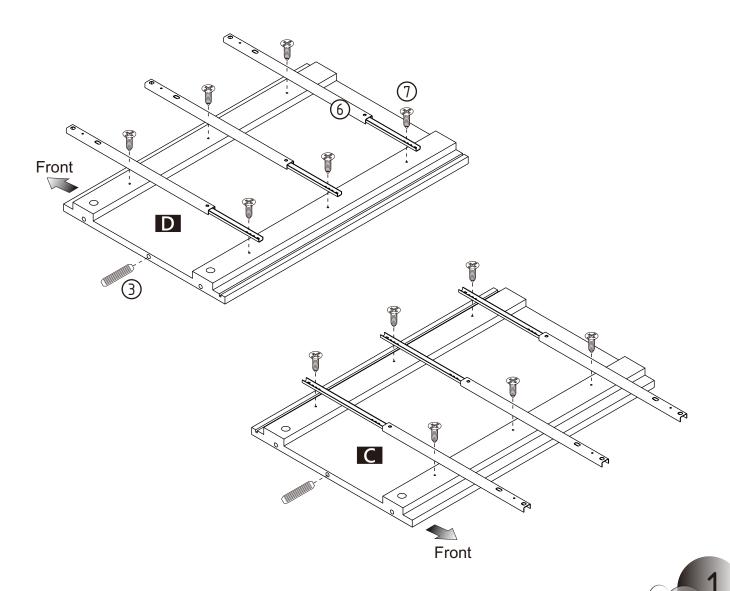

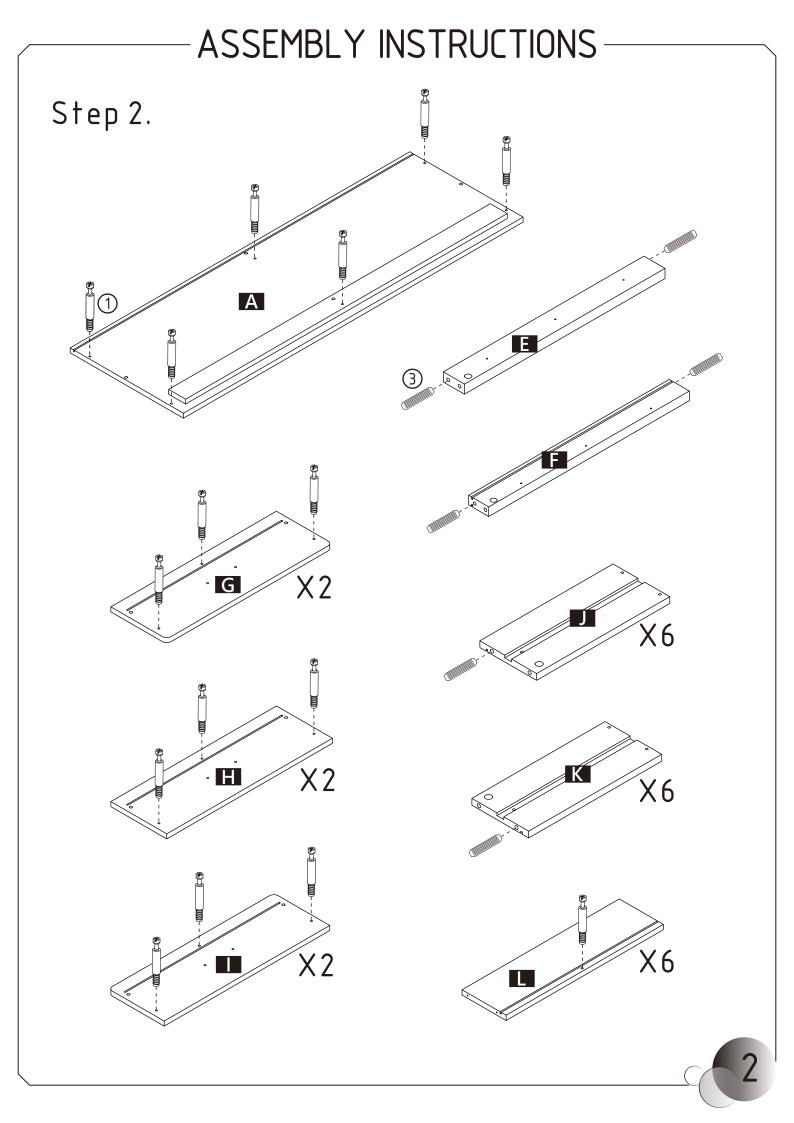


# ASSEMBLY INSTRUCTIONS Step 3. Front D Finished side С В В 11) X5

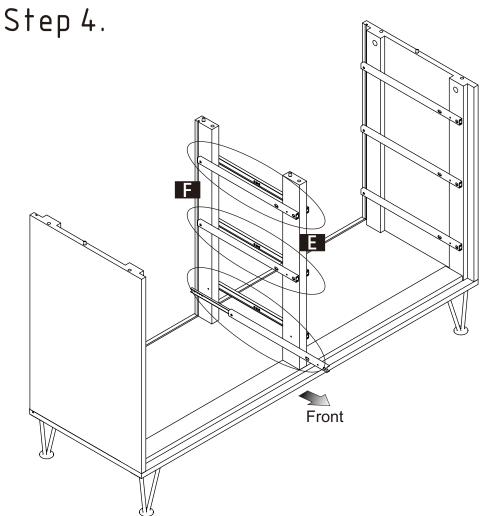





#### Caution:


Please do not drag or use the corner to lift the product, especially after the cabinet feet are installed. When the product needs to be moved or turned, it must be raised.

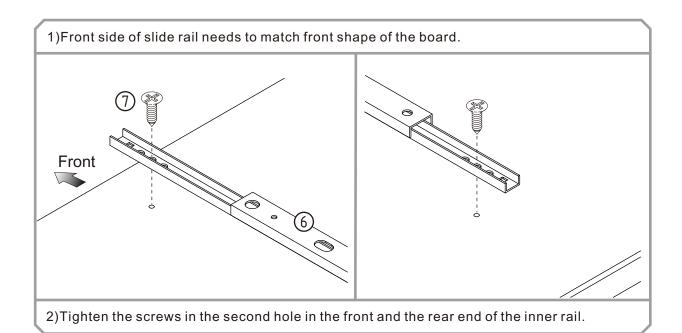

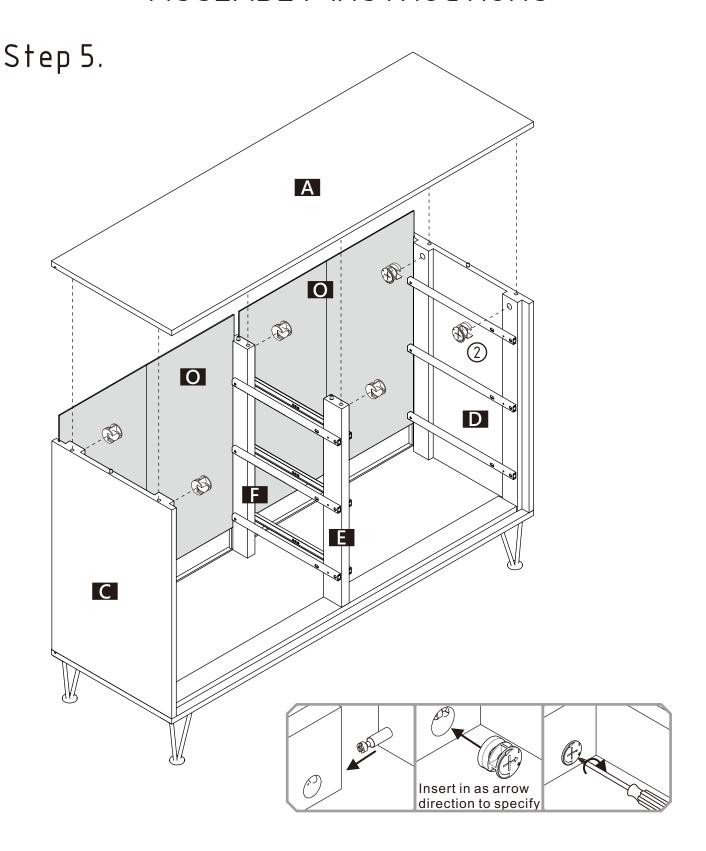


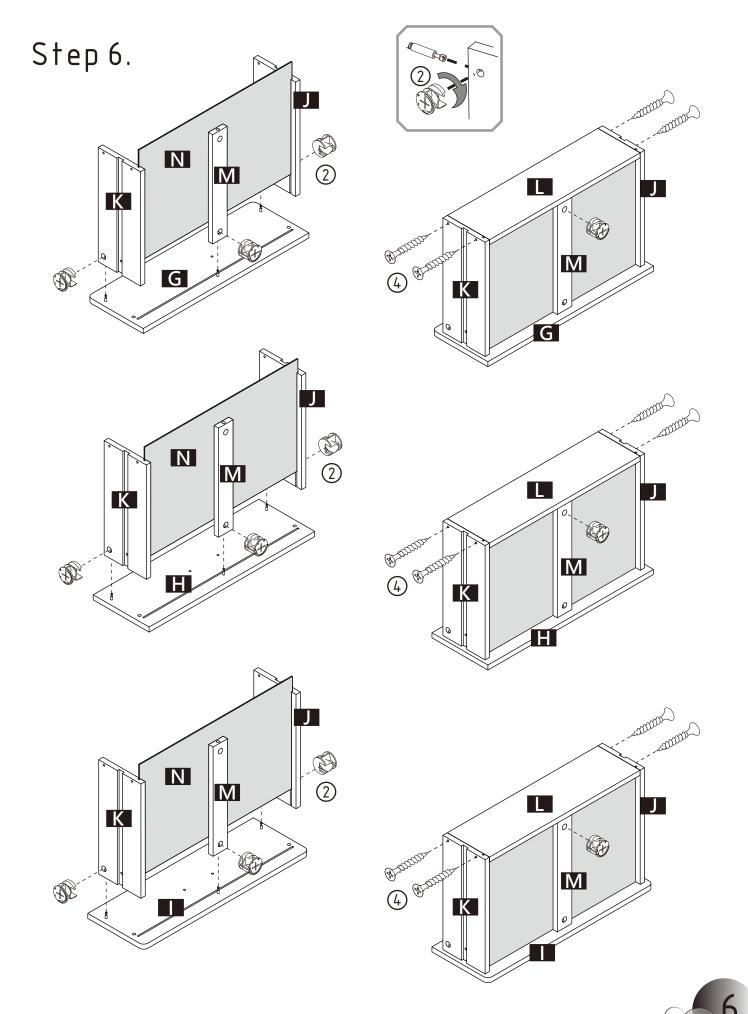


Step 7.

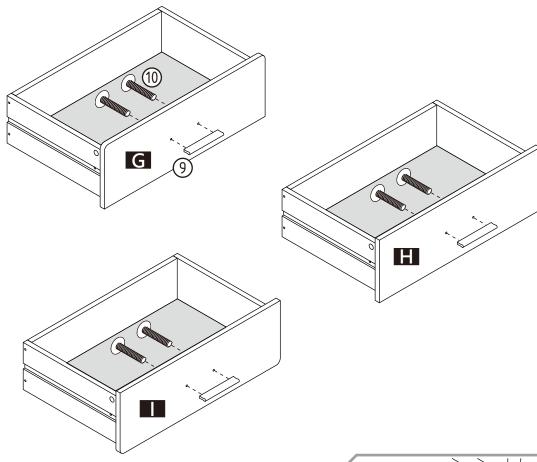


Step 8.

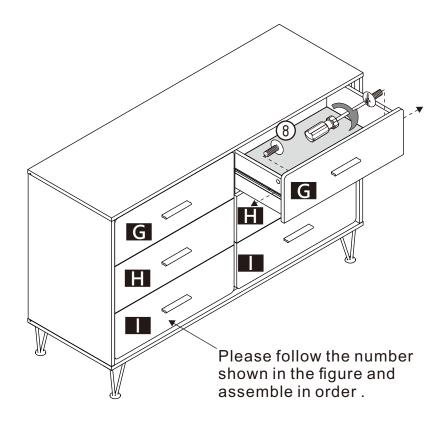


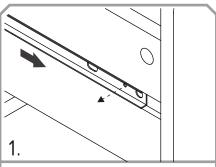

Extend the two outer slides of the runners so that they could align with the sides of the drawer. Make sure the pre-drilled holes from the drawer align with the screw holes of the outer slides.

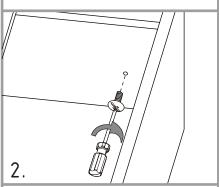

Secure two screws from the inside of the drawer using a Phillips screwdriver to tighten them to the outer slides.

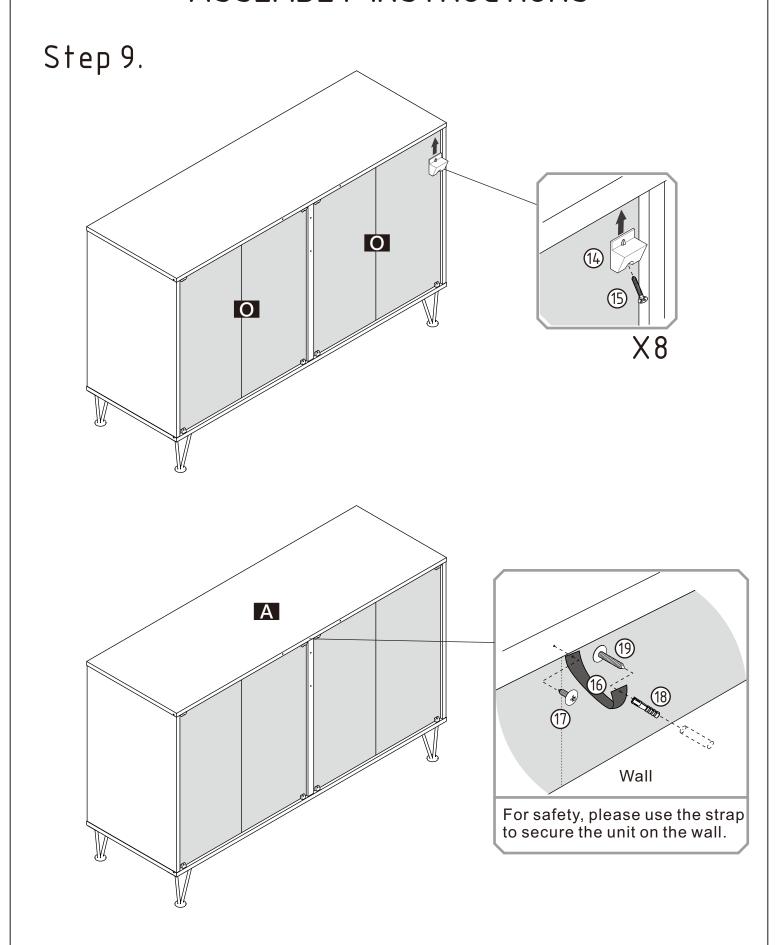

#### ASSEMBLY IS COMPLETED.

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.