



Model: AF007

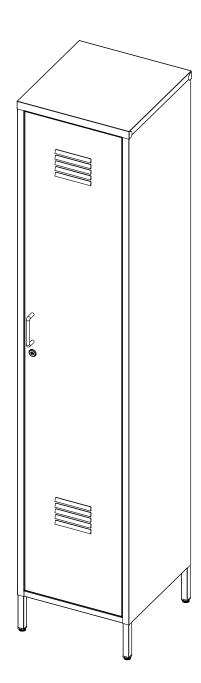

V.10122024

Metal Accent Cabinet

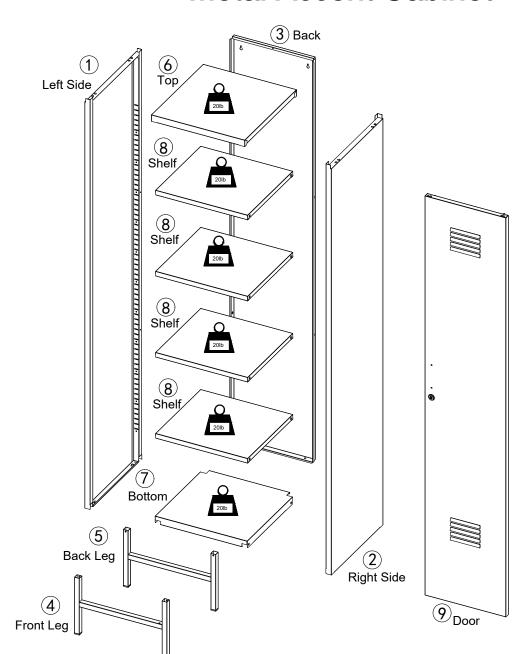



Hardware list

В

C

F

G

M5×12mm 25 ×

M4×4mm 2 ×

96mm 1 ×

16 ×

1 ×

M4×40mm 2 ×




Ø8×40mm 2 ×

K






4 ×

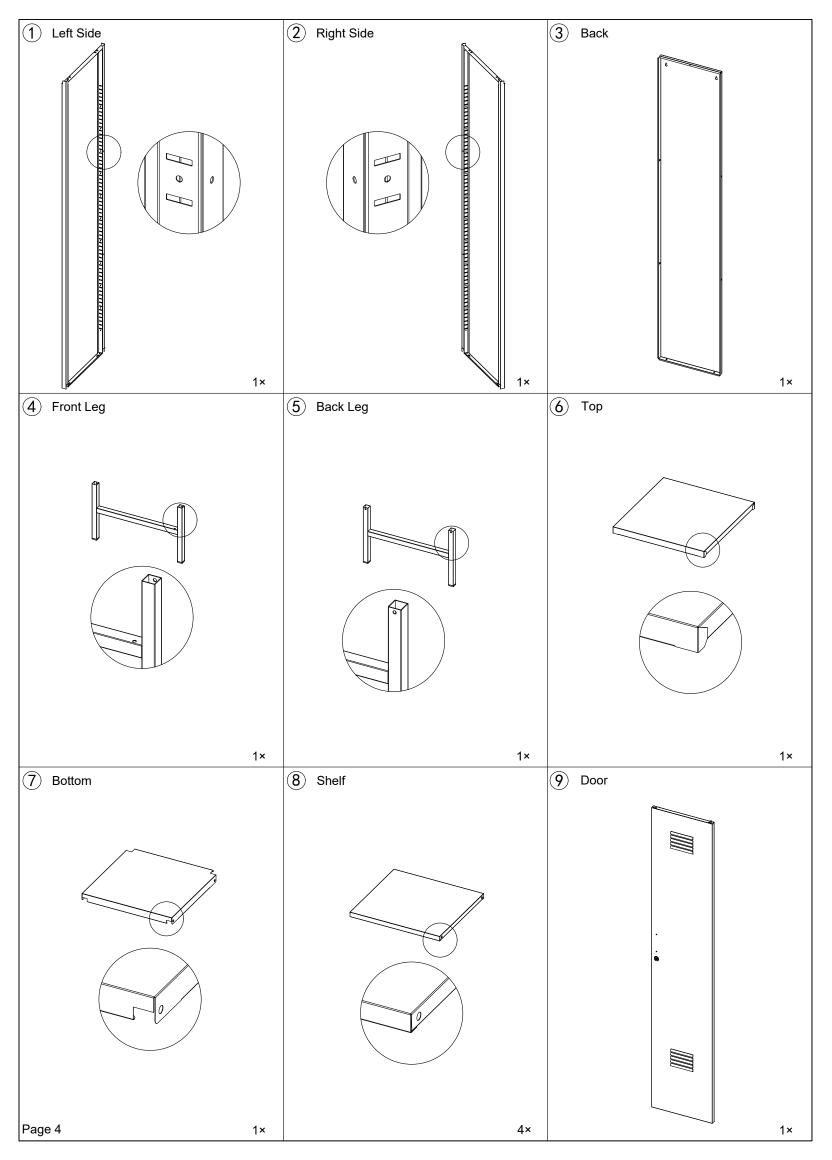

STEP 1



Fix the height-adjustable feet L on the bottom of Front Leg 4 and Back Leg 5

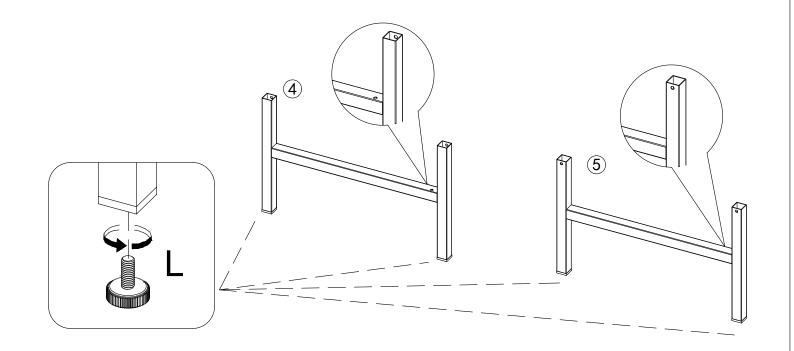



STEP 2



Fix Triangular plate D on Front Leg 4 and Back Leg 5 by Screw A




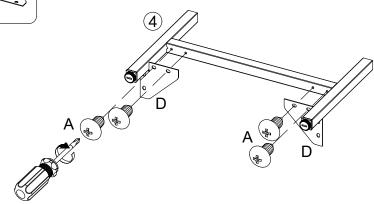

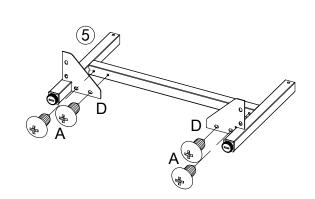


STEP 3


1- Fix Left side ① and Right Side ② into Front Leg ④ and Back Leg ⑤
2- Fix Triangular plate D with Left Side ① & Right Side ② and Front Leg ④ & Back Leg ⑤

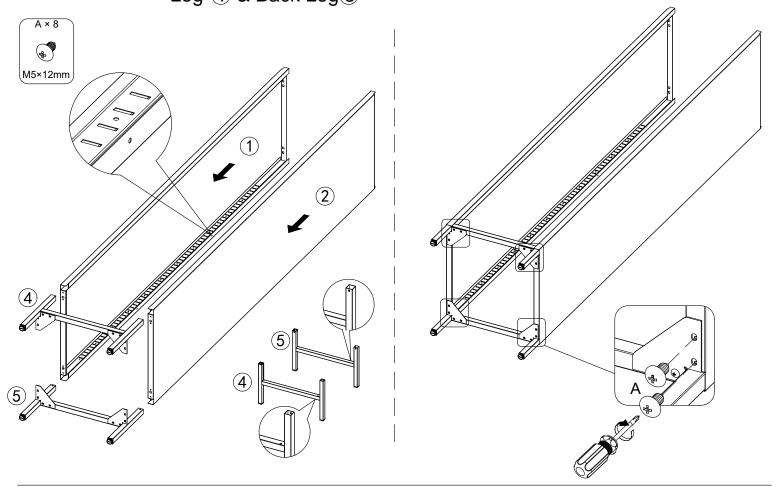


STEP 4 Fix Back 3 at the back with Left Side 1 and Right Side 2 by Screw A

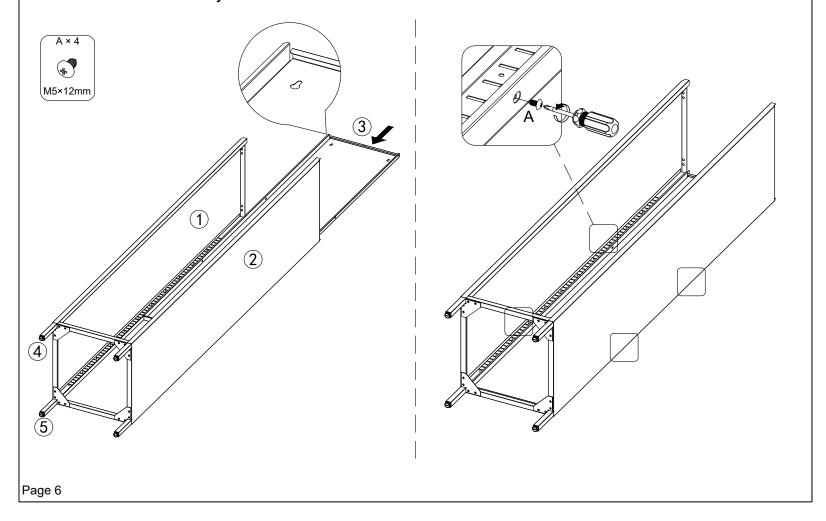

STEP 5 1- Put Top 6 at the top 2- Fix Top 6 with Left Side 1, Right Side 2 and Back 3 by Screw A 4 M5×12mm STEP 6 (6) 1 (2) 3 1- Put Part K on the Screw A at the inner top side K 2- Fix Bottom 7 in diagonal position to insert it inside the cupboard **(5)** Page 7

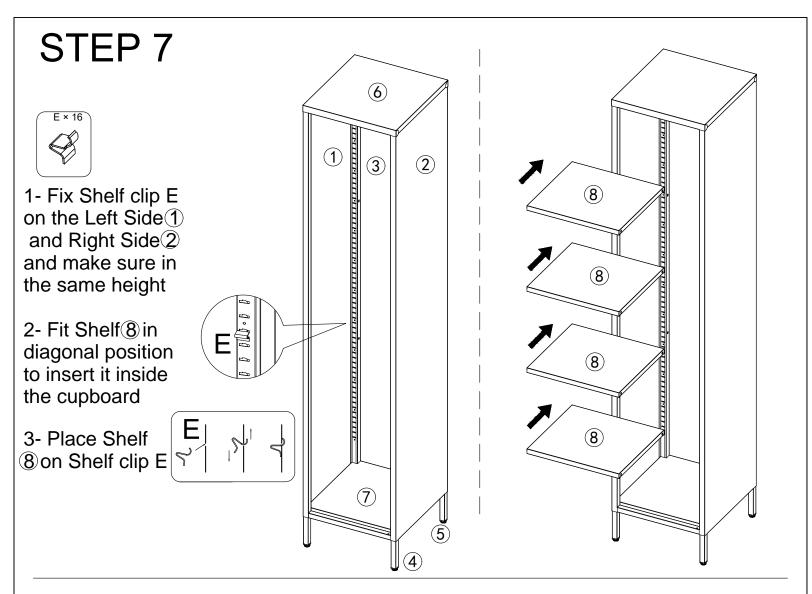



STEP 8 Fix Handle C on the door by Screw B

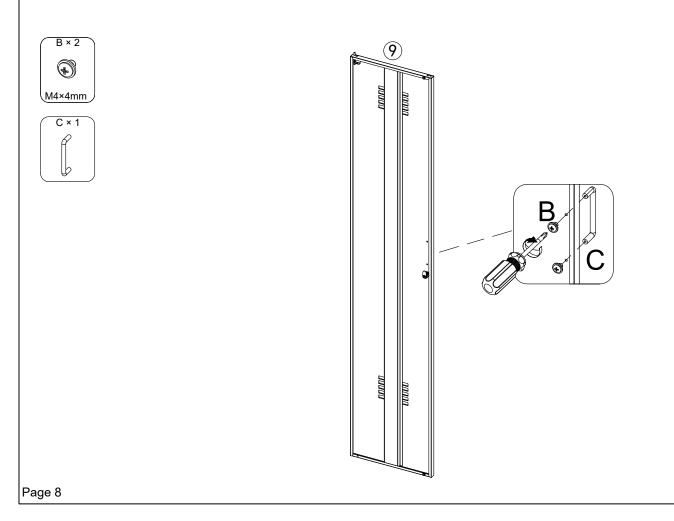

STEP 9 0 6 1- To assembly the door, fix Lower hinge bolt F of Door 9into the hole on Front Leg4 and make Gasket G between Door 9 and Lower hinge bolt F 2 - Pull the upper hinge bolt of Door 9 down, align the door and release the upper hinge bolt to fit the hole of Top® Ī [I]Page 9

  
STEP 10





Page 10

- 1- Mark the wall holes by a pencil
- 2- Drill the wall where marked on the wall
- 3- Insert Part J (plastic expansion bolt) into the holes
- 4- Use the hammer to insert part J until it overcomes the wall
- 5- Fix Screw H at the back 3 with the wall

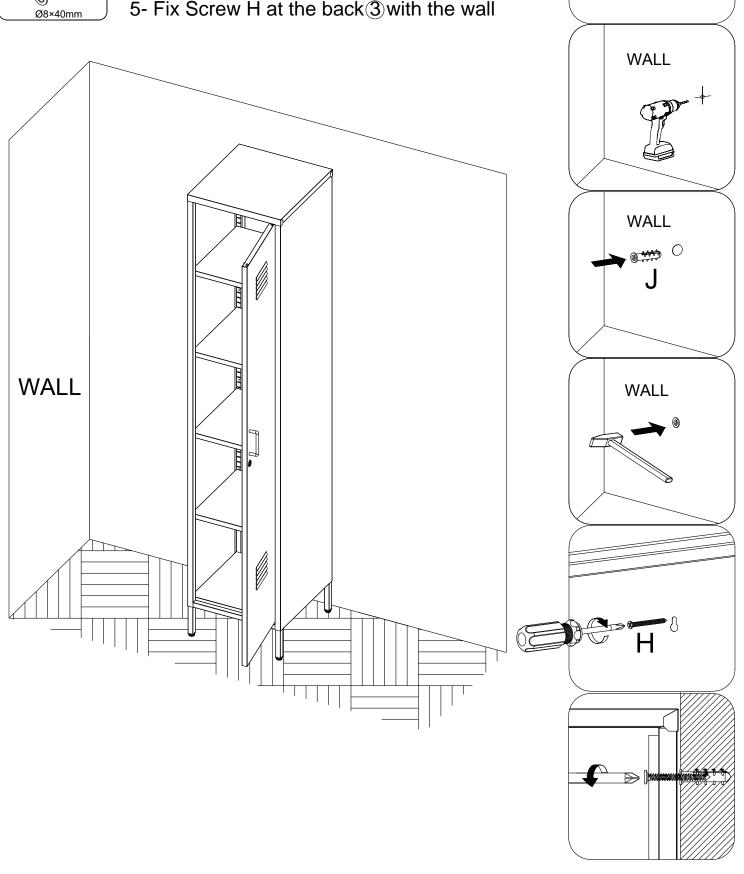



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.