



ASSEMBLY INSTRUCTION

SUNPAN

 

 



Sunpan Product Name: **ELINA DINING TABLE - ROUND - 54"**

Please visit our website www.sunpan.com for more great products

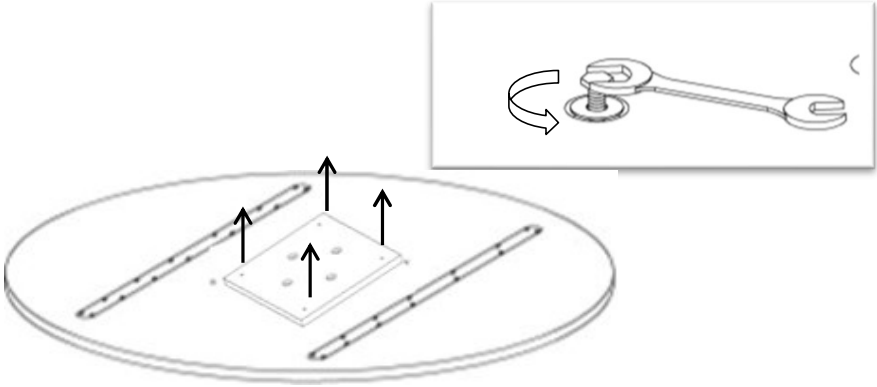
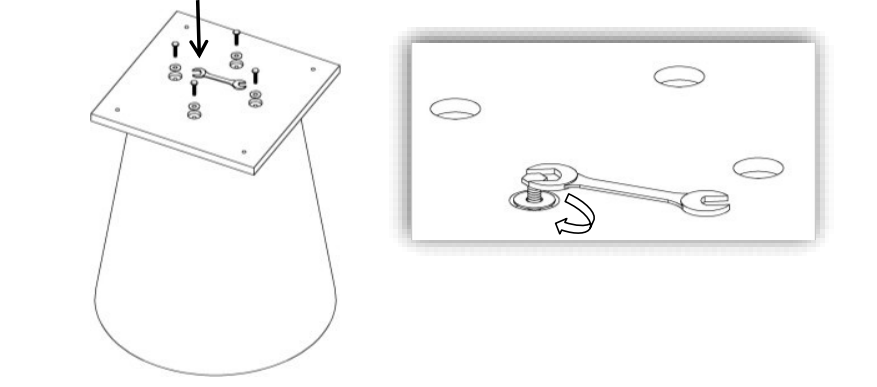
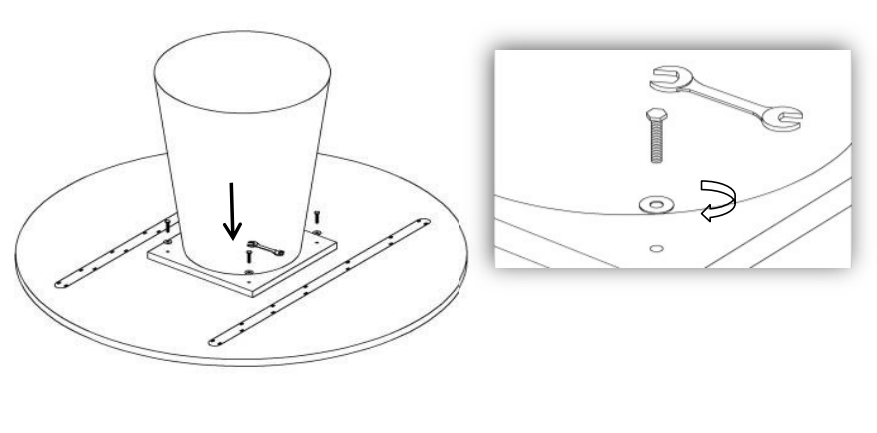
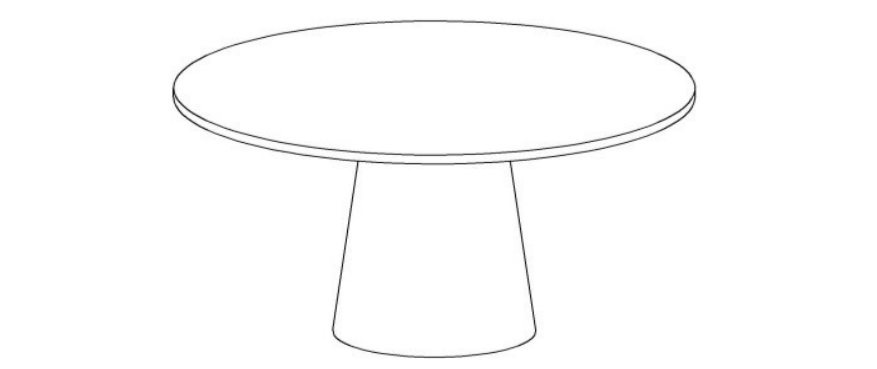
For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION
A	Top	1	
B	Base	1	
C	Base Plate (Attached to Top (A))	1	
D	Hex Bolt	8	
E	Washer	8	
F	Spanner	1	

ASSEMBLY INSTRUCTIONS

STEPS	DESCRIPTION	ILLUSTRATION
1	<p>Turn the Top (A) upside down and remove the attached Base Plate (C) by removing the Hex Bolts (D) and Washers (E) using the Spanner (F), as shown.</p>	
2	<p>Attach the Base Plate (C) to the Base (B) by screwing the Hex Bolts (D) and Washers (E) into the pre-drilled "D Nut" holes using the Spanner (F), as shown.</p>	
3	<p>Turn the Top (A) upside down and attach the Base (B) and Base Plate (C) by aligning the holes in Top (A) with the holes in the Base Plate (C). Attach using the Hex Bolts (D) and Washers (E) using the Spanner (F), as shown.</p> <p>Do not over-tighten the bolts until the Base (B) is attached to the Top (A) by aligning the holes.</p>	
4	<p>Assembly completed.</p>	

ASSEMBLY TIPS:

THERE IS RISK OF TIGHTENING THE SCREWS TOO MUCH AND DAMAGING THE TOP IF A DRILL IS USED.

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.

Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.