 




# WINE REFRIGERATOR

**Model - WR 12/16**

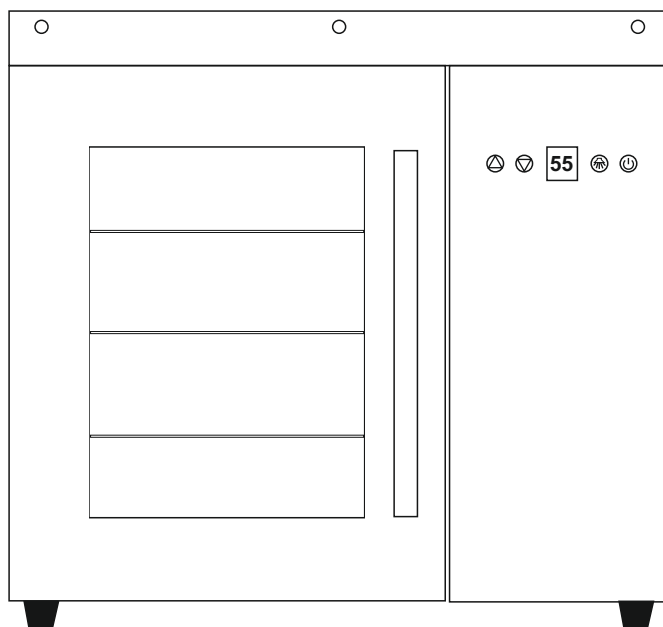

## OWNER'S MANUAL

---

Read the instructions carefully and keep for future reference



## **Warranty**

---

Equator Appliances undertakes to the consumer-owner to repair or, at our option, to replace any part of this product which proves to be defective in workmanship or material under normal personal, family or household use, in USA and Canada, for a period of one year from the date of original purchase. During this period, we will provide all labor and parts necessary to correct such defect, free of charge, if the appliance has been assembled and operated in accordance with the written instructions with the appliance.

## **Exclusions**

In no event shall Equator Appliances be liable for incidental or consequential damages or for damages resulting from external causes such as abuse, misuse, incorrect voltage or acts of God. This warranty does not cover service calls which do not involve defective workmanship or materials covered by this warranty. Accordingly, diagnosis and repair costs for a service call which does not involve defective workmanship or materials will be the responsibility of the consumer-owner.

**Specifically, the following work is not covered under warranty and does not constitute warranty work:**

**Installation - e.g. installing as built-in or  
improper installation on wall**

**Maintenance - e.g. cleaning appliance using solvents**

**Mishandling - e.g. breakage of door, door handle or shelves**

Most work is covered. The defining factor is, has the machine malfunctioned (Equator Appliances is responsible) or has the customer omitted or done something to cause the appliance to malfunction (customer is responsible). Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

## WARRANTY SERVICE

---

This warranty is given by:

### **Equator Appliances**

10216 Georgibelle Drive, Suite 900D  
Houston, Texas 77043-5249

### **For Customer Service:**

#### **Appliance Desk**

Phone/Text: 1-800-776-3538

Email: [service@ApplianceDesk.com](mailto:service@ApplianceDesk.com)

Web: [www.ApplianceDesk.com](http://www.ApplianceDesk.com)

Business hours: 9:00 am to 5:00 pm weekdays

You can register your Warranty by any of the following methods:

1. Mail in the Warranty Registration Card
2. Register online at [www.ApplianceDesk.com](http://www.ApplianceDesk.com)
3. Scan the QR Code



WR 12



WR 16

## GENERAL

---

Since it is a responsibility of the consumer-owner to establish the warranty period by verifying the original purchase date, Equator Appliances recommends that a receipt, delivery slip or some other appropriate payment record be kept for that purpose.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

*All rights reserved. Manual subject to change without notice.*

## **Safety**

Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.

Refrigerant and foaming material is flammable. Take precautions during handling, installation, and maintenance.

Ensure that the refrigerant circuit is not damaged.

Keep ventilation openings clear of obstructions.

When positioning the appliance, ensure the electrical cord is not trapped or damaged.

Do not place multiple portable socket-outlets at the rear of the appliance.

Never unplug the appliance by pulling on the power cord. Grip the plug firmly and pull straight out from wall socket.

Do not use a damaged power cord.

Do not use an extension cord.

Children should be supervised to ensure that they do not climb on or play with the appliance.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

## **Safe Disposal**

- Before discarding the refrigerator, remove doors and shelves in order to prevent risk of child entrapment.
- Dispose of this appliance in accordance with local regulations.

## **Installation**

Do not tilt the Wine Refrigerator at an angle of more than 45° when moving it.

Place the appliance away from heat and high humidity.

Confirm that feet are installed at the bottom and rear of the Wine Refrigerator. If not, please screw in 4 feet at the bottom and 2 feet at the rear.

The Wine Refrigerator can be placed freestanding on a counter top or can be mounted on the wall.

After moving the Refrigerator in place, wait at least 10 minutes before turning it on in order to allow the coolant to settle.

Check the plug and cable before you connect the power and ensure it is the correct 110 voltage.

## **Installing Door Handle**

Install the handle according to the following steps:

1. Pull out the door seal where the handle is to be installed.
2. Using the screws provided with the handle and a Phillips screwdriver, fasten the door handle.
3. Replace the door seal back in position.

## **Freestanding on Counter**

 
Place the Wine Refrigerator on a flat level surface.

The feet of the appliance can be adjusted to make it level.


## Installation on Wall

The Wine Refrigerator can be mounted on a wall using the parts that come included with the appliance.


Parts include:

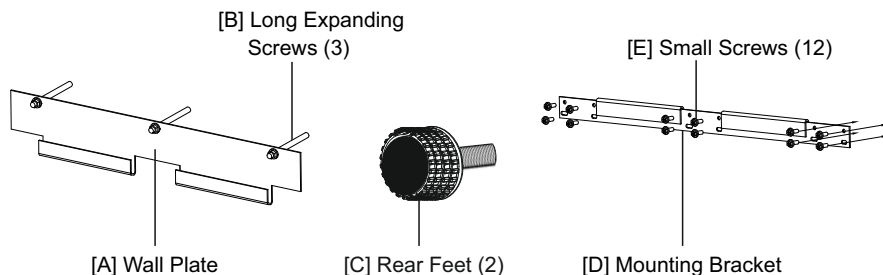

1. Attach the Wall Plate [A] to the wall with the 3 Long Expanding Screws [B] (use wrench size 9/16" (14mm)). The spacing for the screws should be 8 inches apart and must be screwed into wall studs, to make the Wine Refrigerator mount safe and secure.
2. Confirm 2 Rear Feet [C] are attached to the back on the Wine Refrigerator, or you can attach them by simply screwing them in. This will prevent damage to the wall.
3. Attach the Mounting Bracket [D] at the top back of the unit using the 12 Small Screws [E] provided (use Phillips screwdriver).
4. Holding the Wine Refrigerator firmly, slide the Mounting Bracket onto the wide hooks at the front of the Wall Plate.
5. Verify that the Wine Refrigerator is parallel against the wall and not tilted. Adjust Rear Feet as required. Ensure that the Mounting Bracket is installed firmly and not shaking.
6. Wait at least 10 minutes before turning on the Wine Refrigerator.

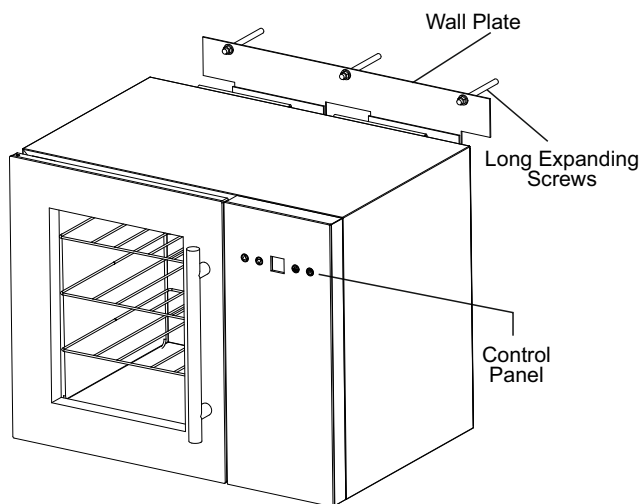 

Front View

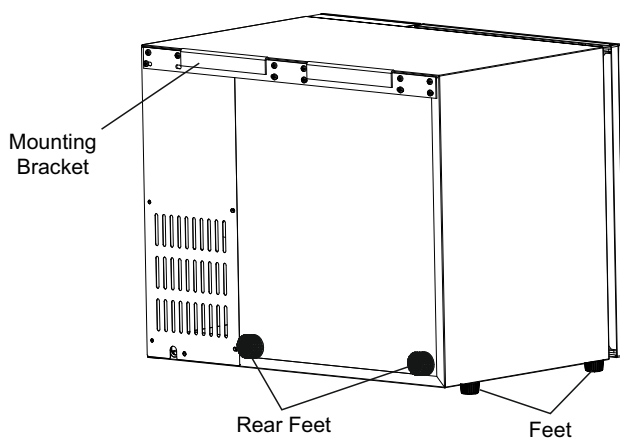 

Back View



## Temperature Setting

The Control Panel is located in the front of Wine Refrigerator. The temperature can be set as shown below.



Increase  
Temperature



Lower  
Temperature



Temperature  
Display



Light  
On/Off



Power  
On/Off

Press the Power ON/OFF button to turn the appliance on.

Press the Light ON/OFF button to turn on the LED light inside the Wine Refrigerator.

The appliance should be placed in a room with ambient temperature.

The temperature range of the appliance is 41°F-72°F (5°C-22°C).

Increase or decrease the temperature by pressing the Up and Down arrows.

Pressing the Up and Down temperature arrows for 5 seconds at the same time will change the temperature between °C & °F.

## Maintenance

Make sure the power cord is unplugged before moving or cleaning the back of the appliance.

Clean the outside and inside of the appliance regularly, using water and mild detergent.

## Troubleshooting

<b>Problem</b>	<b>Possible Cause and Solution</b>
<b>Not Working</b>	<ul style="list-style-type: none"><li>• Check the fuse</li><li>• Check if it is plugged in correctly to the power source.</li></ul>
<b>Not Cooling</b>	<ul style="list-style-type: none"><li>• Temperature is not set correctly. Adjust the temperature.</li><li>• Move it if near a heat source or in direct sunlight.</li><li>• Check for proper ventilation and that air inlet or outlet is not blocked.</li><li>• Door opened frequently or is not shut properly.</li><li>• Door seal is damaged.</li><li>• Too many bottles stored on the same shelf.</li></ul>
<b>Too much noise</b>	<ul style="list-style-type: none"><li>• Appliance not placed on flat surface or not level. Adjust the feet to level it.</li><li>• Some parts are loose causing rattling.</li></ul>
<b>Door does not close properly</b>	<ul style="list-style-type: none"><li>• Check the door seal.</li><li>• Shelves are not positioned properly. Adjust the shelves.</li></ul>

The following phenomenon is normal:

- Moisture on the glass door – wipe with dry cloth
- Sound of fluid is the compressor when it is starting or stopping
- Flowing sound of refrigerant in the refrigeration system
- Condensation forming inside the cabinet – wipe with dry cloth

## Technical Specifications for WR 12

Model	WR 12
Capacity	12 Bottles (1.2 cu.ft)
Voltage	115V 60Hz
Current	0.8A
Power	60W
Refrigerant	R600a
Temperature Range	41° F - 72° F
Net Weight	53 lbs
Product Dimensions (HxWxD)	18.1 x 21.9 x 15 (inch)
Packaging Dimensions (HxWxD)	21 x 25 x 18 (inch)

## Technical Specifications for WR 16

Model	WR 16
Capacity	16 Bottles (1.4 cu.ft)
Voltage	115V 60Hz
Current	0.8A
Power	60W
Refrigerant	R600a
Temperature Range	41° F - 72° F
Net Weight	61.7 lbs
Product Dimensions (HxWxD)	18.1 x 27.3 x 15 (inch)
Packaging Dimensions (HxWxD)	21 x 30 x 18 (inch)

## California Proposition 65

WARNING: This product contains chemical known to the State of California to cause cancer and birth defects or other reproductive harm.

