




# **ANDOVER / JEFFERSON / VERONA**


# DINING CHAIR

# MODEL # AXCDCHR-004-SGL

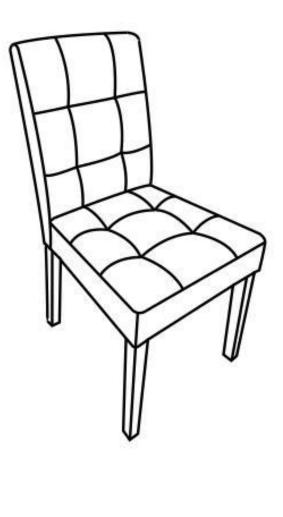

# **PRE-ASSEMBLY INFORMATION**


#### PARTS DESCRIPTION

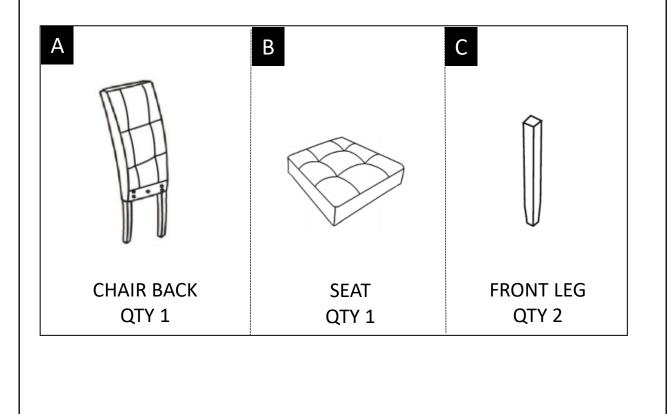

**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

### **PRE-ASSEMBLY INFORMATION**


#### HARDWARE DESCRIPTION

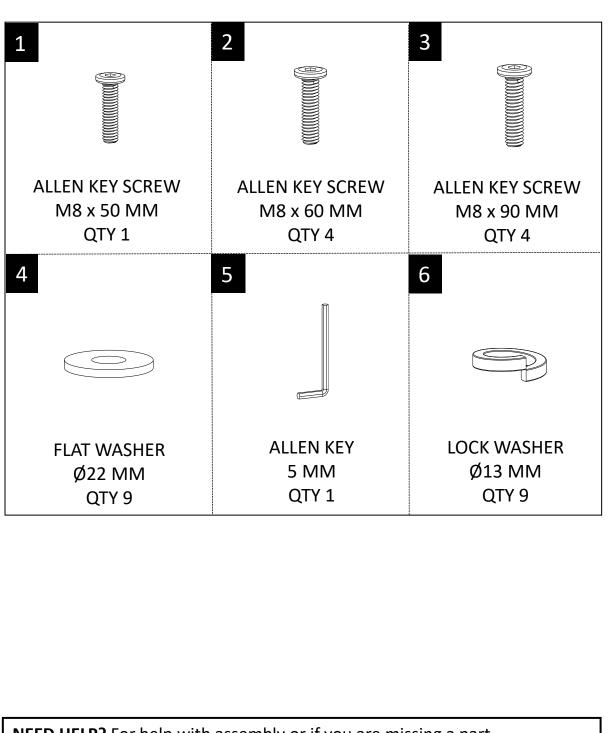


**NEED HELP?** For help with assembly or if you are missing a part, Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

### ASSEMBLY

#### **STEP 1**

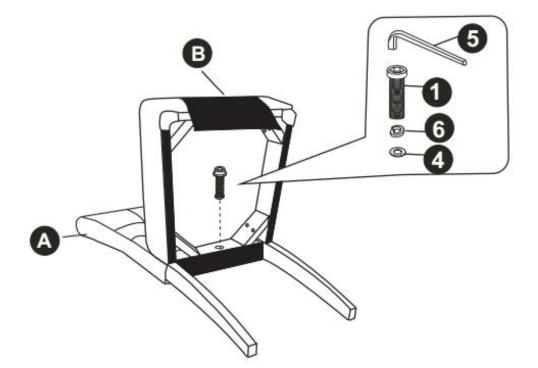


Align Seat (B) into pre-drilled holes on Chair Back (A). Attach Seat (B) to Chair Back (A) using Allen Key Screw (1) and one Washer each of (4) and (6). Use Allen Key (5) to tighten. Do not over-tighten.

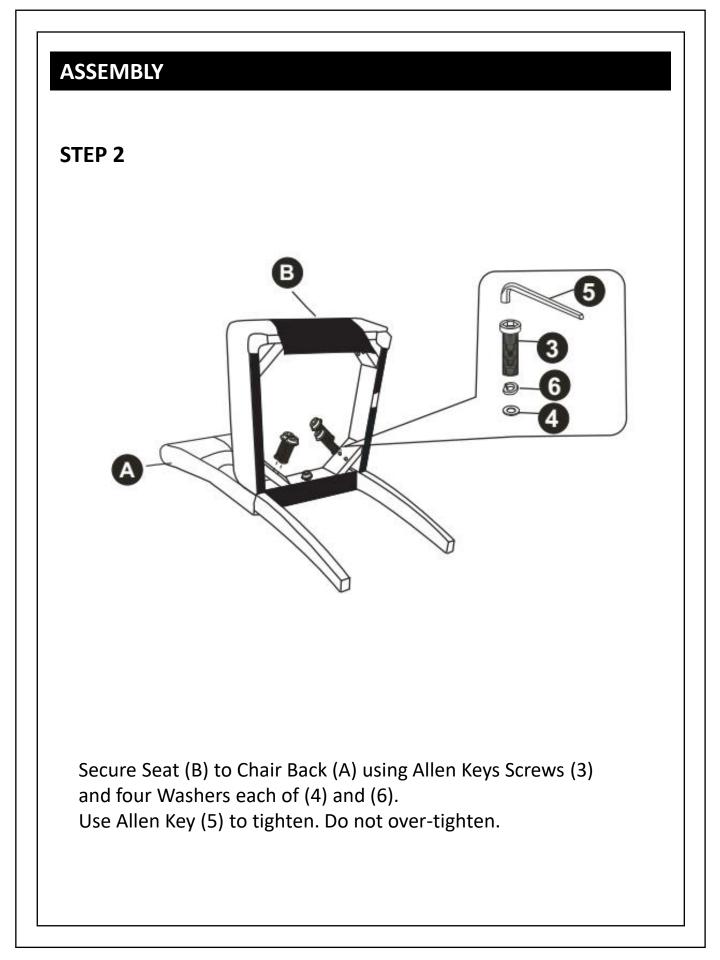

# ASSEMBLY

**STEP 3** 

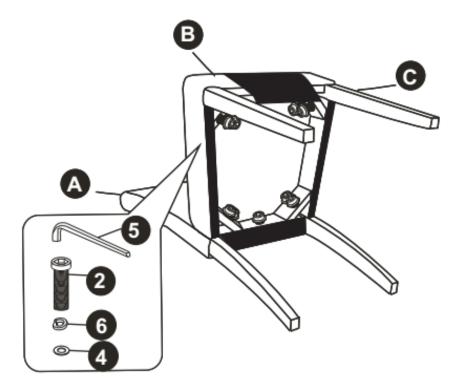

Attach Front Legs (C) to Seat (B) using Allen Keys Screws (2) and four Washers each of (4) and (6). Use Allen Key (5) to tighten. Do not over-tighten.

# ASSEMBLY

**STEP 4** 



Place Chair on a flat level surface to ensure it is level. If it is uneven, adjust either the Seat (B) or Front Legs (C). Ensure the Chair is level and then fully tighten all bolts.

