This image shows a Triple Valve with Diverter (3 outlet options).

The ¼ turn diverter can send water to a choice of two outlets, shown here with a Shower Head and Arm and a Slide Rail Shower Kit. The water does not flow from both outlets at the same time. Select either outlet 1, outlet 2 or 'off'.

The lower ¼ turn handle controls the water to the third outlet, shown here with a Freeflow Tub Filler. The water can flow to both the Tub Filler and the diverter at the same time. Please note: using two functions simultaneously may reduce the water flow to both outlets.



