

# CHD2461


## ASSEMBLY & INSTALLATION GUIDE

**WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.**

**WARNING \*\*\* SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

**INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.**

**ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.**

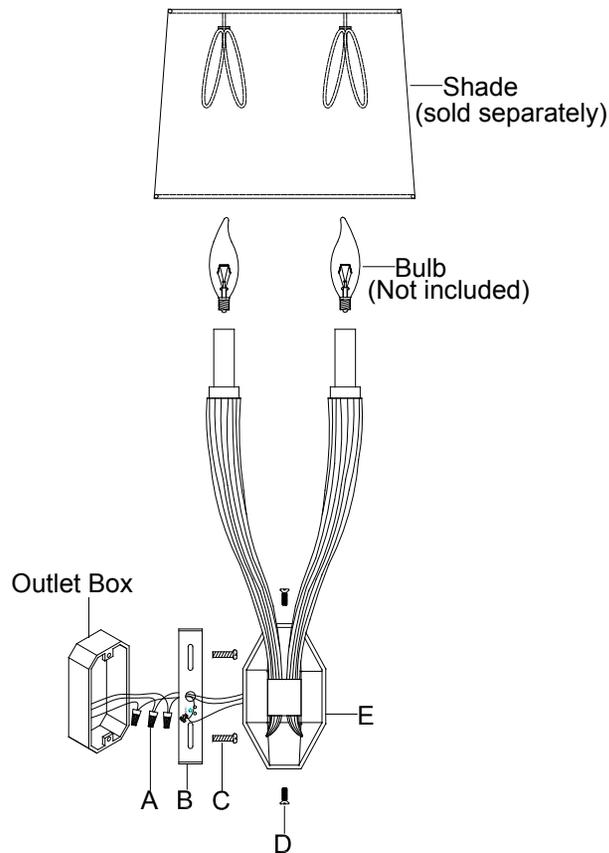

1. Carefully remove the crossbar (B) from the back plate(E) by removing side screws(D).
2. Secure the crossbar (B) to the outlet box in your wall using the two mounting screws(C).
3. Attach the ground wire from the fixture to the ground wire from the building using the provided wire nut(A).  
If your house has no ground wire attach this wire to the green grounding screw inside the outlet box.
4. IT IS IMPERATIVE THAT THIS FIXTURE BE GROUNDED.
5. Attach the common wire (ribbed, no words) from the fixture to the white wire from the building using the provided wire nut(A).
6. Attach the hot wire (smooth, with words) from the fixture to the black wire from the building with the provided wire nut(A). Secure each connection by tightening and then checking that no wires can be pulled out.
7. IT IS IMPERATIVE THAT YOU NOT MIX THESE WIRES.
8. Carefully tuck the wires inside the outlet box.
9. Secure back plate(E) into crossbar (B) by using side screws(D).
10. Insert light bulbs (not included) into sockets.
11. Clip shade (sold separately) on the light bulbs.
12. Restore power and enjoy your new fixture.