


Thank You for purchasing this Quality product. It has A been engineered for easy assembly yet constructed for durability. Please take the time to read and follow the instruction while assembling.

# ASSEMBLY INSTRUCTION

EAST LAND DINING CHAIR FABRIC 20" x 25  $\frac{1}{4}$ " x 40  $\frac{1}{2}$ "(H)

Model :DLU-EL-C90-AG-RTA (C 1618)

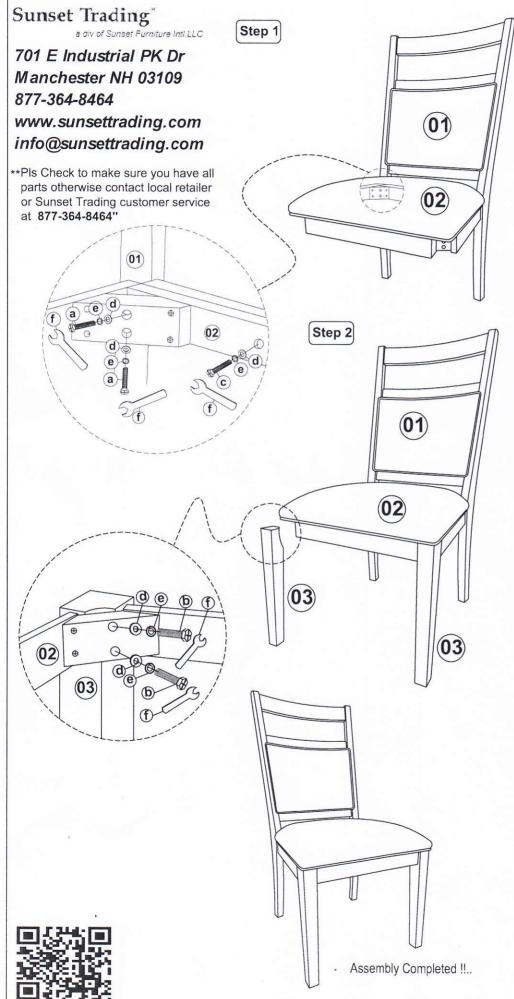

# List of Part For 1 SetCodeFigurePartQty.01Image: Seat102Seat103Front Leg2

## List of hardware For 1 Set

Code	Figure	Hardware	Qty
<b>a</b>		Hex.Bolt M6 x 80mm	4
<b>b</b>		Hex.Bolt M6 x 60mm	4
C		Hex.Bolt M6 x 40mm	2
d	0	Flat Washer $\frac{1}{4}$ " x 18 mm	10
<b>e</b>	Ø	Spring Washer $\frac{1}{4}$ "	10
f	5	Spanner 10 mm	1

# Important Notes

- \* Keep all hardware parts out of reach of children.
- Must tighten screws periodically.With use screws will become loose.Check tightness of all screws every 6-8 weeks.
- \* Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediatedly.
- \* Do not tighten all screw / bolt until all completely assembled.

### Notes

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- \* Check to be sure that you have all parts and hardware.
- Remove all wrapping materials including staples & packing straps before you start to assemble.
- \* Do not tighten all screws / bolts until all completely assembled.

Care And Maintenance

- The Touch of a soft cloth is all the maintenance your wood pieces will ever need.
- Never use harsh chemicals or abrasive cleaner as they could mark or destroy finish.