

ITEM #: RV-W1324432 / RV-W1324433



IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com

Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085


INSTALLATION INSTRUCTIONS







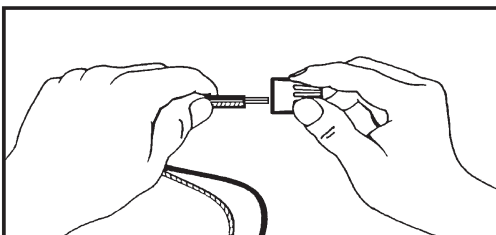

1. Measure Backplate (E) height on the fixture body with measuring tape. Adjust Nipple (D) on Mounting Plate (A) to the height of measured backplate plus 1/4" to allow it to protrude through Backplate (E) during installation. Lock Nipple (D) in place with the hex nut.
2. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided.
3. Place Backplate (E) against the wall by inserting Nipple (D) through the appropriate hole located on Backplate (E). Adjust Nipple (D) and hex nut until 1/4" of the threaded portion is visible. Remove the fixture from the wall.
Note: If 1/4" of Nipple (D) is not visible, remove Backplate (E) and re-adjust Nipple (D) to proper length and lock it in place with the hex nut.
4. Lower Socket (I) into Shade (K).
5. Remove Ball Knobs (M) and Ball Screws (N) from Brackets (L). Place Brackets (L) around the indentation on each side of Shade (K) by aligning the holes on each end of Bracket (L) with holes at the end of each Arm (J).
6. Insert Ball Screws (N) through holes on Brackets (L) and Arms (J).

7. Thread and tighten Ball Knobs (M) onto the end of Ball Screws (N) to secure Brackets (L).

Note: Bending the tabs on each Bracket (L) to sit parallel with Arms (J) allows for easier assembly. Use pliers and a towel to avoid damaging the fixture.

8. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (C).



| Connect to BLACK house wire | Connect to WHITE house wire |
|--|---|
| BLACK  | WHITE  |
| PARALLEL WIRE (ROUND & SMOOTH)  | PARALLEL WIRE (RIBBED / RIDGED)  |
| WHITE OR GREY WITH TRACER  | WHITE OR GREY WITHOUT TRACER  |
| BROWN, GOLD OR BLACK WITHOUT TRACER  | BROWN, GOLD OR BLACK WITH TRACER  |

A. Connect the ground wire (bare copper or green) from your fixture to the:

- 1) ground wire in the junction box, or
- 2) ground screw in the junction box

B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).

C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

9. Place all wires and Wire Connectors (C) back into the junction box.

10. Place Backplate (E) against the wall, ensuring Nipple (D) is protruding through the hole in Backplate (E). Secure the fixture in place to Mounting Plate (A) with Decorative Cap (F).

Note: If fixture doesn't sit flush against ceiling, remove fixture readjust Nipple (D) and hex nut.

11. Install light bulb (not included) into Socket (I).

Enjoy your new fixture!



ITEM #: RV-W1324432 / RV-W1324433 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Ladder, Measuring Tape

