

## Installation & Assembly

- Place the fountain on a level surface, away from areas where it is likely to get clogged with leaves and make sure that the cable will reach the socket.
- Follow steps to assemble as below illustration marks.

Figure'1-6'

Step (1). Connect the big plate and pedestal tightly as arrowheads indicates.

Figure'2-6'

Step (2). Get the wire of pump through plastic pipe of big plate centre. Make sure the wire put into the bottom cavity of big plate.

Figure'3-6'

Step(3).Connect the medium pillar and big plate tightly as arrowheads indicates.

Figure'4-6'

Step (4).Screw the medium plate and medium pillar tightly as arrowheads indicate.

Figure'5-6'

Step(5). Put the plastic hoses into the plastic pipe of medium plate centre then connect top part and medium plate tightly as arrowheads indicate.

Figure'6-6'

Step(6)、(7) and (8) .Please close the small door to the medium pillar, then fill the big plate with enough clean water to assure the pump to work properly. Plug the pump, water will start to flow in a minutes.

- Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high or the reservoir is too full. The flow rate can be increased or decreased by moving the flow rate control slider on the pump body. Moving the switch towards '+/ Max.' will increase the flow rate and moving it towards '-/Min' will decrease it.  
On some type of pumps, flow regulator may be turned clockwise or anticlockwise to adjust.

