

Installation Instruction


Concealed Thermostatic Shower Mixer (3-way)



Item No.: **AB4001**


Component check:


- 1. List of components for checking reference.
- 2. Image of product for reference only.

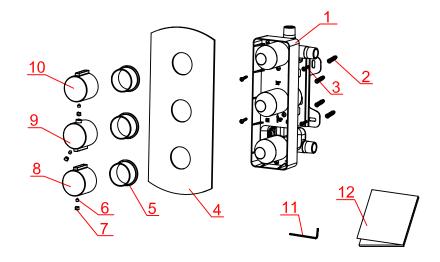

List of Components	Qty.	List of Components	Qty.	List of Components	Qty.
1.Rough-in body 2.Swelling Plastic Button 3.Tapping screw 4.Plate	1 4 4 1	5.Decorative cover 6.Screw 7.Decorative plug 8.Volumn handle	3 3 3 1	9.Temperature handle 10.Diverter handle 11.Allen wrench 12.Manual	1 1 1

X Basic Dimensions

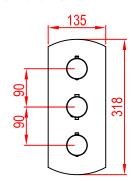

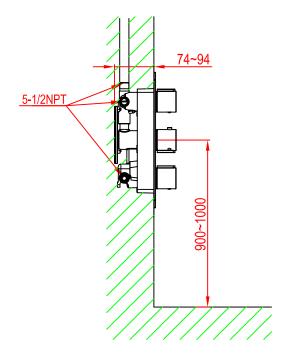


Specification


- 1. Applicable inlet water pressure: 0.03-0.6MPa, better to be 0.1-0.5MPa, pressure differencen between hot and cold water is: 0.6MPa.
- 2. Temperature of supplying water; hot water to be 50°CC-80°C, cold water to be 5°C-25°C.
- 3. Mixing water temperature can be adjusted from 38°C to 49°C with ± 2 °C.
- 4. With 38°C safty lock button.
- 5. With automatic shut-off in case of short-supply of cold water.

- Supplying pipes checking
 When turning the mixer off, test tightness of parts before cartridge by adding water pressure up to 1.6Mpa±0.05Mpa.
- ? When turning the mixer on stop the outlets and test tightness of parts after cartrodge by adding water pressure up to 0.4Mpa±0.02Mpa.


? Important


- 1. Applicable Pressure: 0.3-0.6MPa (Water container shall be 3 meters haigher). If supplying water pressure is beyond above range. compression or decompression is necessary.
- 2. Flush the water supplying pipes before installation of this concealed mixer.
- 3. Connect this concealed shower mixer to hot/cold water supplying correctly, if facing at the front, left to hot water and right to cold water.
- 4. The temperature of hot water supplying shall not be higher than 80°C, otherwise, thermostatic cartrige may be destroyed.
- 5, Do not use glue when connecting this concealed shower mixer to hot/cald water supplying pipes, Check tightness of every joints after installation.
- 6, Wash the filters periodically (once for 6-12 months).
- 7, Please do not use spare parts from other manufacturers for any replacement.
- 8, Product warranty is 12 months under proper installation and maintenance.

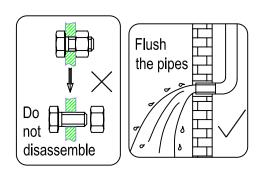


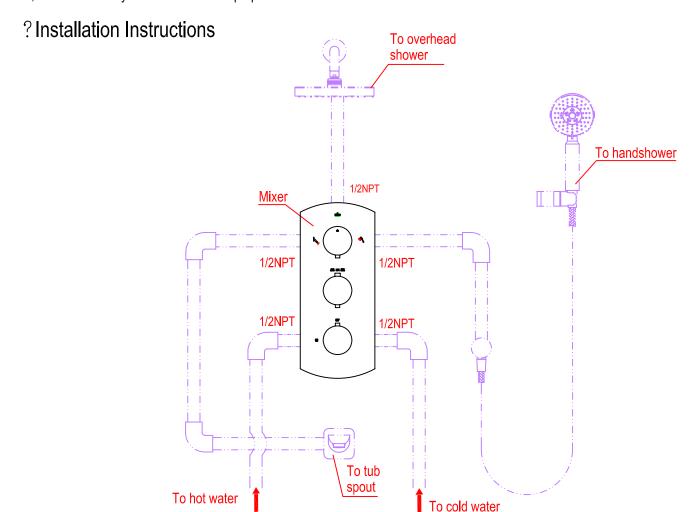

X Installation procedures

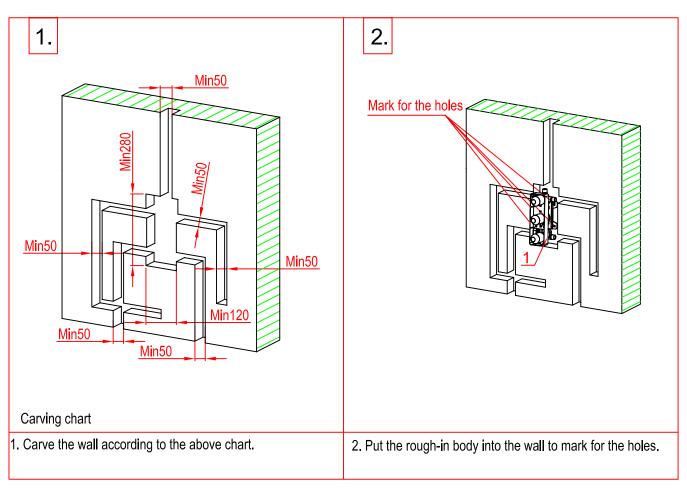

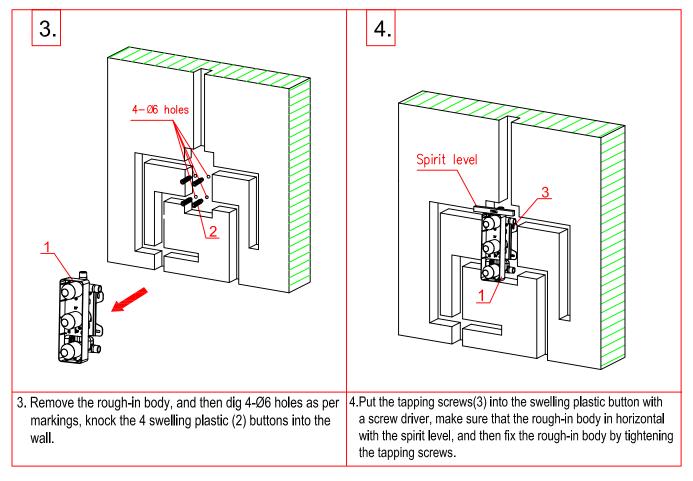

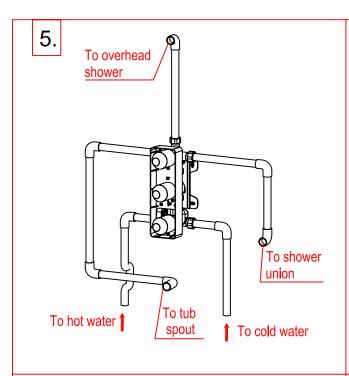


Tiling surfac shall not exceedthe upper edge of the installation box.


 Connect the rough-in body to water supplying pipes according to above drawings, ensure no leakage of all pipes.
 Testing pressure:

When turn mixer on, test water supplying pipes and mixer at pressure ≤0.4MPa.


6. Tiling the wall, max. tiling thickness:17~38mm,Tiling shall not exceed the upper edge of the installation box.

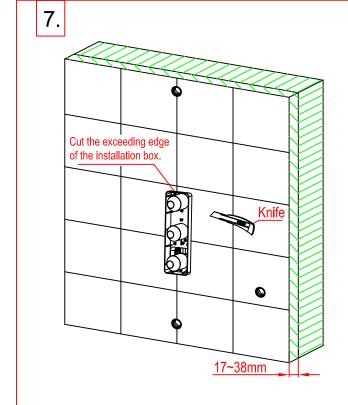

7.In case of exceeding of the installation box from the tiling wall, cut it to install the covering plate.

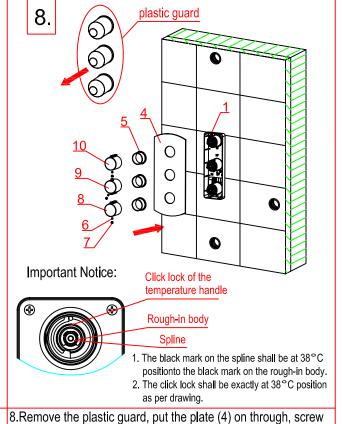


the 3 covers (5) onto the rough-in body, and also the 3 handles (10, 9 and 8) on. Fix the 3 handles after adjusting to the right position, and then put the decorative plugs (7) on.

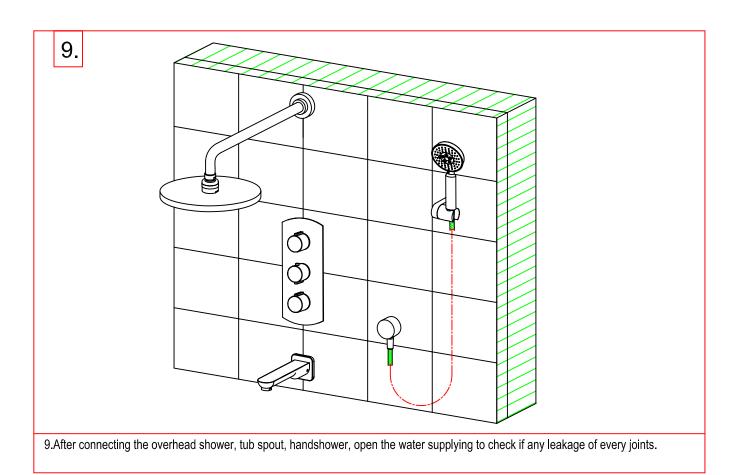


? Operation:

- ? Operation of the volume handle: Turn anti-clockwise to open water, clockwise to off.
- ? Operation of temperature handle: Temperature set at 38°C position, turn anti-clockwise for warmer water, otherwise for less warmer water.

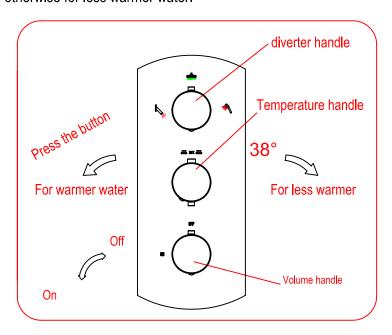

- ? Operation of diverter handle as per indications:
 - 1) Rotate to the left for spout outlet;
 - 2) Rotate to up position for overhead shower outlet;
 - 3) Rotate to the right for handshower outlet.

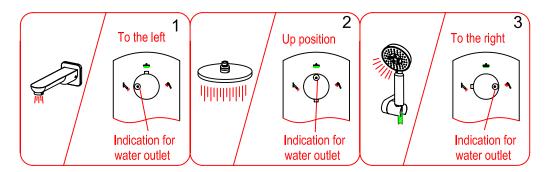

X Maintenance:

- ? To keep the product clean & shining, follow the steps as below:
 - 1. Wash with clean water & dry with soft cloth only;
 - 2. Clean with soft liquid or glass detergent.
 - 3. Do not wash with any abrasives or tile cleaner.
 - 4, Do not wash with any acid or grain detergent or soap



X This installation manual is for reference only, and subject to change with further notice.