




 
 
 



106452-ZUMA COFFEE TABLE

Please visit our website www.sunpan.com for more great products.


For assembly questions please call 1-800-787-1019 (or +1-416-736-0094) outside North America or email to info@sunpan.com

Hardware List			
No	Description	Figure	Q'TY
1	Allen key M4		1
2	Hexagon Bolt M6x15		30
3	Washer M6x16x1.5		6
Part List			
1	 GRC top		1
2	 Glass top		1
3			3
4			1
5			1

 
Step 1 :

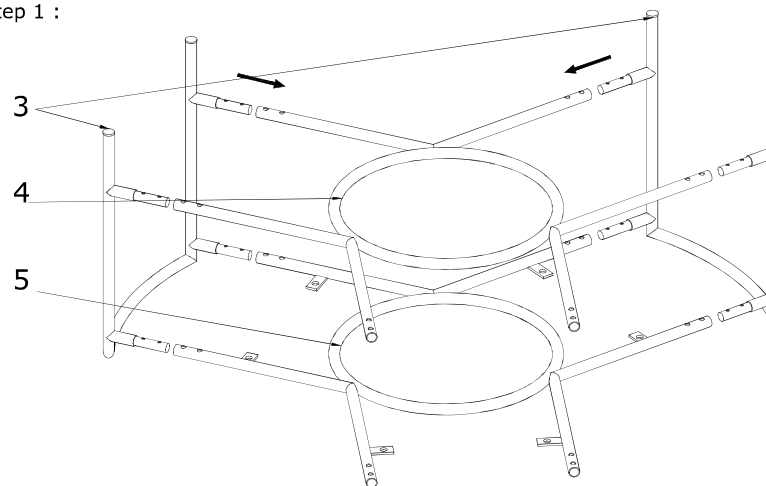

 
Step 2 :

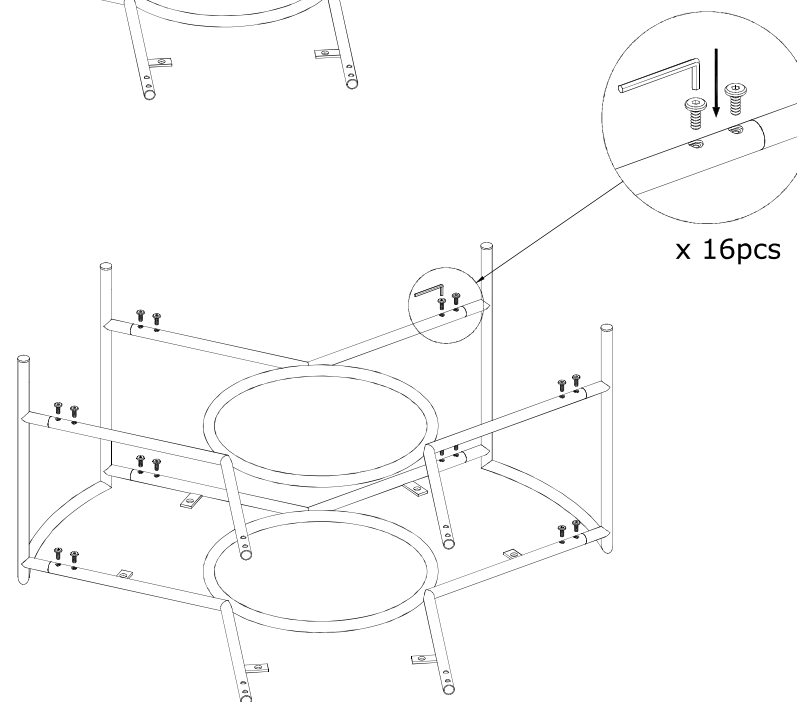

 
Step 3 :

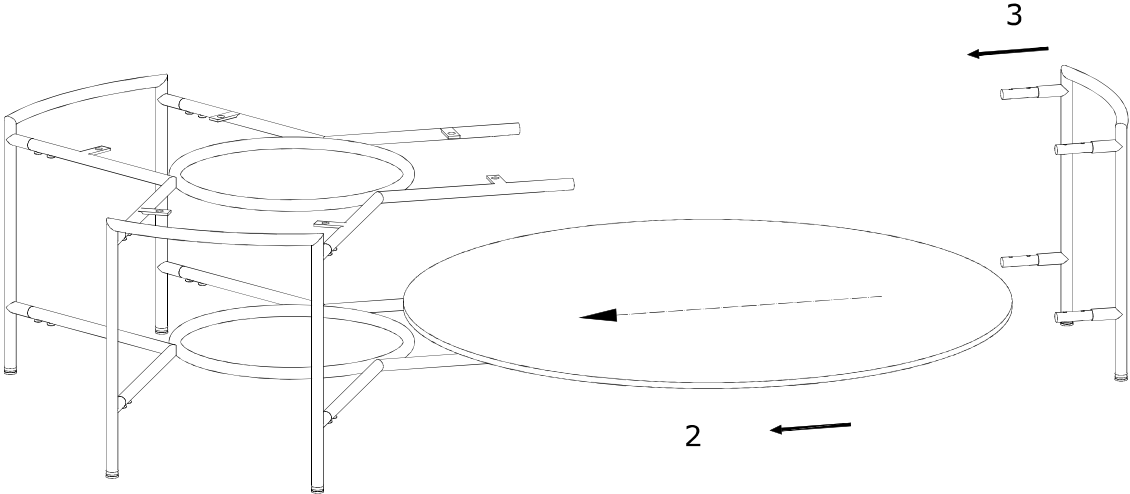

 
Step 4 :

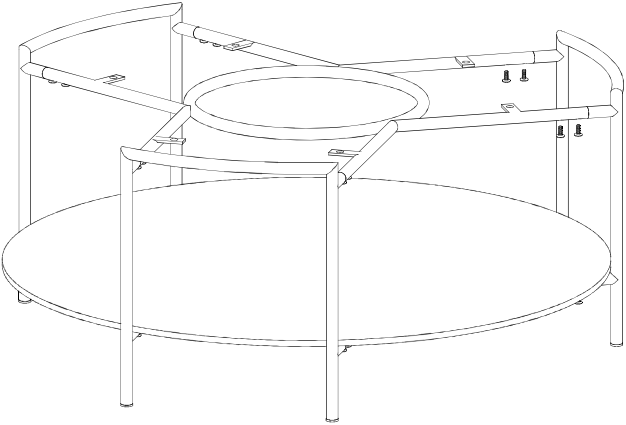


 
Step 5 :

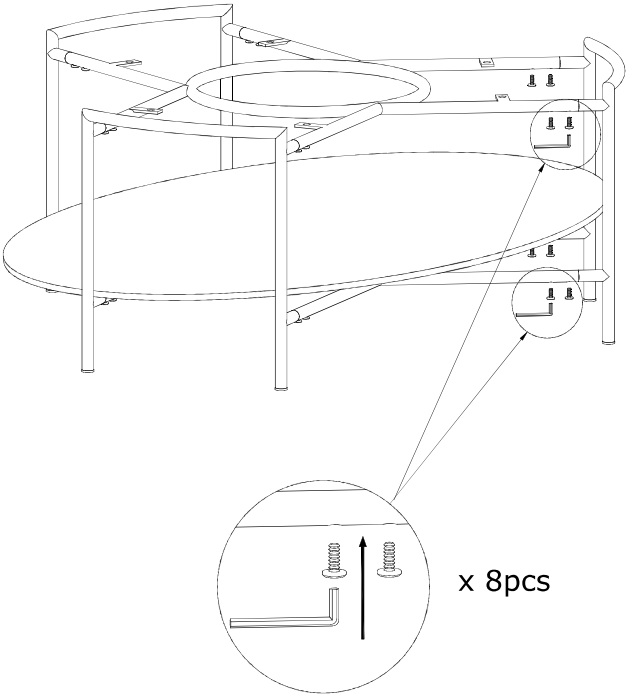

 Step 6 :

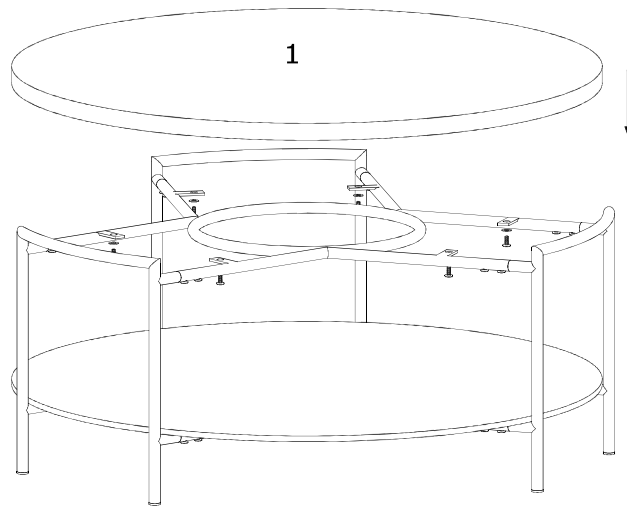


  Step 7 :

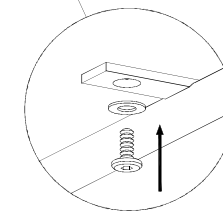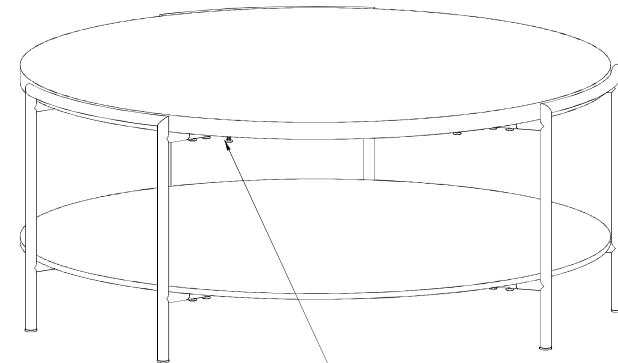

x 6pcs
(washers + bolts)

 Step 8 :

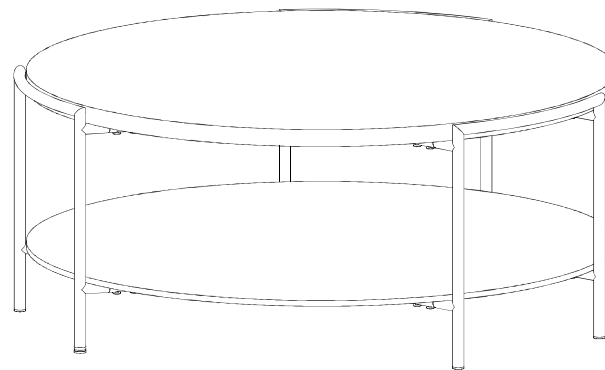

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.
Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.