






TRANSFORMING X TABLE

ASSEMBLY INSTRUCTIONS



PARTS LIST		
A		TABLE (x1)
B		HANDLE (x1)
C		SPRING (x1)
D		NUT (x1)
E		ALLEN WRENCH (x1)



STEP 1

Lift and remove the table (A) from the carton. Locate the parts bag containing parts B, C, D, and E.

WARNING: Two people are required. Do not lift by the table top alone, or by the legs alone. Make sure to hold the metal legs and the table top securely when removing from the carton.



PRODUCT WARRANTY

Corner Housewares offers replacement of items and parts with factory defects within one year of dated sales receipt. Customers may call toll free: (866) 304-3936 or email returns@cornerhousewares.com



STEP 2


Attach handle (B), facing left, to table (A).



WARNING: Make sure the table (A) is upright, with the table on top and all four wheels touching the ground, before continuing to Step 3. Unlocking the handle with the wheels facing up can be hazardous.


STEP 3

With the wheels on the ground, turn handle (B) counter clock-wise to loosen the leg lock. You may now raise the table height. If one turn is not enough, remove the handle and repeat step 2 and 3 until table will rise.

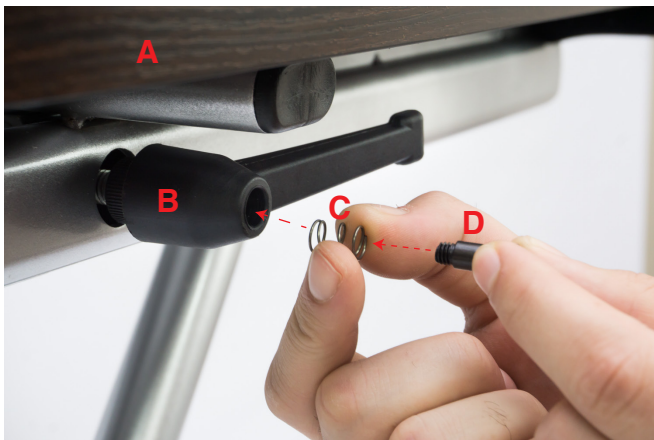

STEP 4

Attach handle (B) permanently by putting the nut (D) through the spring (C), and into the handle as shown. Tighten with allen wrench (E).

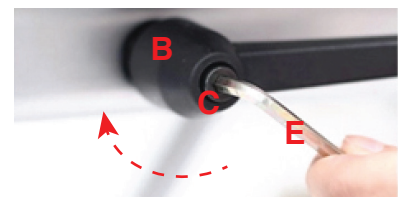

NOTES FOR USE:

Changing table height: Turn handle (B) counter-clockwise to unlock. Once unlocked, move table up or down. When at desired height, turn handle (B) clockwise to lock height position.

Expanding the table top: Press the button on the lock underneath the table top to unlock table top rotation, then rotate the table top 90 degrees. Flip open the table top, and re-engage the table top lock. Reverse this process to return to the smaller table size.

Always lock the wheels when not in transit, using the wheel locking switches.