## ANDREW MARTIN ASHTON RECTANGLE DINING TABLE

Thank you for choosing this quality product. Be sure to check all packaging materials carefully for small parts that may have become loose during shipment and place all parts on a non-abrasive surface.

**IMPORTANT** : These parts can be cumbersome and heavy to some people, therefore the assistance of two or more people is recommended in order to prevent personal injury and insure the furniture is not damaged during the assembly Process.

## PART LIST

A [1] TOP FRAME B [2] BASE C [2] LEAVES

## HARDWARE LIST

NO	ITEM	DESCRIPTION	QTY.
1	-	Allen Bolt	16 pcs.
2		Lock Washer	16 pcs.
3	0	Flat Washer	16 pcs.
4	(	Allen Wrench	1 pc.

## ASSEMBLY INSTRUCTIONS

1. On a plain and non-abrasive surface gently turn the top frame (A) upside down.

- 2. Under the top frame (A) are holes for the bolt to pass through that corresponds to the holes of the base (B). Align and insert Allen bolt (1) together with lock washer (2) and flat washer (3), Tighten all the bolts by using Allen wrench (4). See **FIGURE 01**.
- 3. After assembly, gently lift the table into upright position
- 4. Pull out the table top and set the leaves (C) on the table. Close the table top. See **FIGURE 02**.

5. Assembly is complete.

