 


Model: TV010

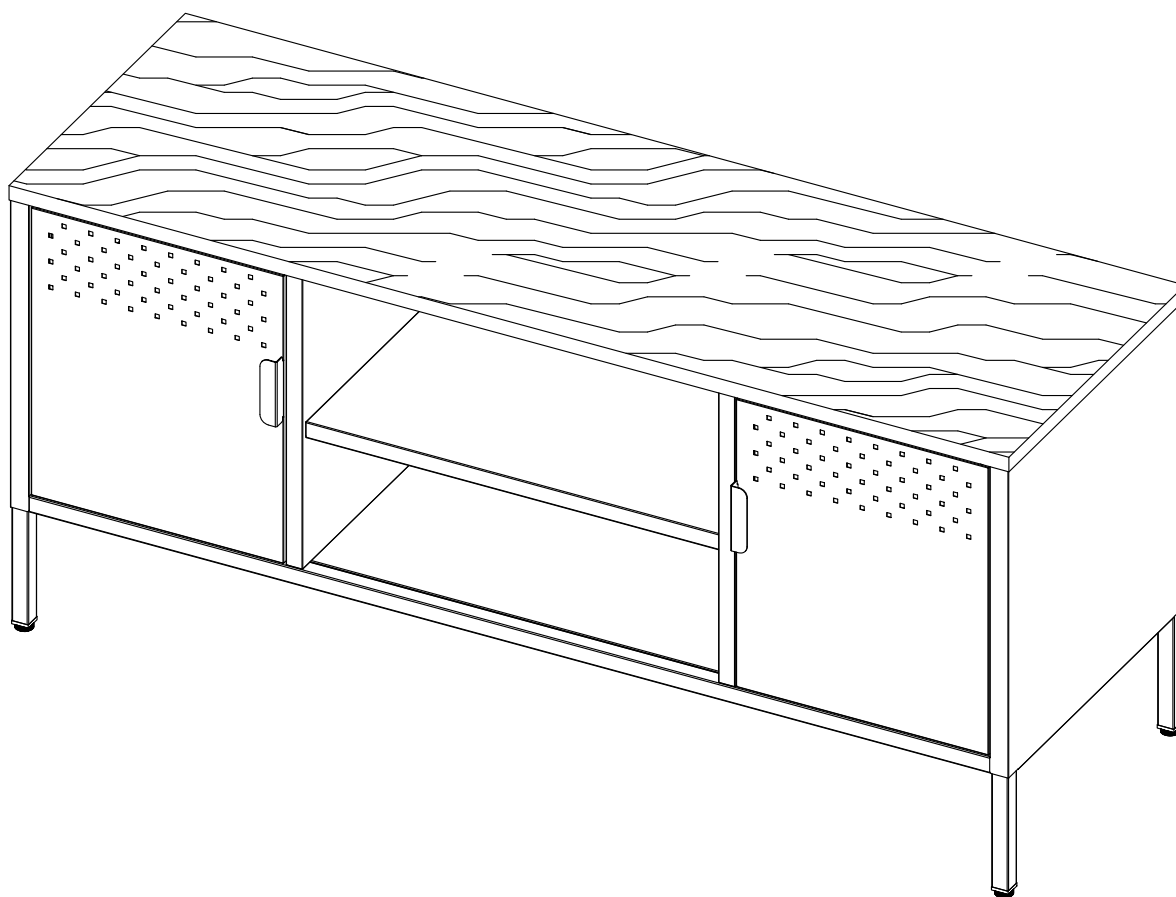

 
 
 
 


STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

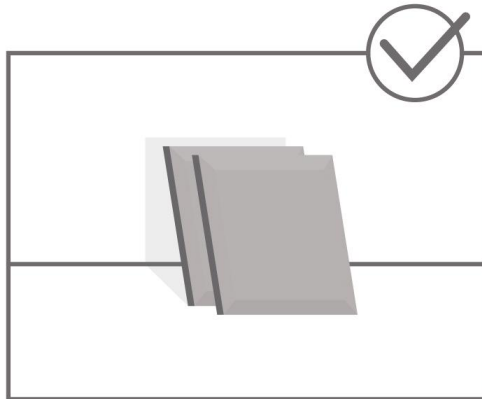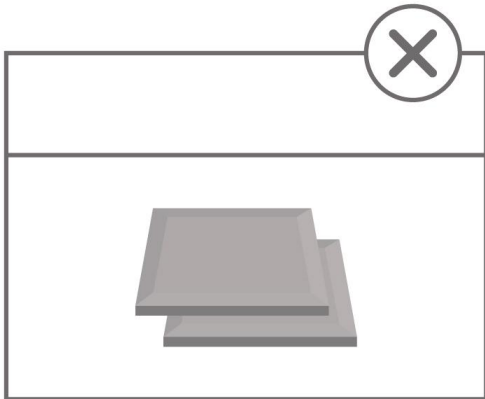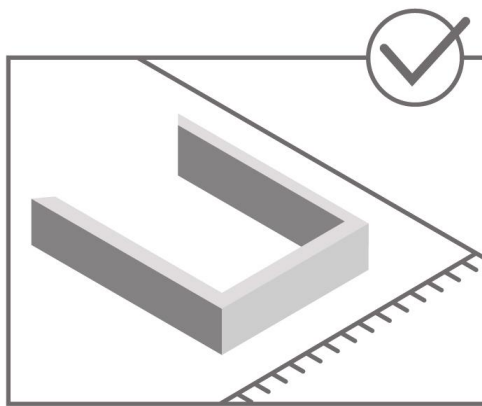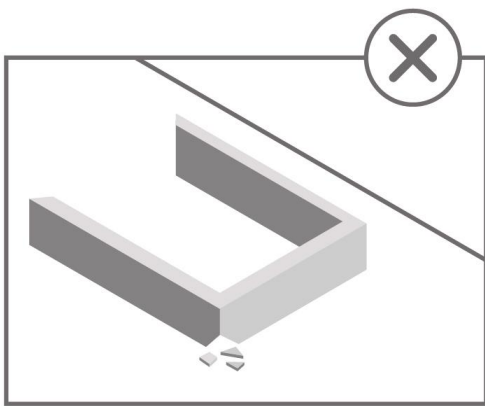

TOOLS REQUIRED

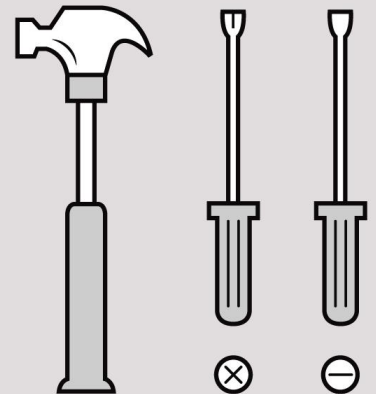 

View our assembly video online:
WWW.MANHATTANCOMFORT.COM

 


Stuck? Question? We are here to help.
tel: 908-888-0818
e-mail: help@manhattancomfort.com





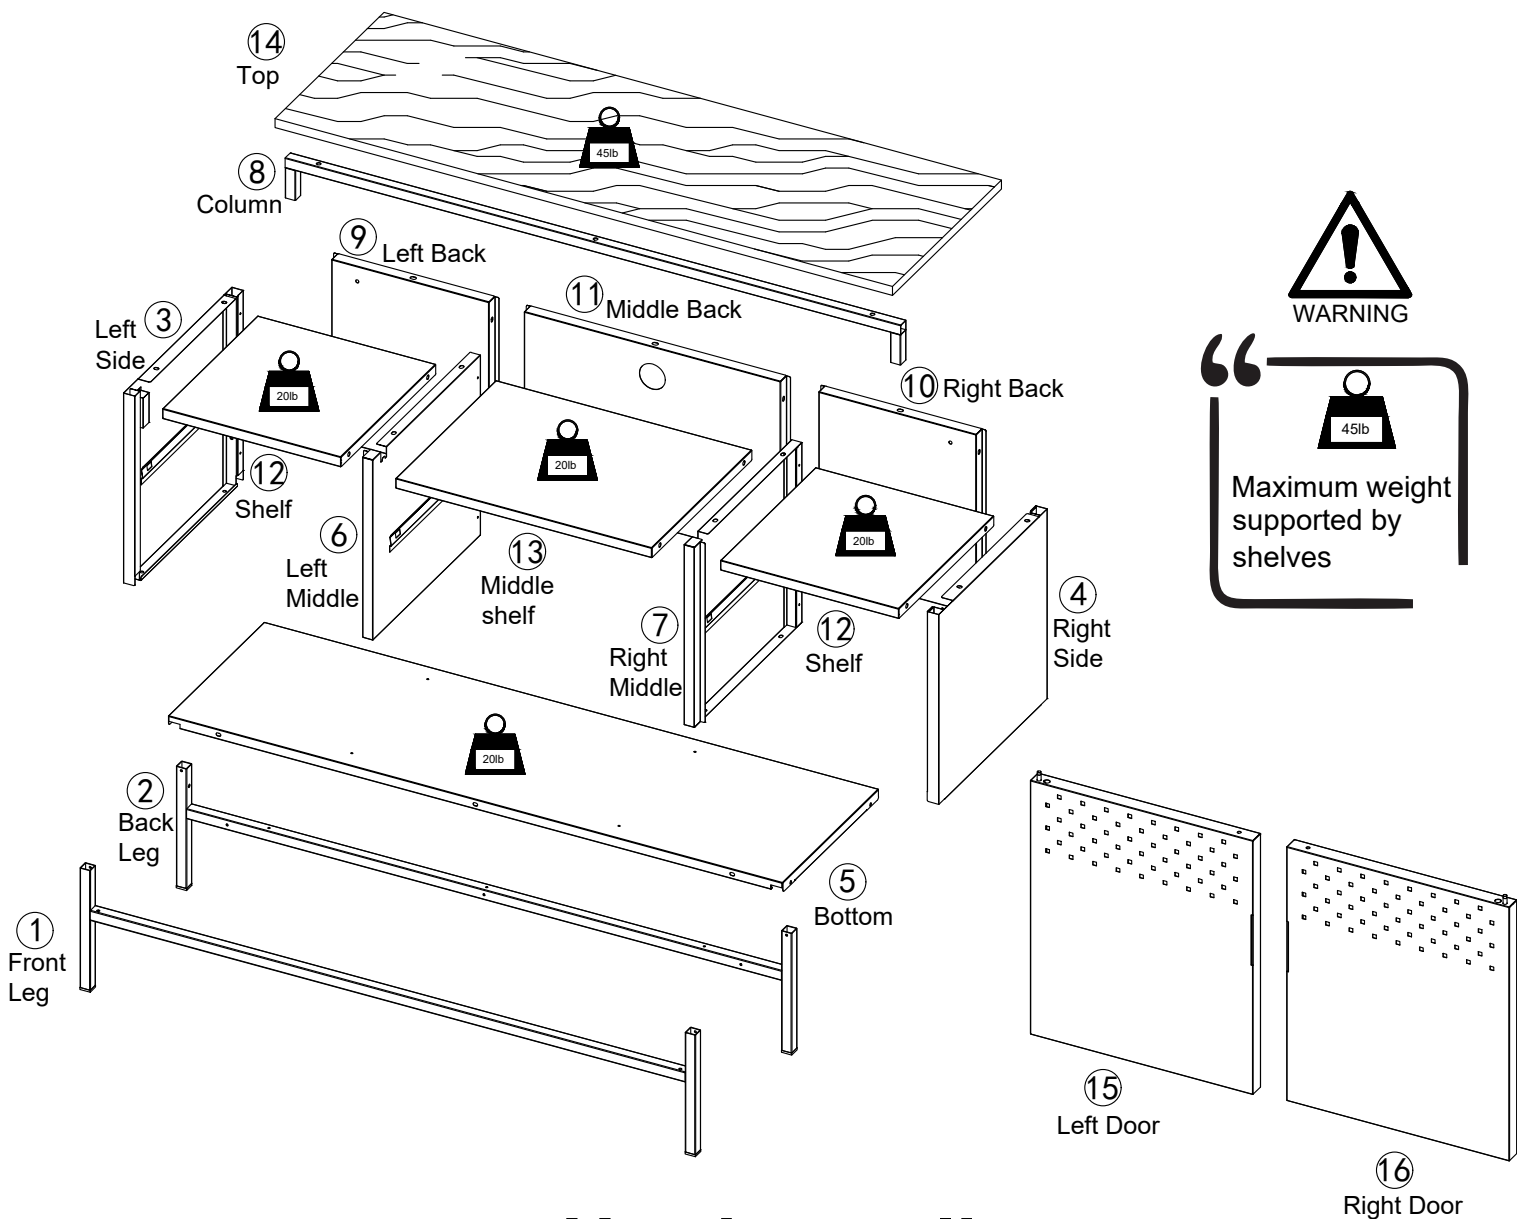


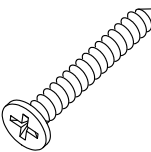 
 

 
Support Site




Metal TV Stand



Hardware list


A	B	C	D	E	F	G
						
M5×12mm 31 ×	M4×8mm 4 ×	45mm 2 ×	4 ×	2 ×	2 ×	2 ×
H	J	K	L			
						
M4×40mm 2 ×	Ø8×40mm 2 ×	M6×10mm 14 ×	4 ×			

 ① Front Leg

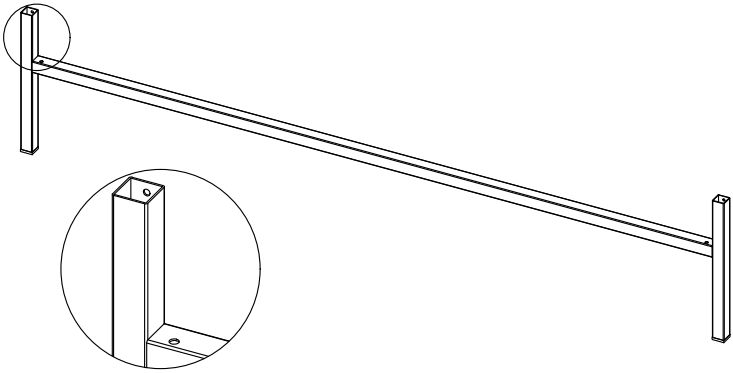


1×

 ② Right Leg

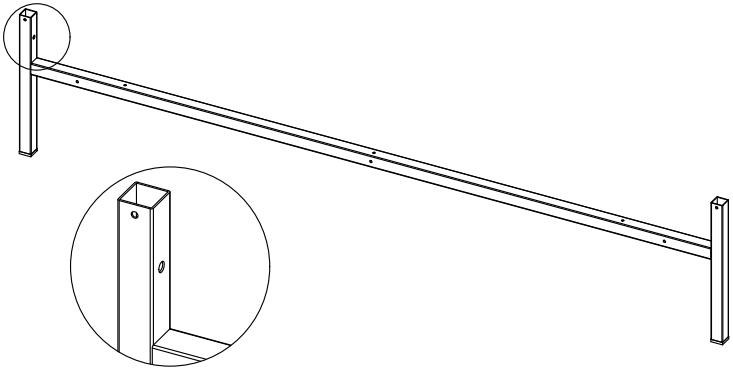


1×

 ③ Left Side

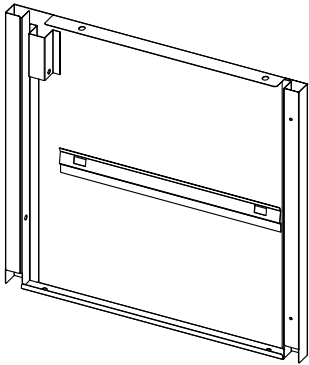


1×

 ④ Right Side

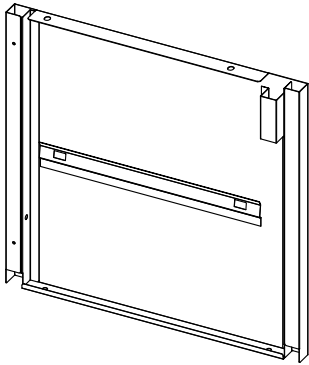


1×

 ⑤ Bottom

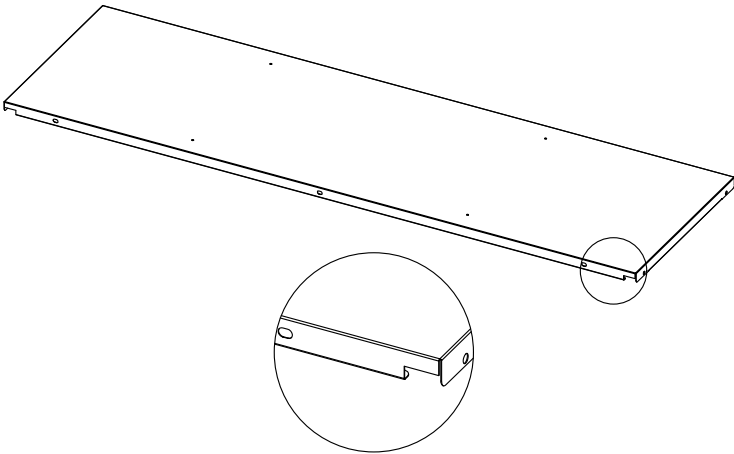


1×

 ⑥ Left Middle

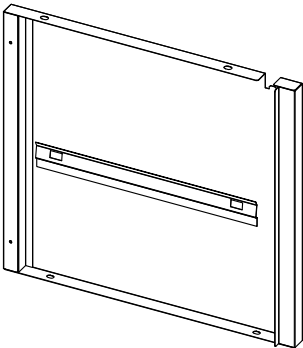


1×

 ⑦ Right Middle

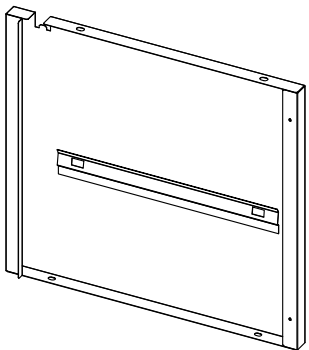


1×

 ⑧ Column

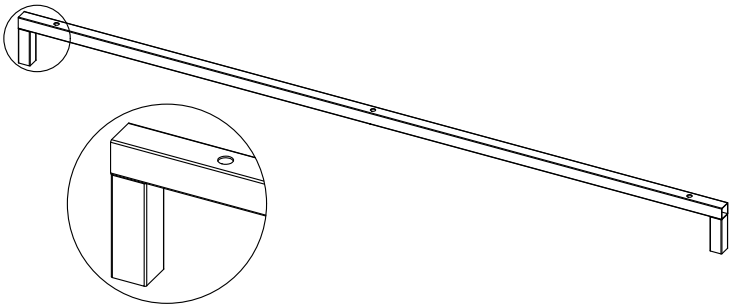


1×

 9 Left Back

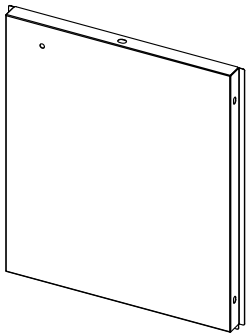


1×

 10 Right Back

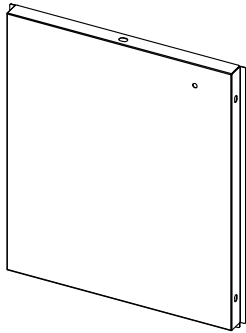


1×

 11 Middle Back

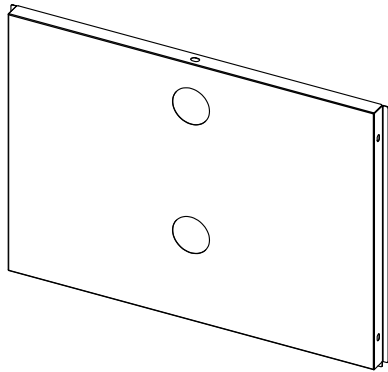


1×

 12 Shelf

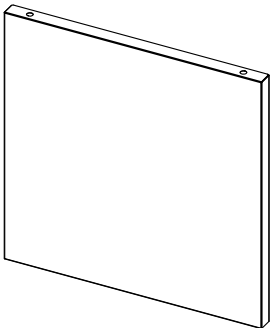


2×

 13 Middle Shelf

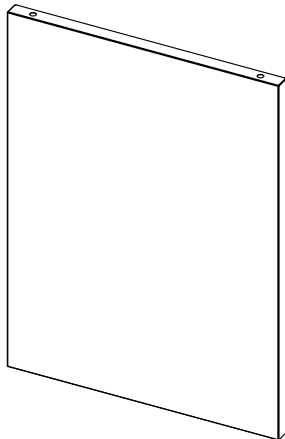



1×

 14 Top

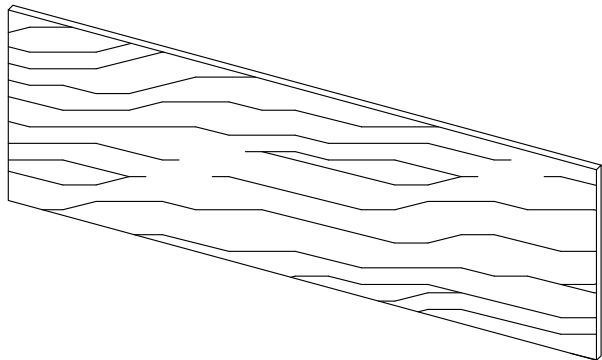



1×

  15 Left Door

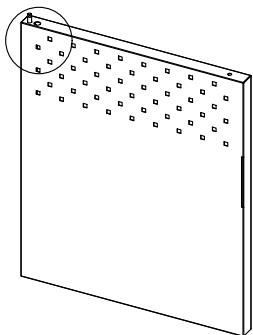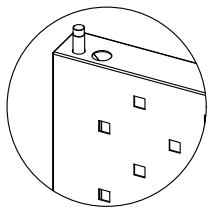

1×


 
 
16 Right Door

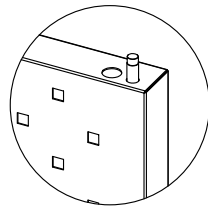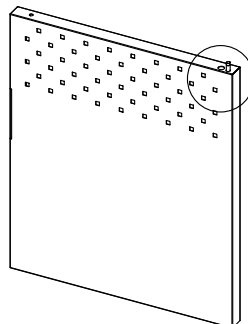


1×

STEP 1

   Fix Left Side③and Right Side④into Front Leg①and Back Leg②

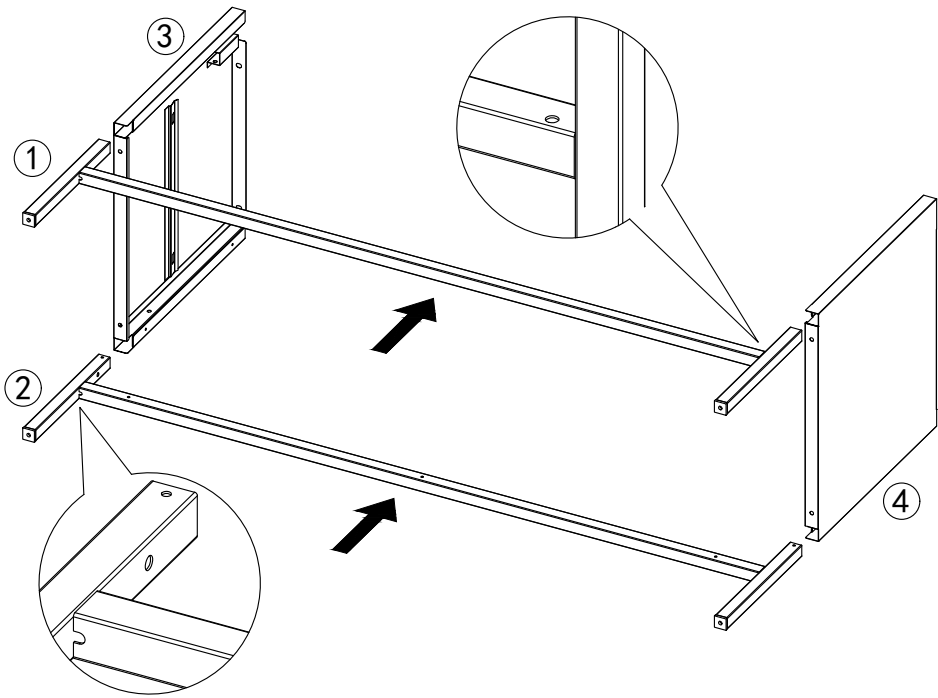


 Fix the height-adjustable feet L on the bottom of Front Leg①and Back Leg②

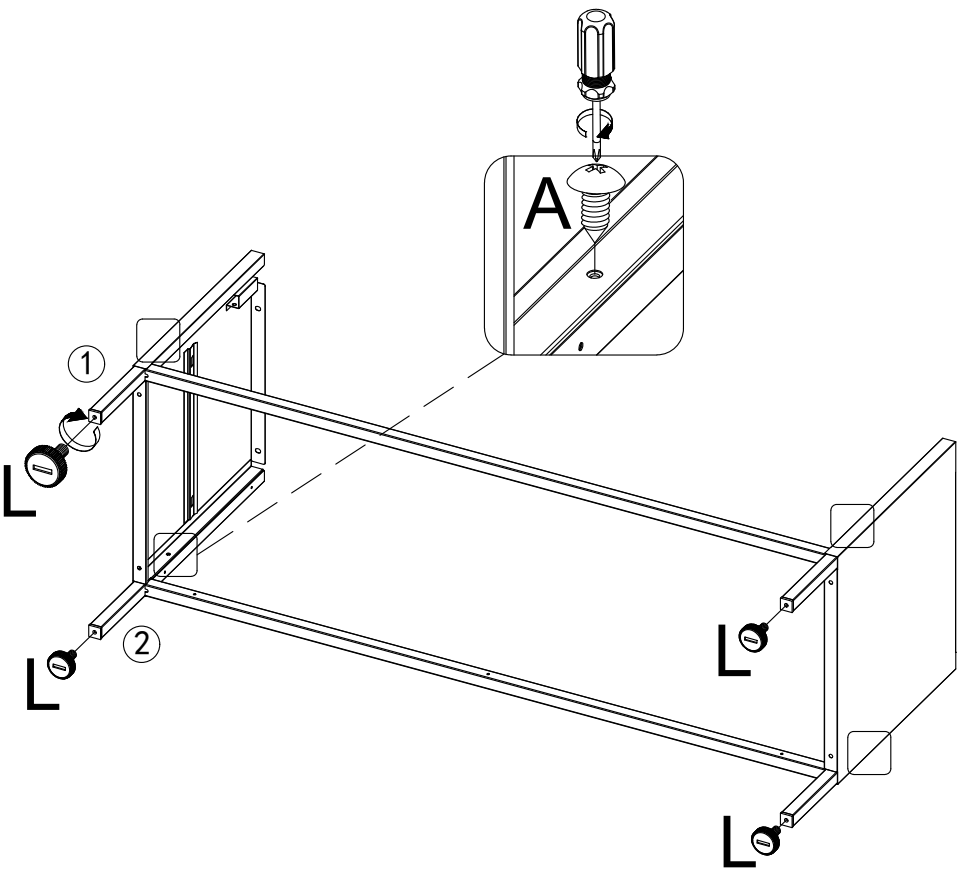


STEP 2

 
Fix Bottom⑤on the Front Leg①& Back Leg②and Left side③and Right side④

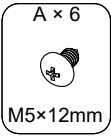

 
“Pay attention on the direction of Bottom⑤ there's a hole at the back

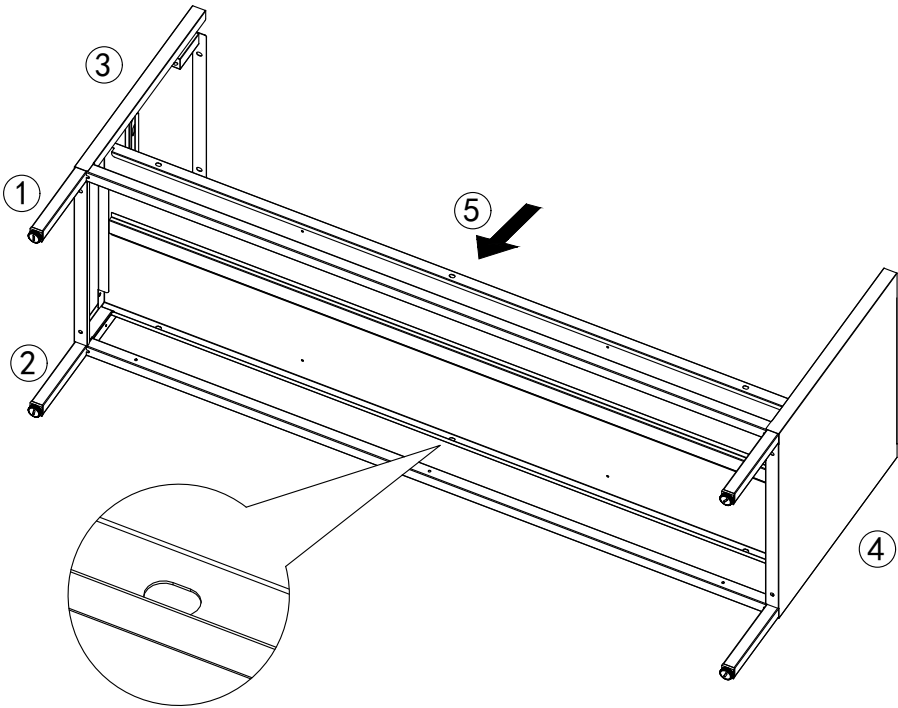

 
Fix Bottom⑤with Front Leg①and Back Leg②by Screw A

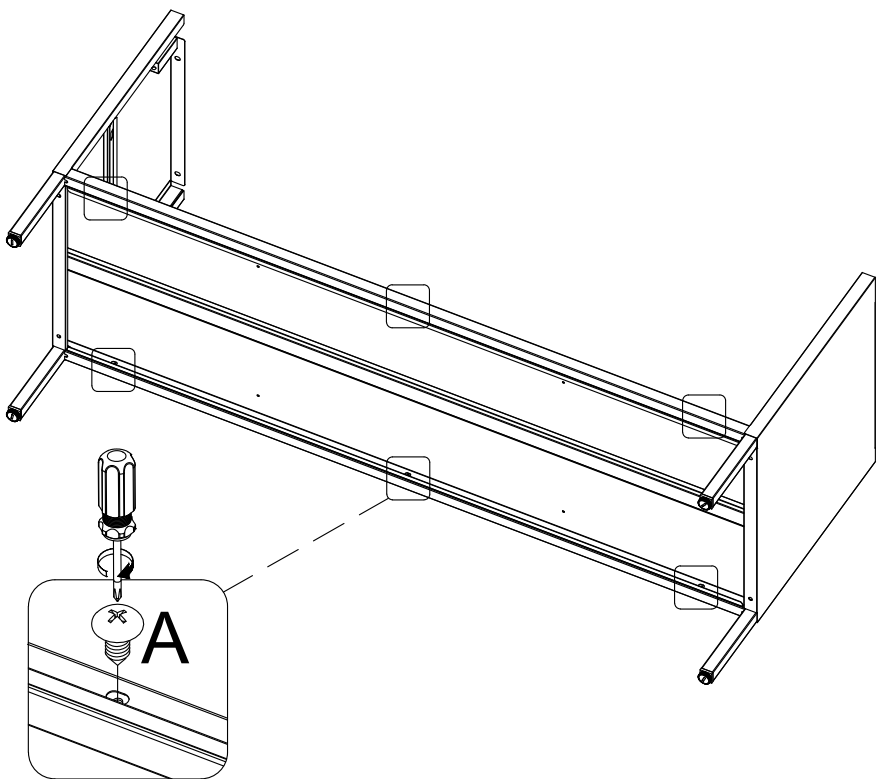

 STEP 3

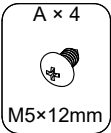


 - 1- Turn the cupboard to stand
- 2- Fix Left Middle⑥and Right Middle⑦on positions as below

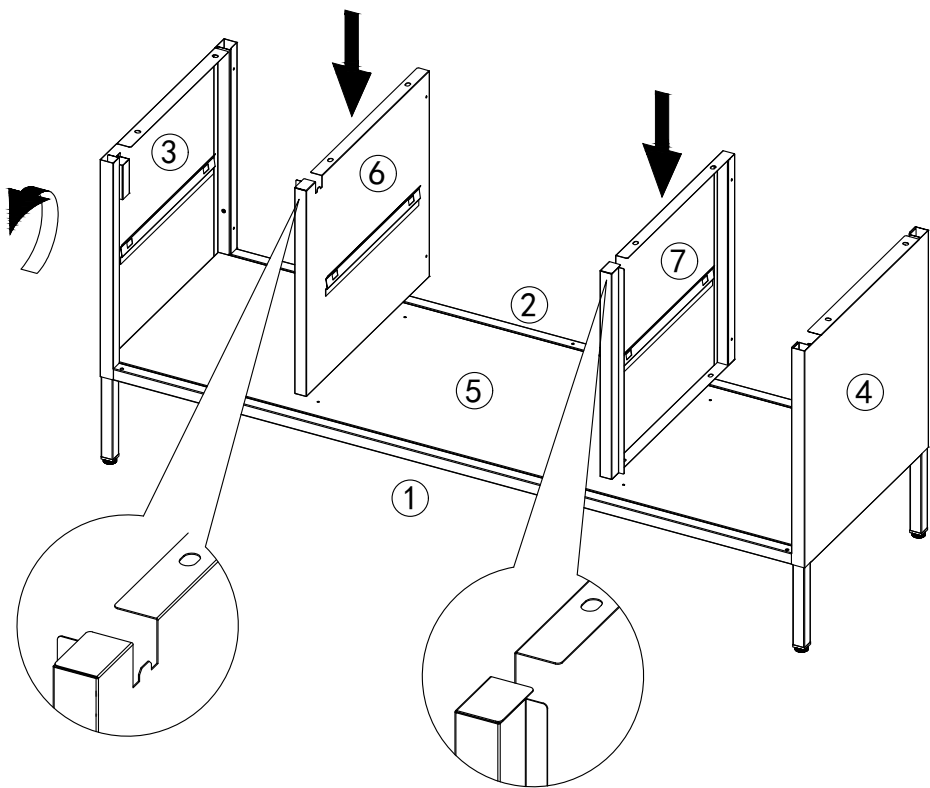



“Pay attention on the direction of Left Middle⑥ and Right Middle⑦. The groove is at the front side”

 - 1- Fix Left Middle⑥with Bottom⑤by Screw A
- 2- Fix Right Middle⑦with Bottom⑤by Screw A

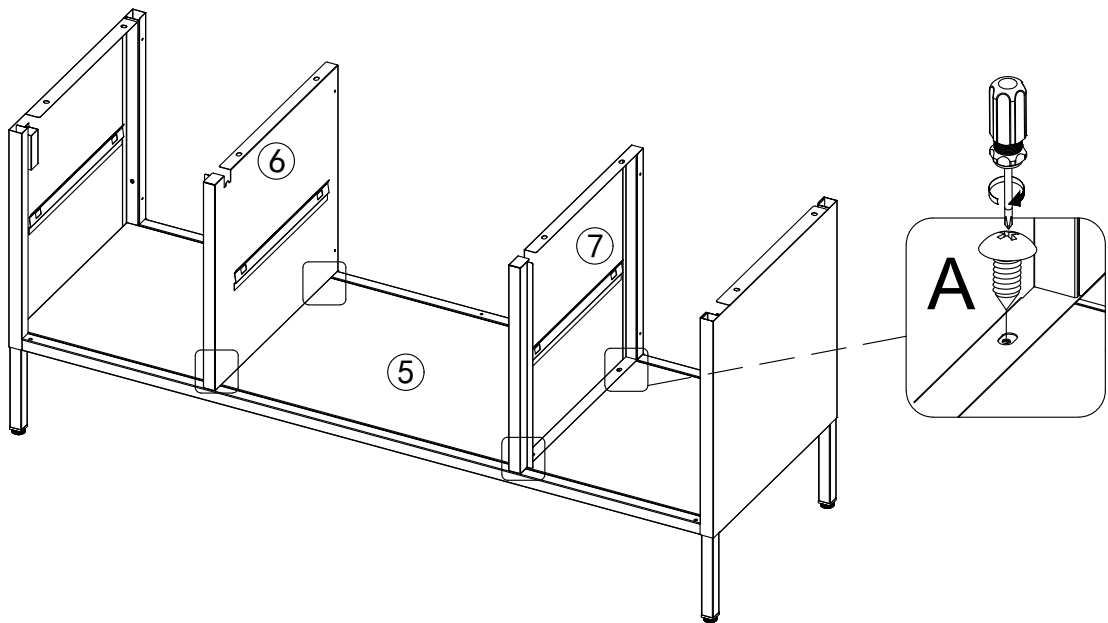


STEP 4

  - 1- Turn the cupboard with the back side upwards
- 2- Fix Column⑧with Left Side③and Right Side④

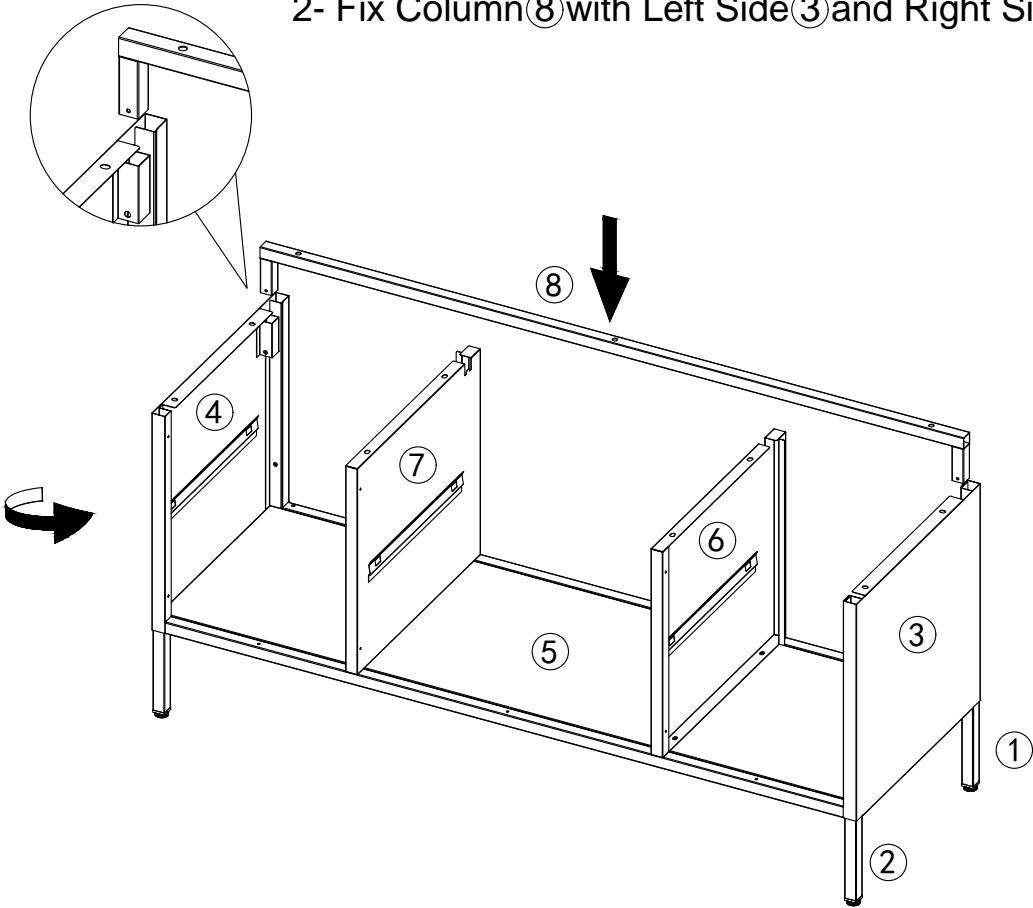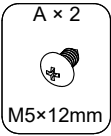


 
Fix Column⑧into the holes on Left Side③and Right Side④by Screw A

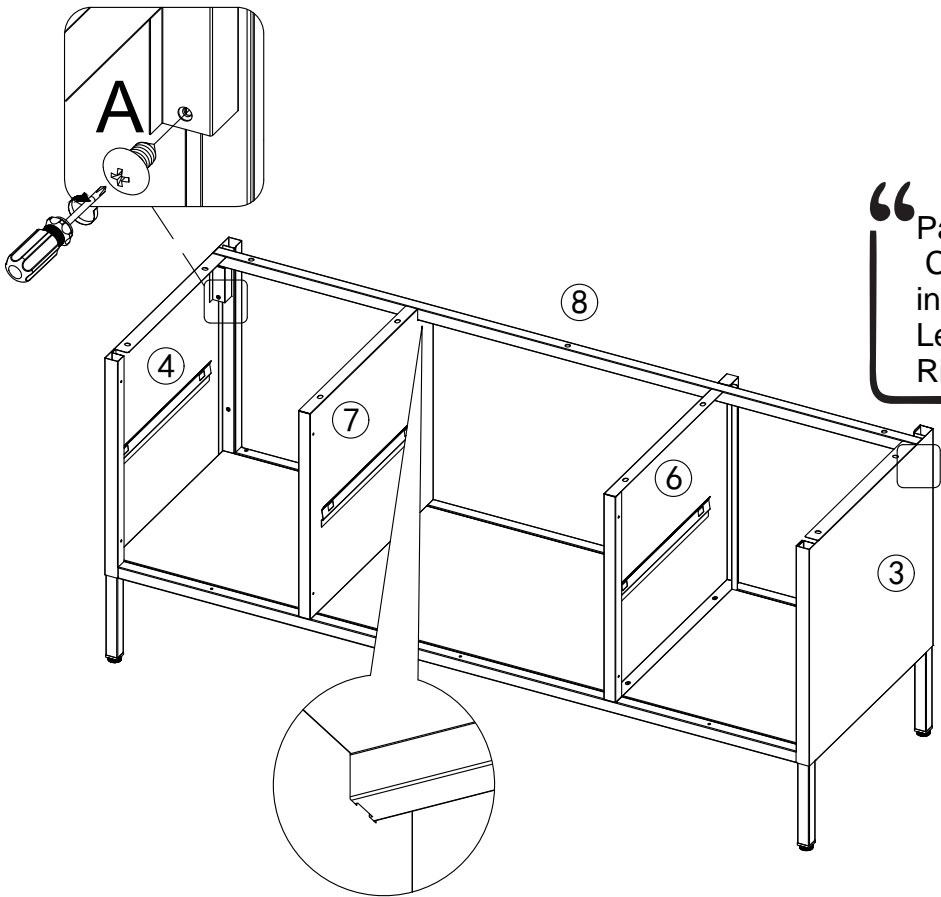


“Pay attention that the Column⑧ is stuck into the grooves of Left Middle⑥and Right Middle⑦”

STEP 5

  Fix Left Back ⑨, Middle Back ⑪ and Right Back ⑩ as positions at the back

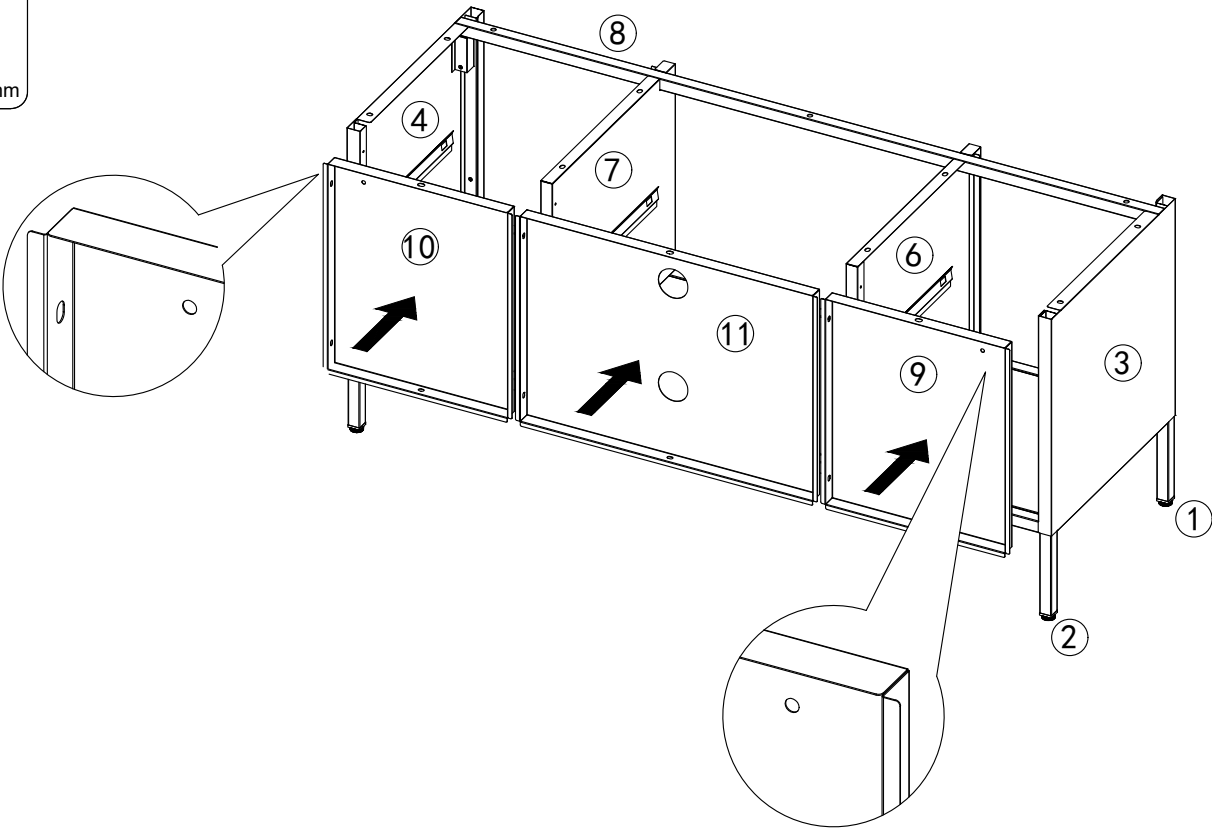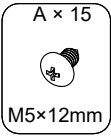


 Fix Left Back ⑨, Middle Back ⑪ and Right Back ⑩ with Left Side ③, Right side ④, Left Middle ⑥ and Right Middle ⑦ by Screw A

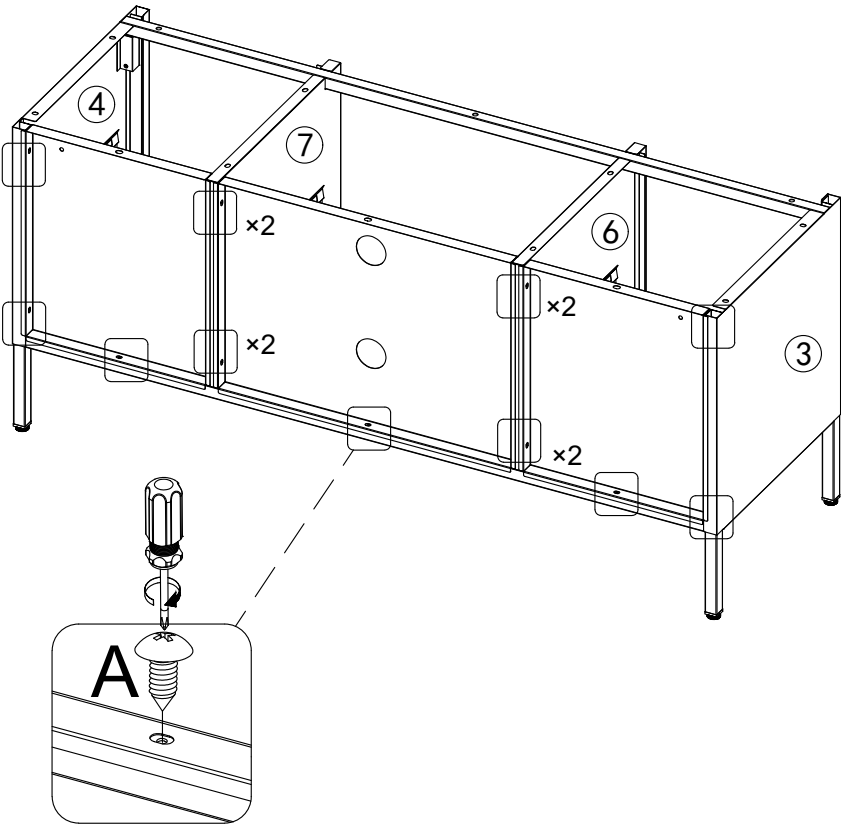


STEP 6

 - 1- Turn the cupboard with the front side upwards
- 2- Put Shelf 12 and Middle Shelf 13 on positions as below

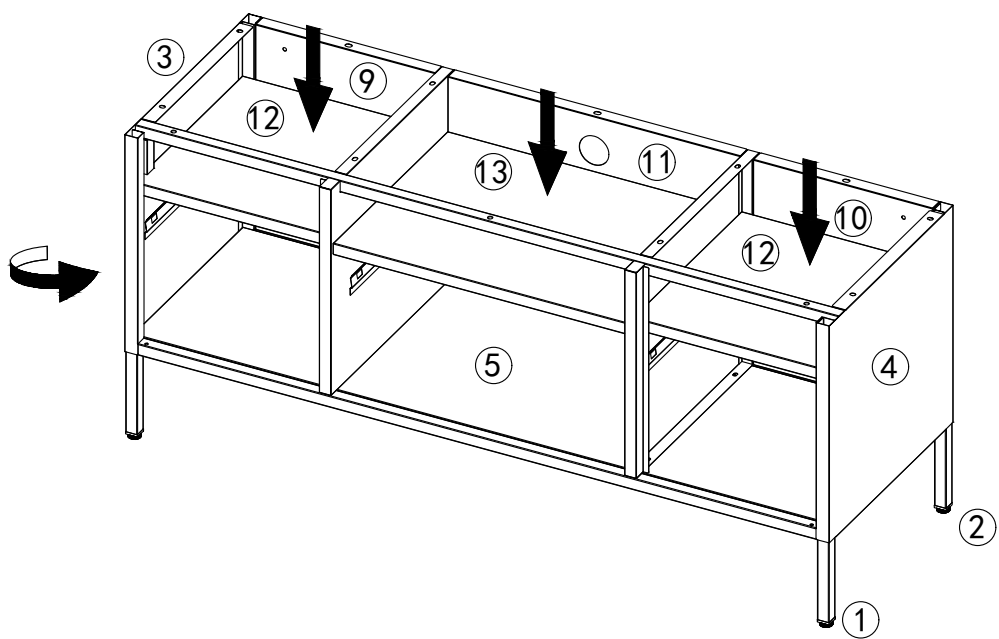


 Put Shelf 12 and Middle Shelf 13 down and totally stuck into the slots of Left Side 3, Right Side 4, Left Middle 6 and Right Middle 7

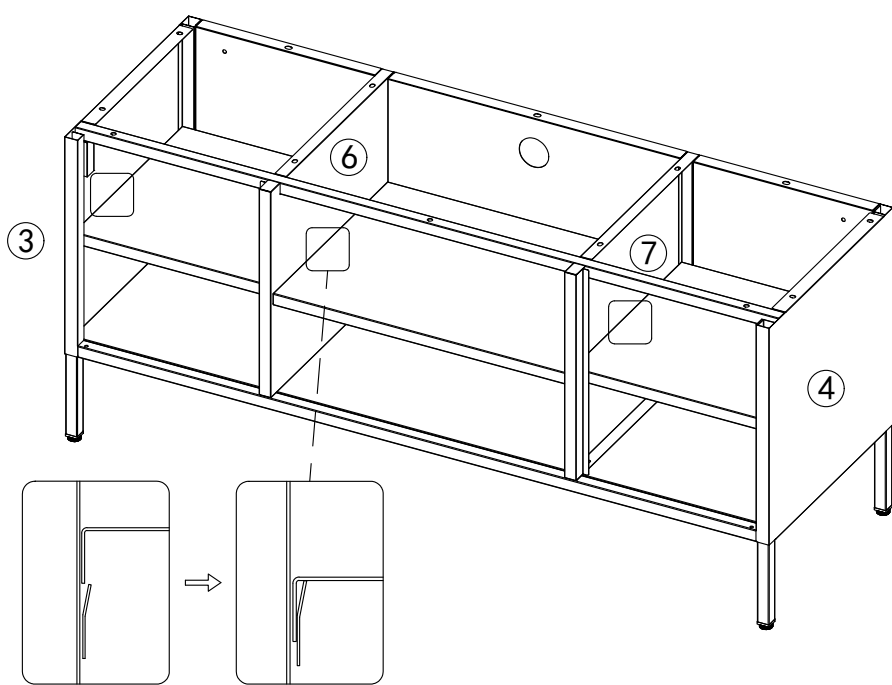


STEP 7


 
Put Top ⑭ on the top

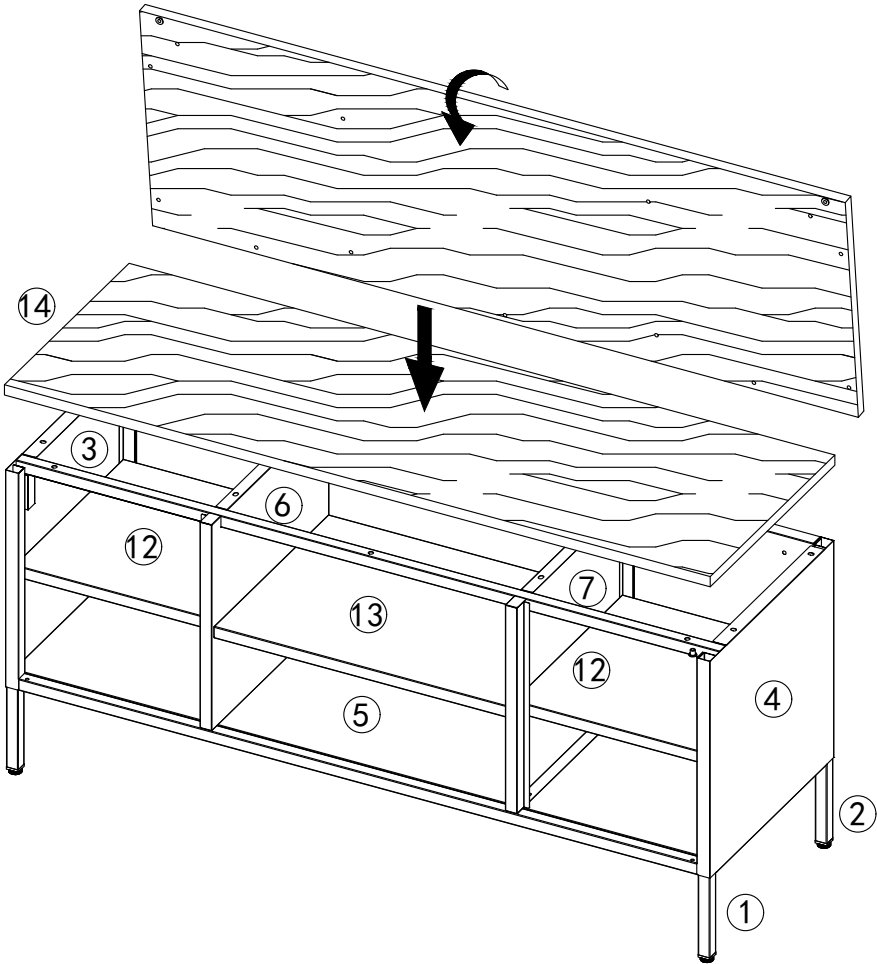

 
Fix Top ⑭ with Left Side ③, Right Side ④, Column ⑧, Left Back ⑨, Right Back ⑩ and Middle Back ⑪ by Screw A

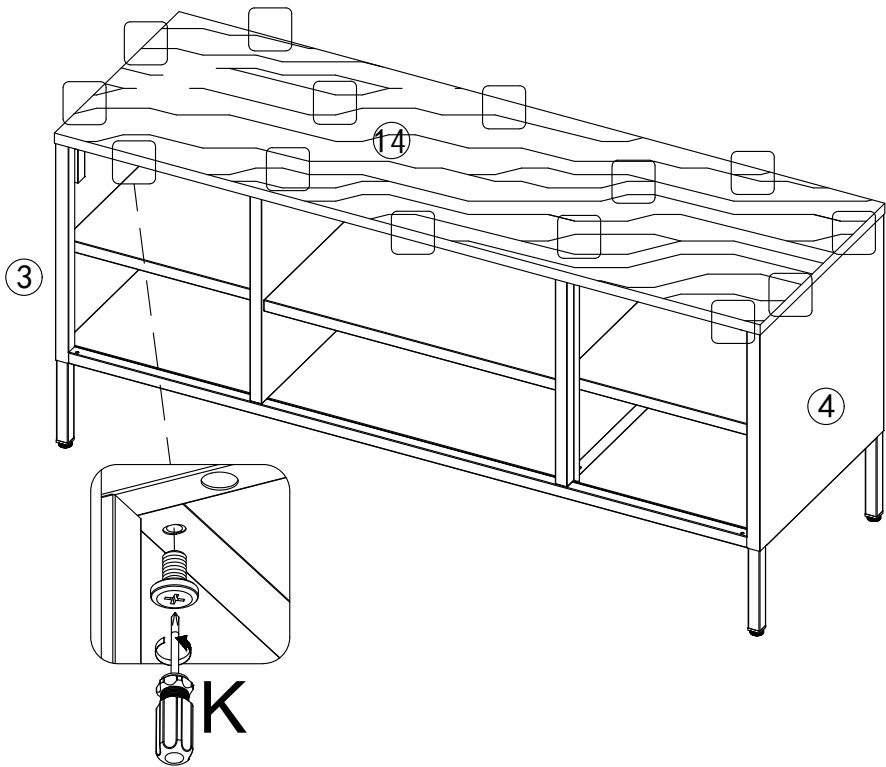

  
STEP 8

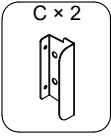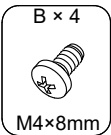

 
- 1- Fix Handle C on Left Door 15 and Right Door 16 by Screw B
- 2- Insert Magnet D into holes on the doors
- 3- Insert Part E at the bottom of doors

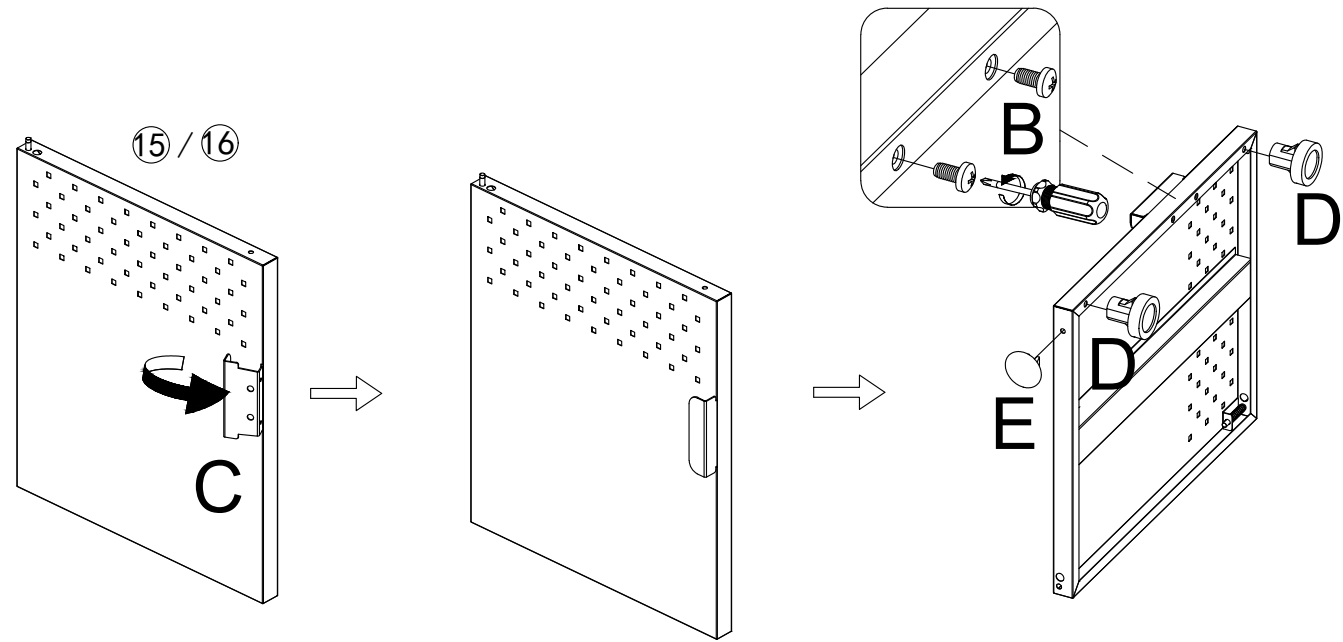


 
STEP 9

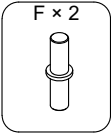







 
- 1- To assembly the doors, fit Lower hinge bolt F of Left Door 15 into the hole on Front Leg 1 and make Gasket G between Left Door 15 and Lower hinge bolt F
- 2 - Pull the upper hinge bolt of Left door 15 down, align the door and release the upper hinge bolt to fit the hole of Top 14
- 3- Repeat the step for Right Door 16

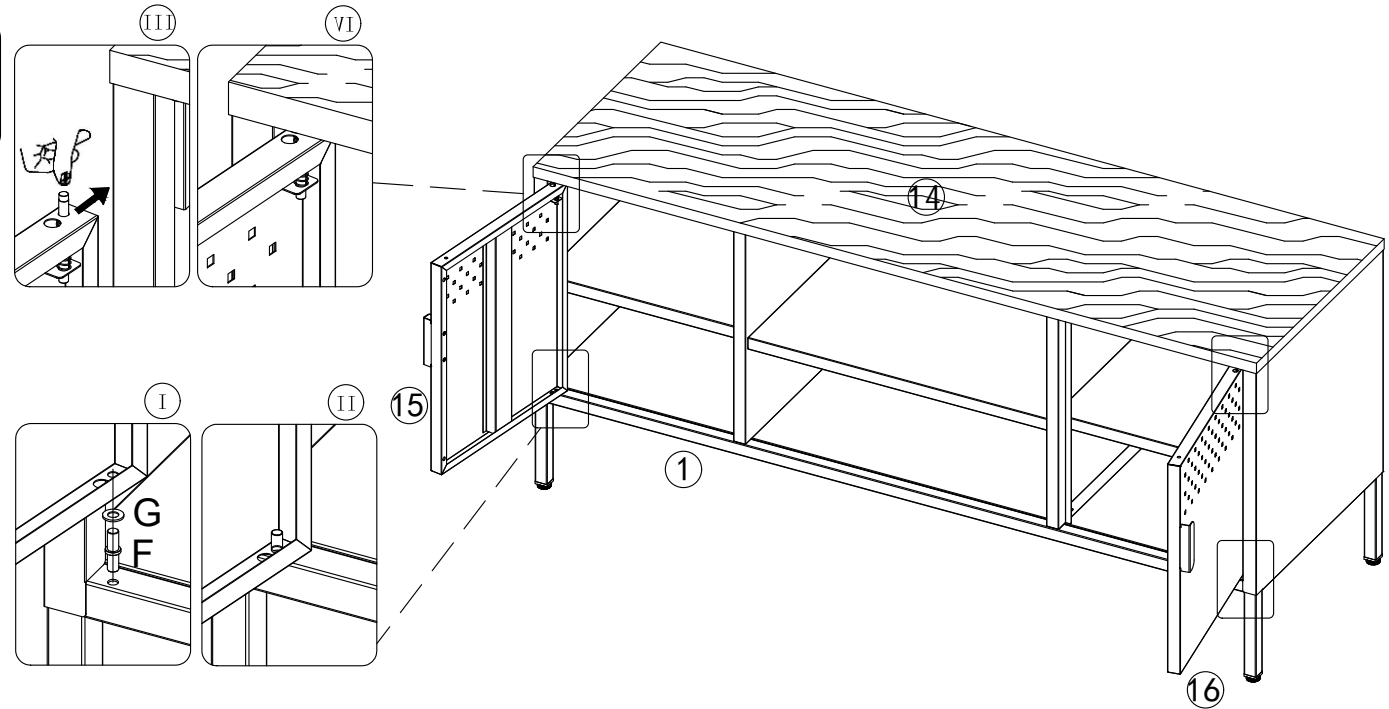

  STEP 9

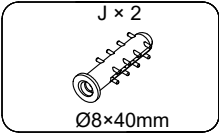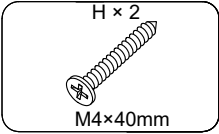

       - 1- Mark the wall holes by a pencil
- 2- Drill the wall where marked on the wall
- 3- Insert Part J (plastic expansion bolt) into the holes
- 4- Use the hammer to insert part J until it overcomes the wall
- 5- Fix Part H at the Left back ⑨ and Right back ⑩ with wall

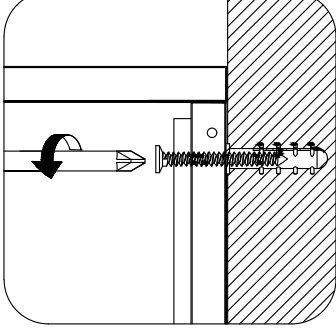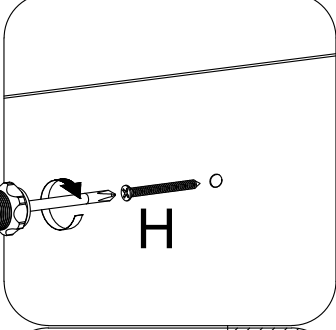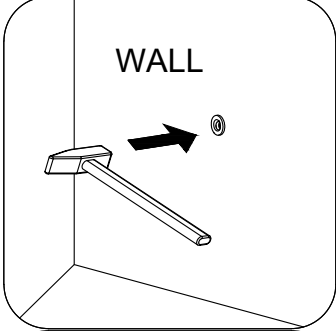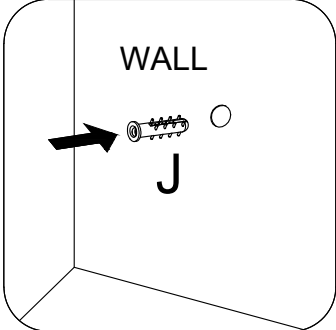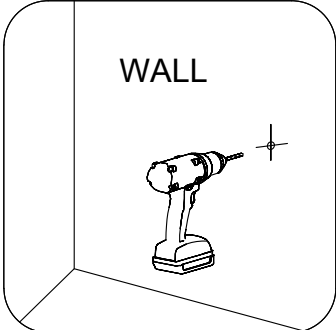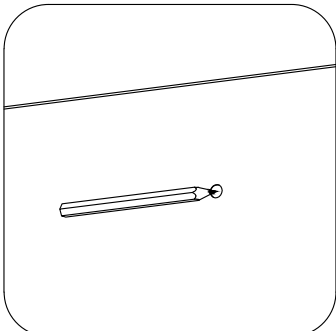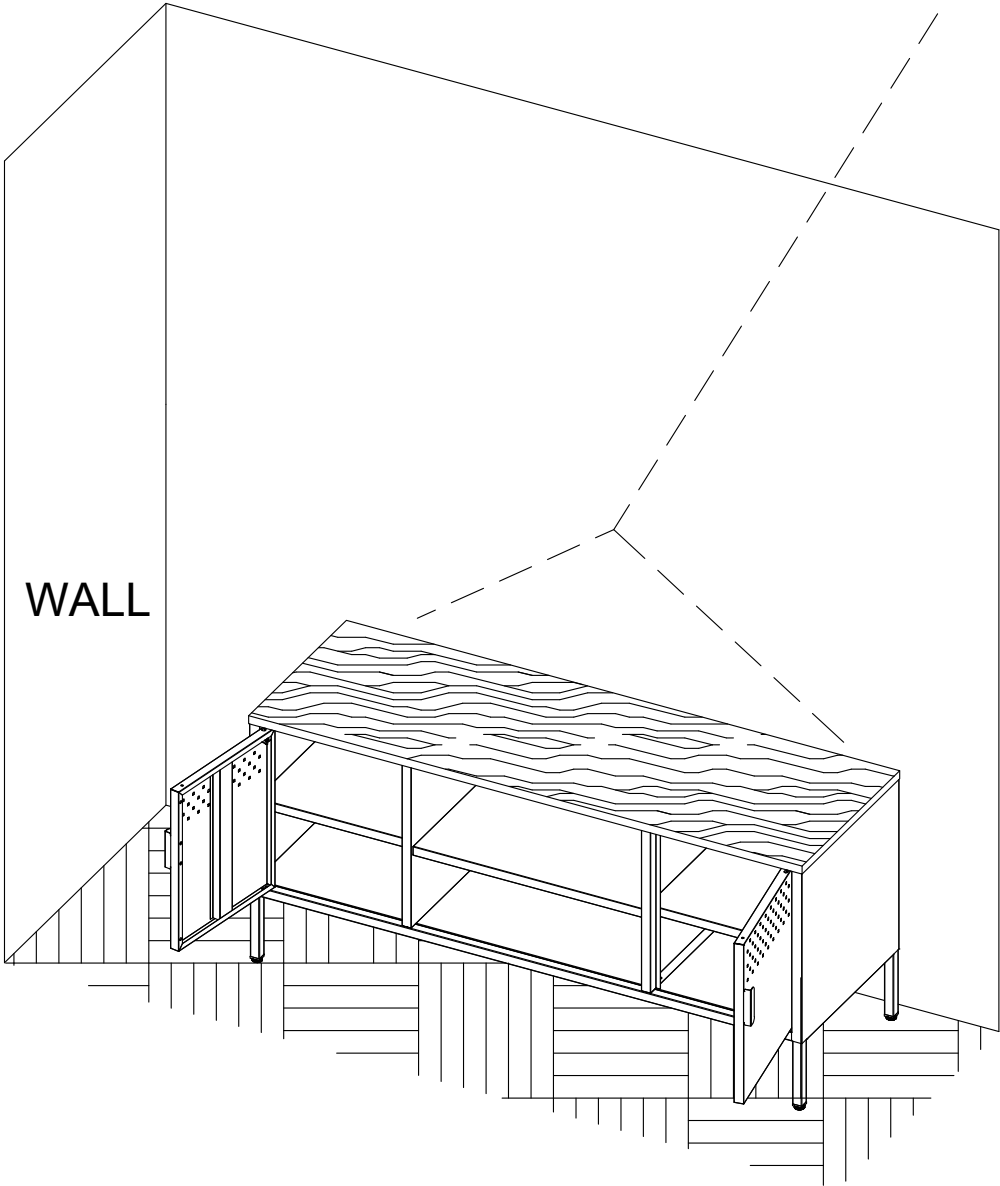



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810
908-888-0818