 
 
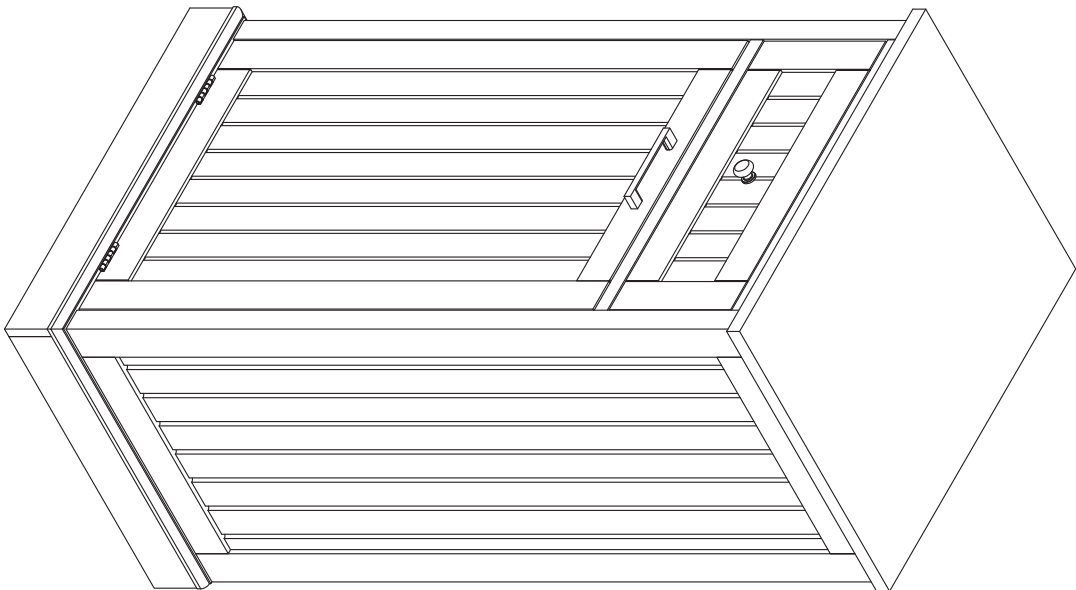 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 




Corner Housewares
3645 A RT 112 Coram, NY 11727
866-304-3936




A  1pc	B  1pc	C  1pc	D  1pc	E  1pc
F  1pc	G  1pc	H  1pc	I  1pc	J  1pc
K  1pc	L  1pc	M  1pc	N  1pc	O  1pc
P  1pc	Q  1pc	R  1pc	S  2pcs	T  2pcs
U  1pc	V  1pc	W  1pc	1  4pcs	2  4pcs
3  4pcs	4  36pcs	5  22pcs	6  4pcs	7  2pcs
8  2pcs	9  4pcs	10  4pcs	11  1pc	12  2pcs
13  1pc	14  1pc	15  2pcs	16  2pcs	17  2pcs
18  2pcs	19  10pcs			


www.cornerhousewares.com
contact@cornerhousewares.com

PRODUCT WARRANTY
Corner Housewares offers replacement of items and parts with factory defects within one year of dated sales receipt. Customers may call toll free: (866) 304-3936

 
Step 1

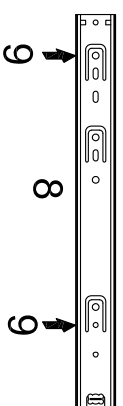

 
Step 3

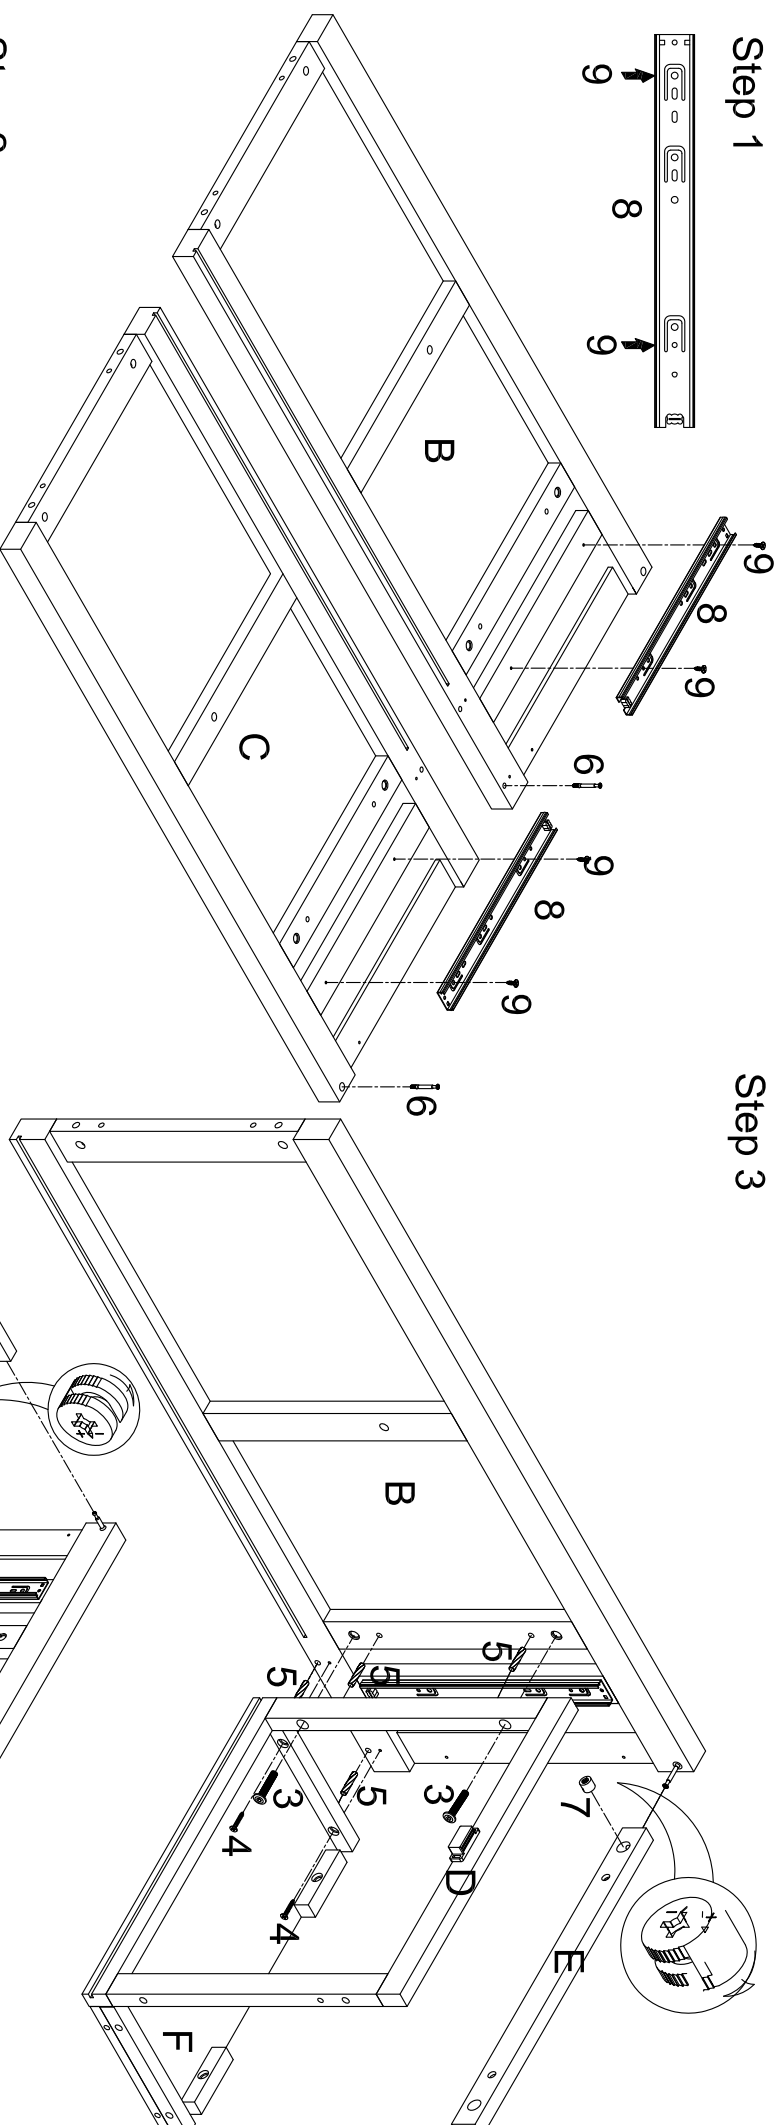

 
Step 2

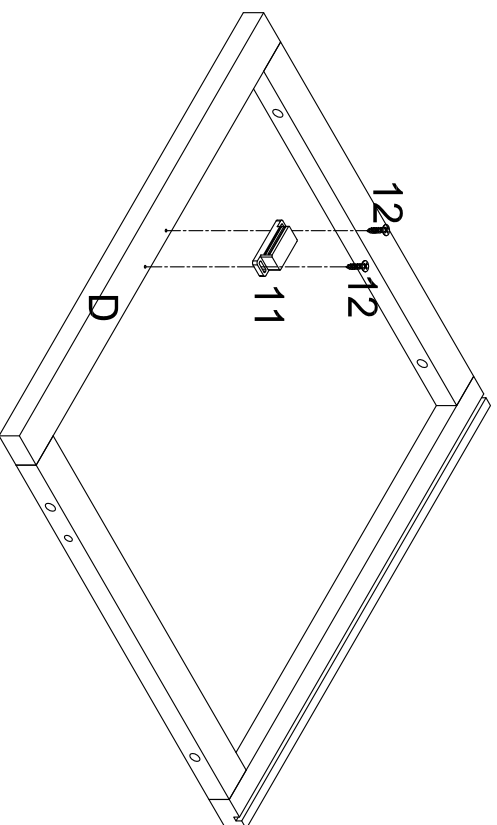

 
Step 4

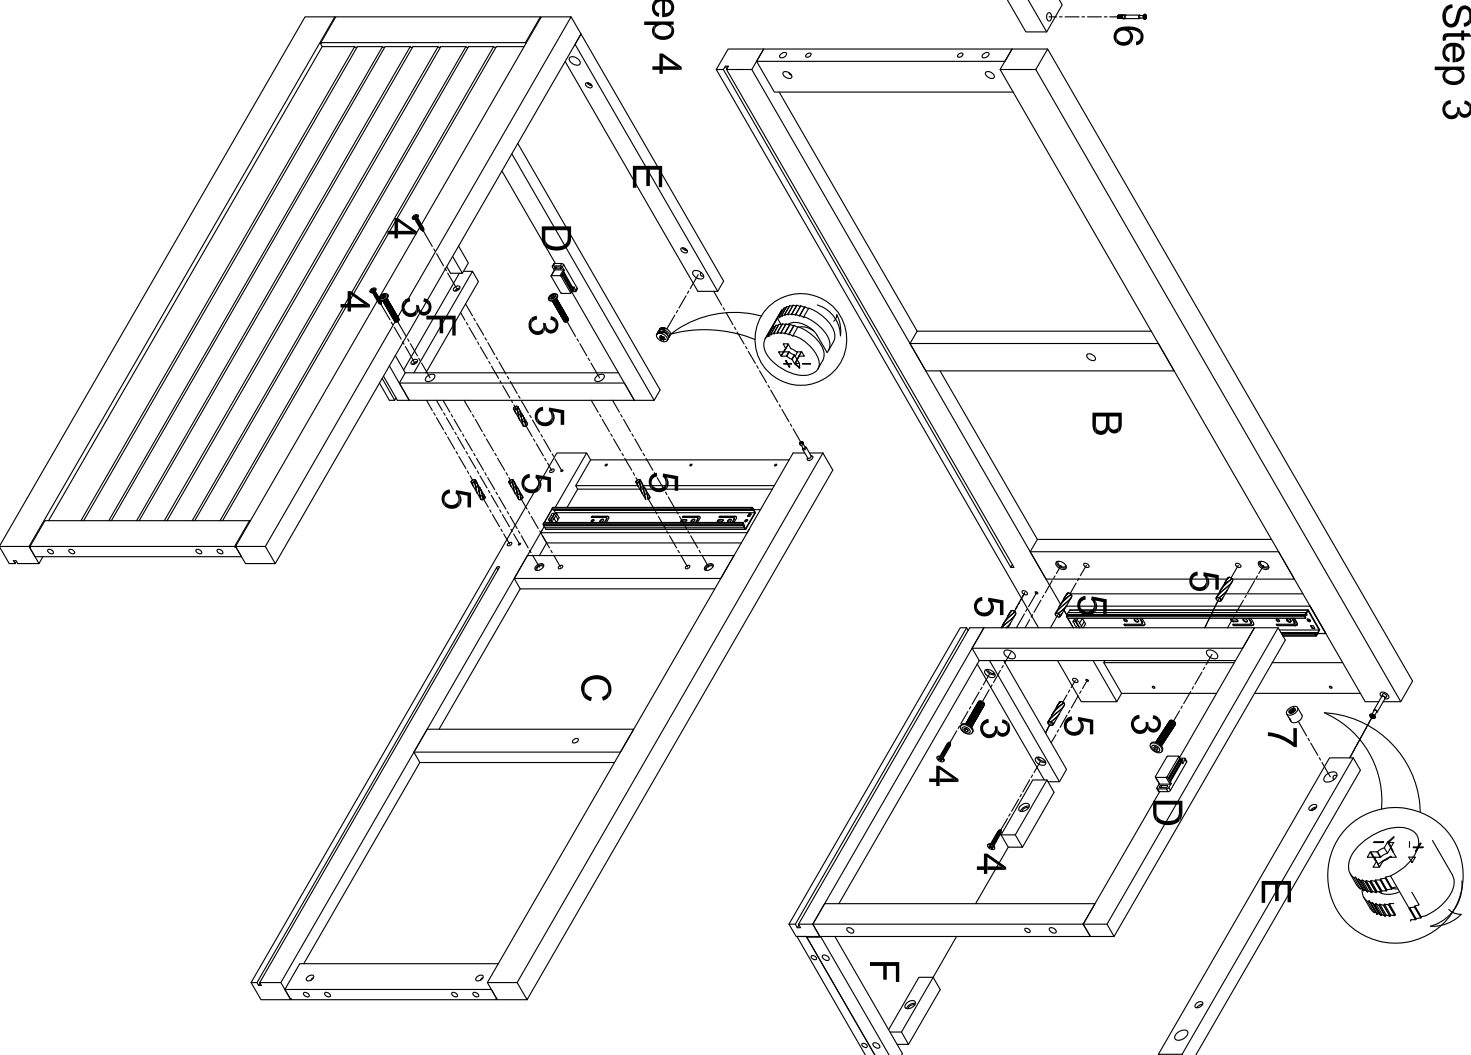

 
Step 5

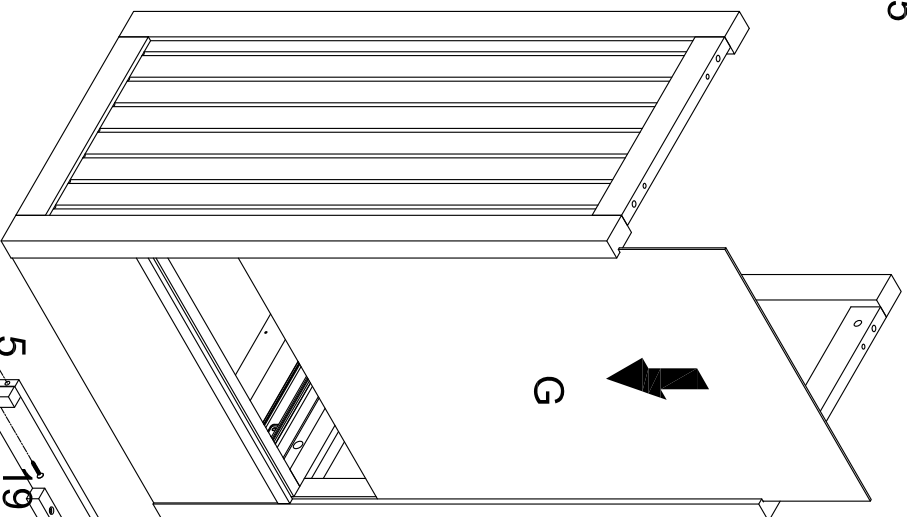


 
Step 6

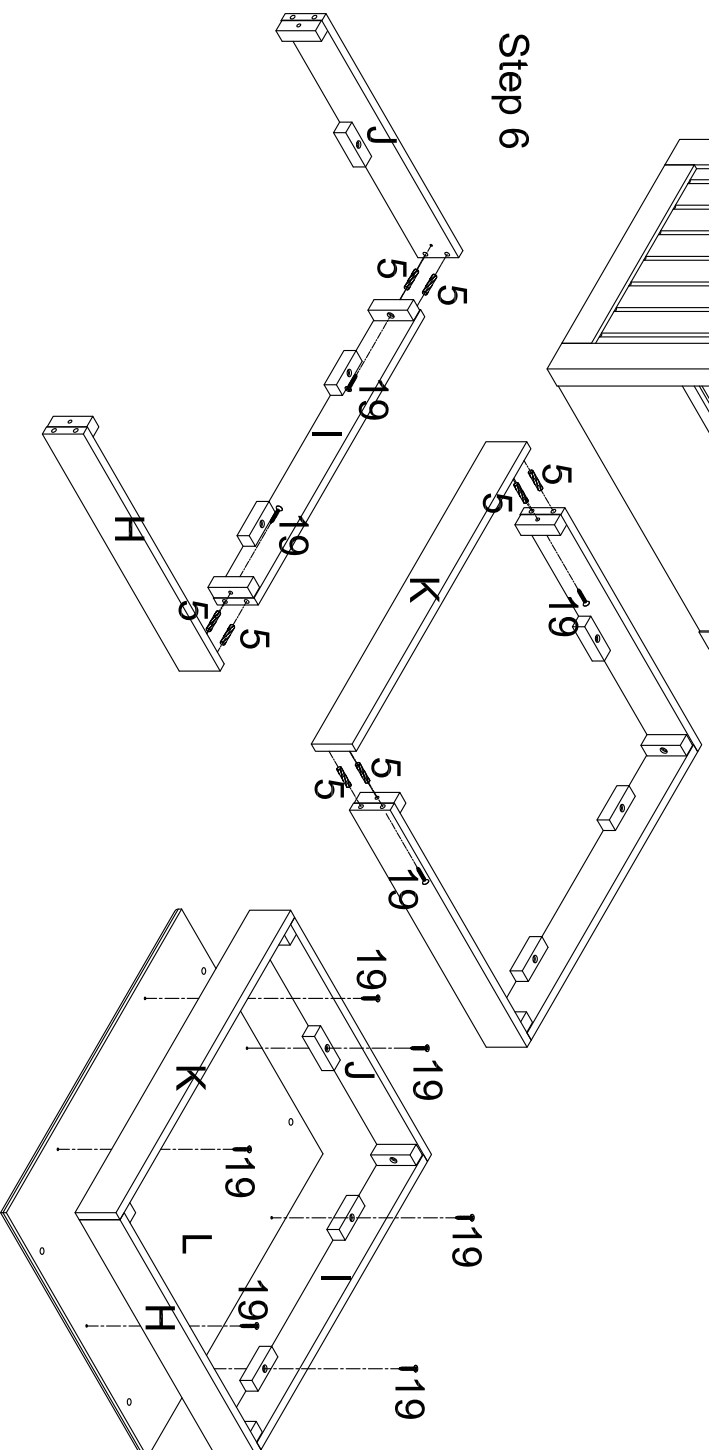

 
Step 7

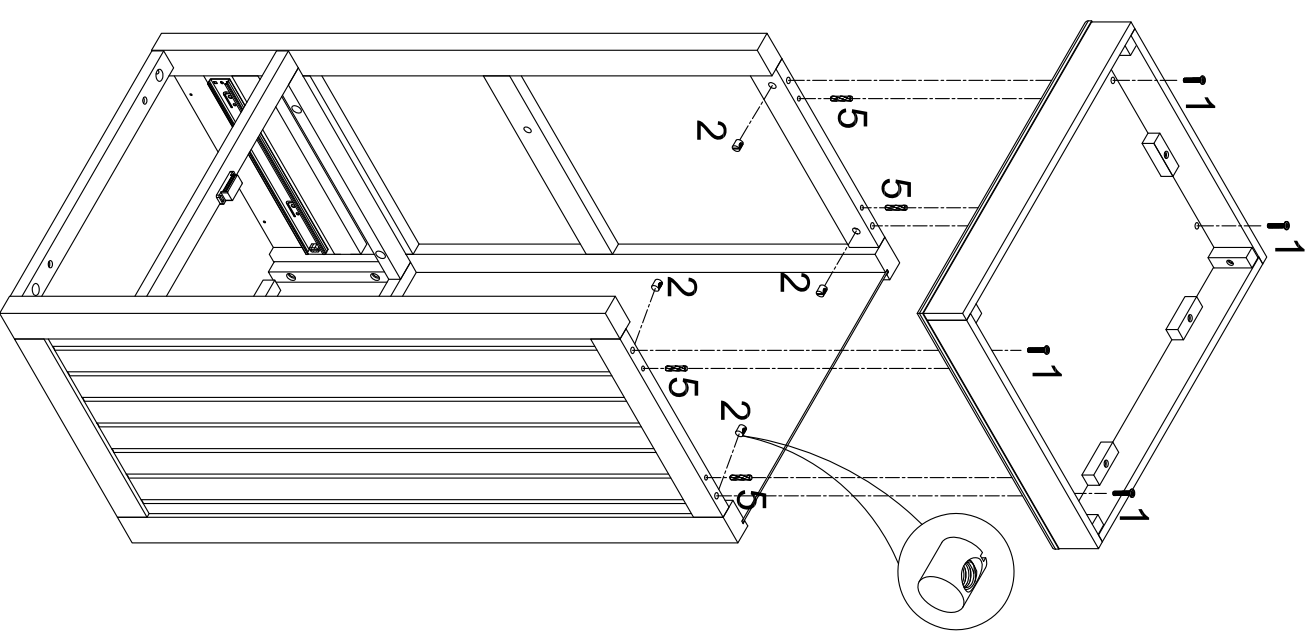

 
 
Step 8

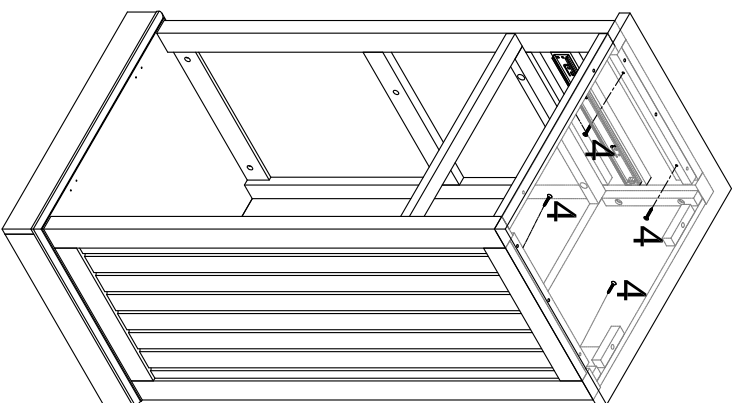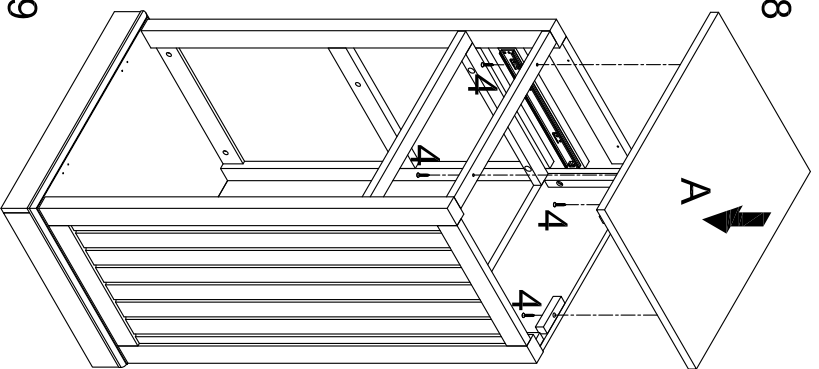


 
Step 10

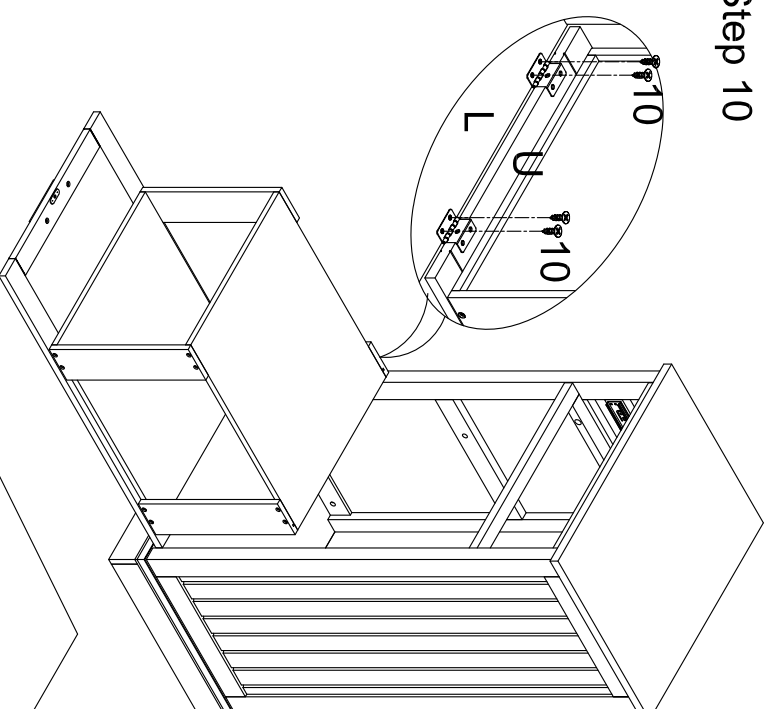

 
 
Step 9

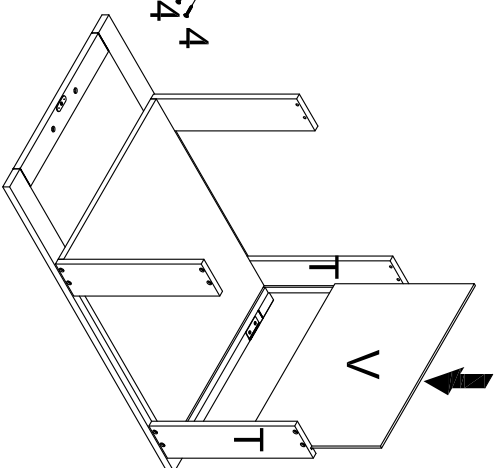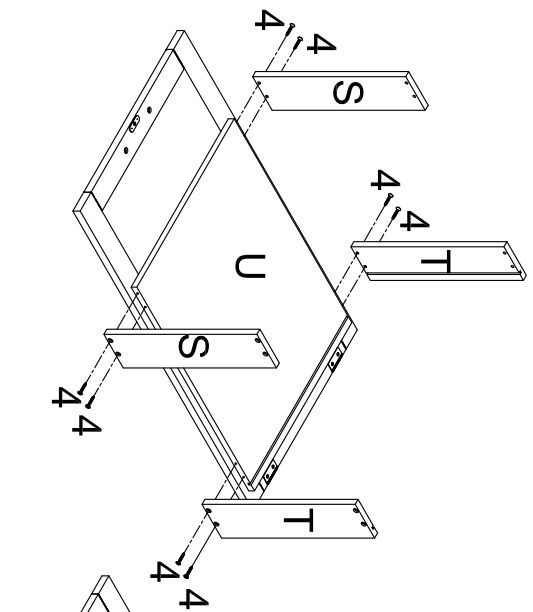

  
Step 11

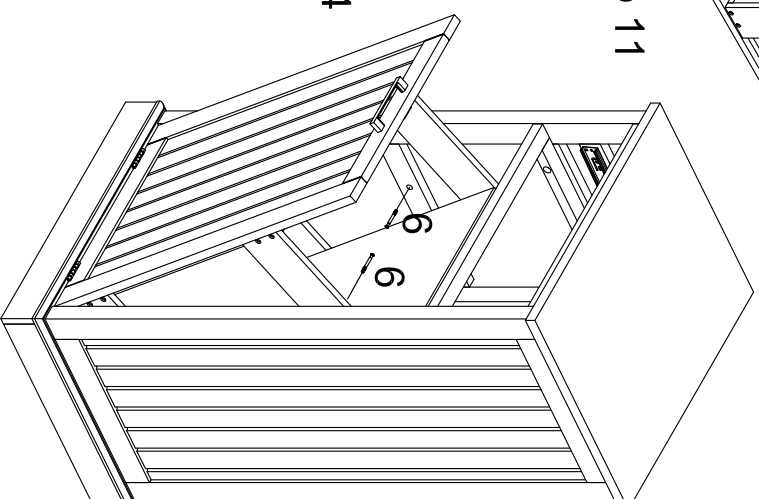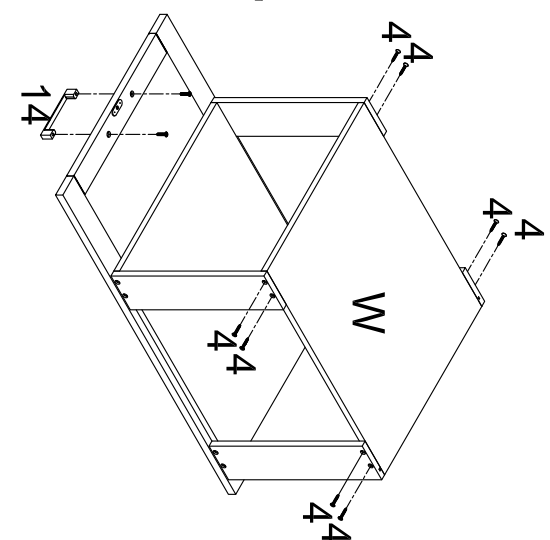


 
 
Step 12

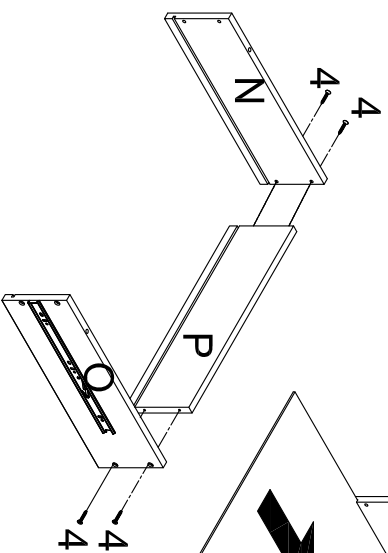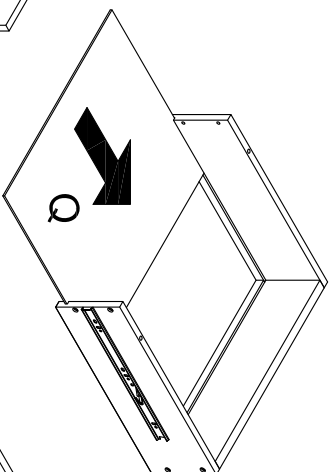




 
Step 13

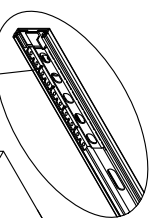

   Step 14

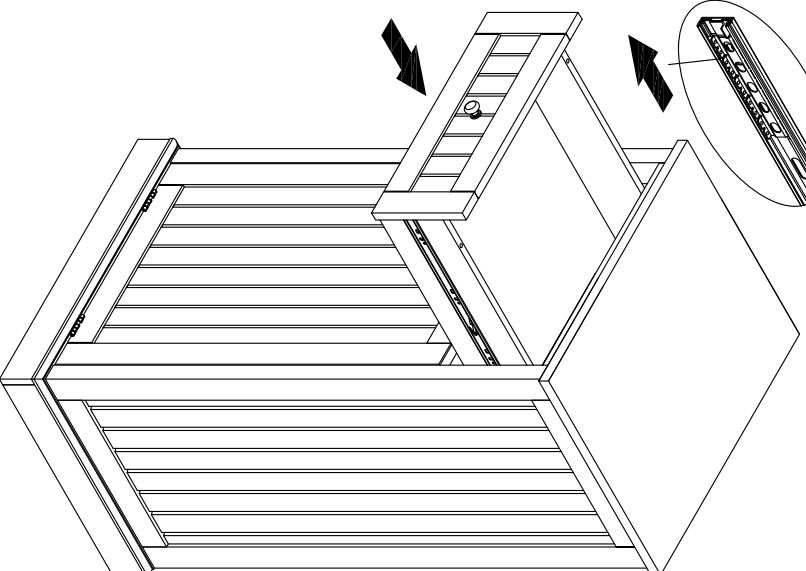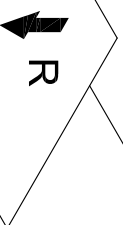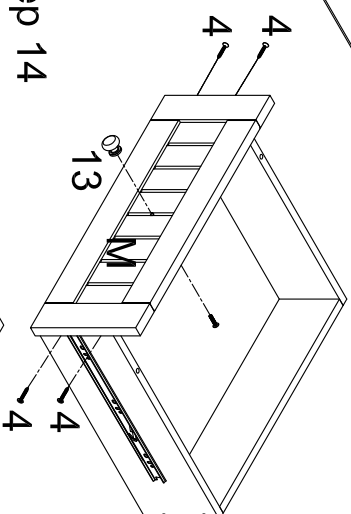

    Step 15

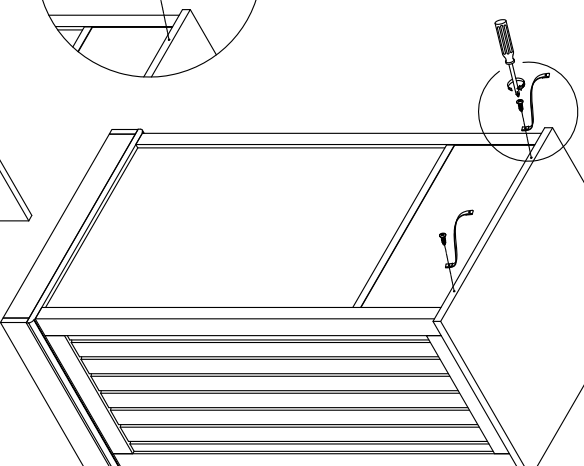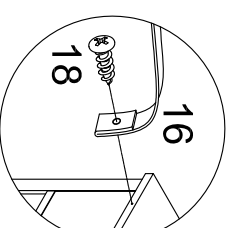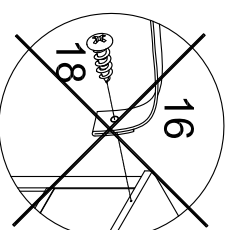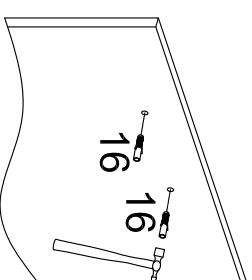

Step 16

