 


# CONVENIENCE CONCEPTS

203055 BL

203055 W

Oxford TV Stand

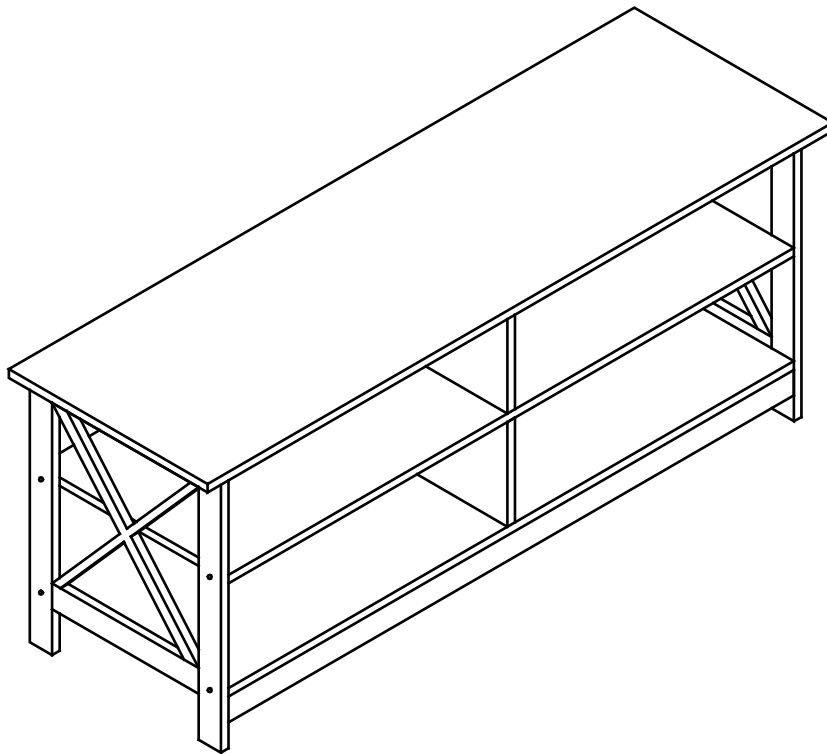

## Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish.

Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

 


Please do not return to the store

Broken or missing Hardware?

Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at [parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

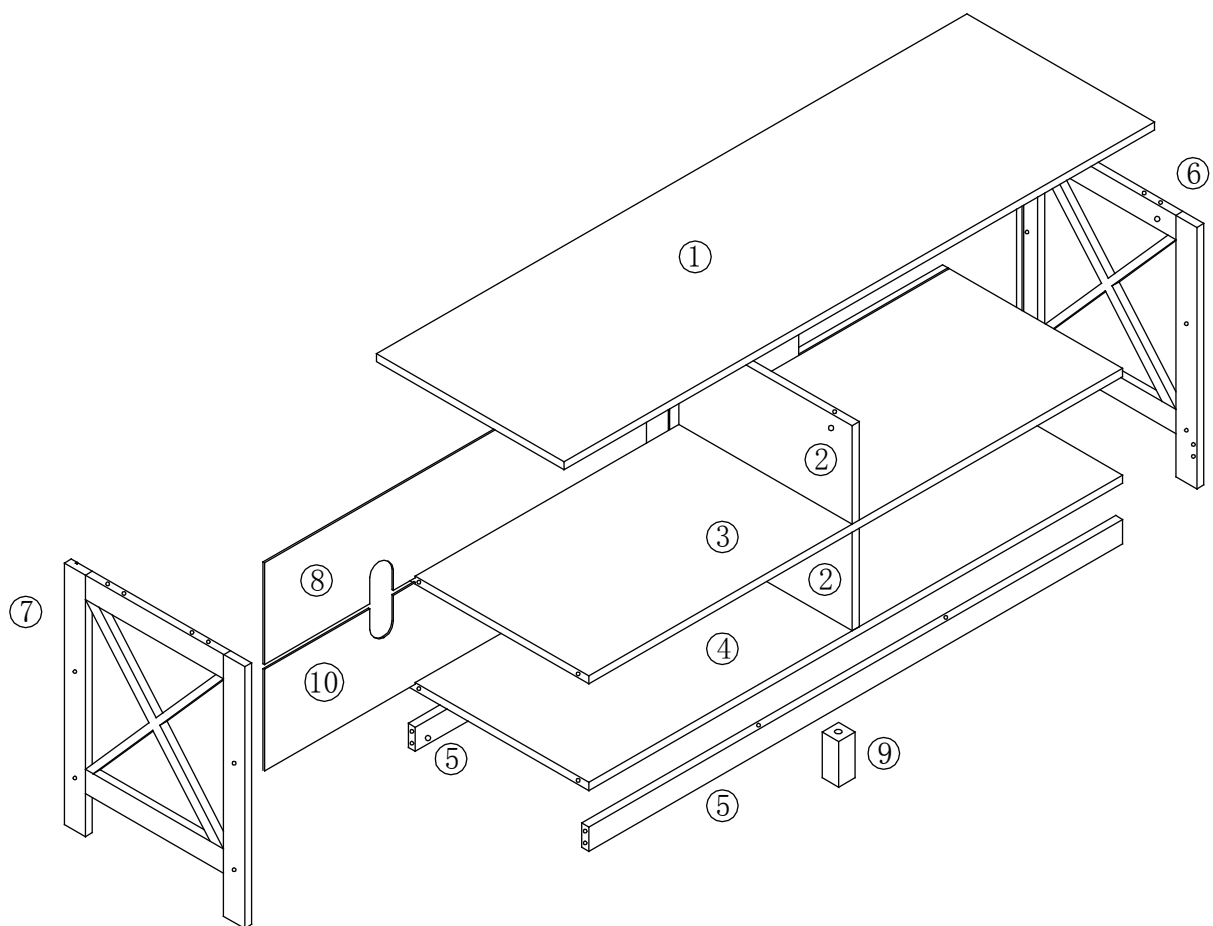


A x16



B x16



 C x8




D x8



E x8




 F x5




G x8

 Assembling the unit with cams and wood dowels.


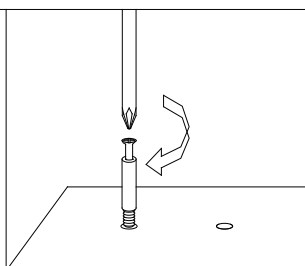


 Gently screw cam  
dowel into the  
threaded anchor.

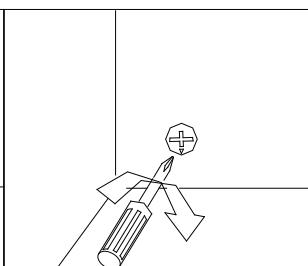


Insert cam lock with  
arrow pointing down.  
Screw the cam firmly  
into locked position.

## Step 1

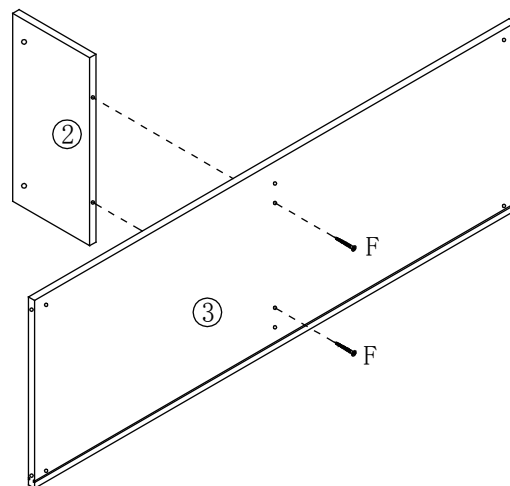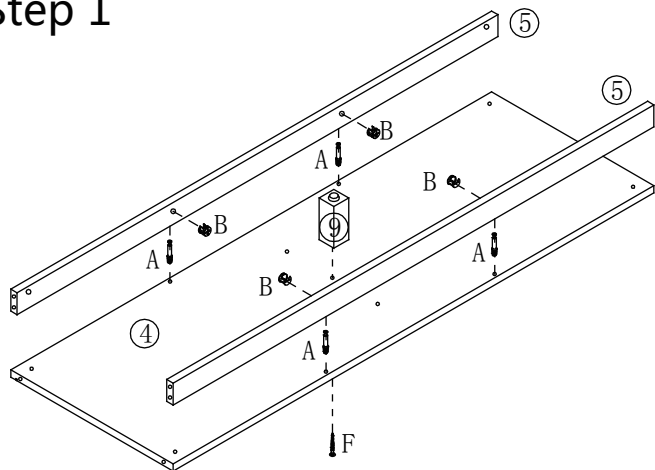  


1. Attach foot to panel (4) with screws (F).
2. Attach bottom rails (5) to panel (4) using camlock hardware. Attach panel (2) to panel (3) using screws (F).

## Step 2

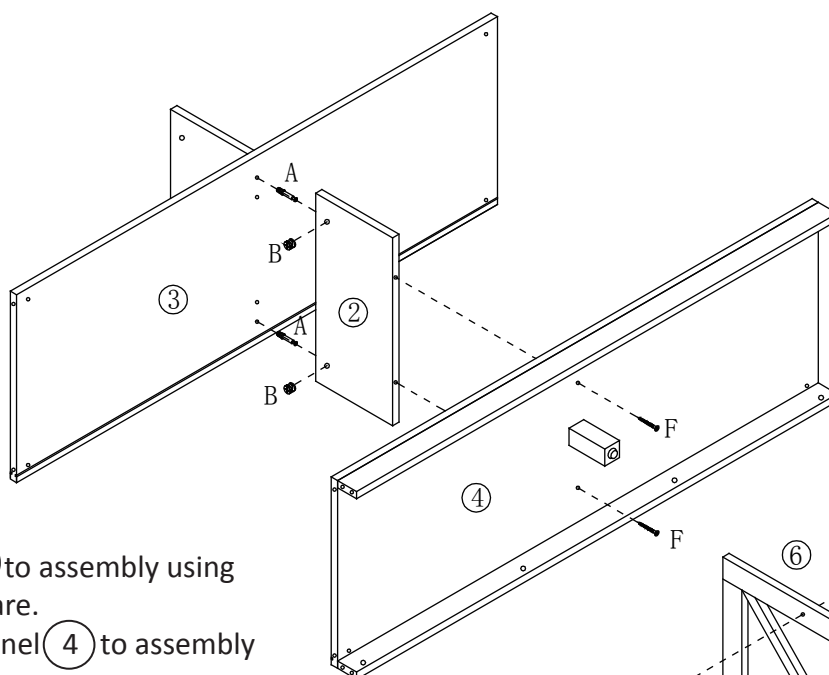 

1. Attach panel (2) to assembly using camlock hardware.
2. Attach bottom panel (4) to assembly using screws (F).


## Step 3

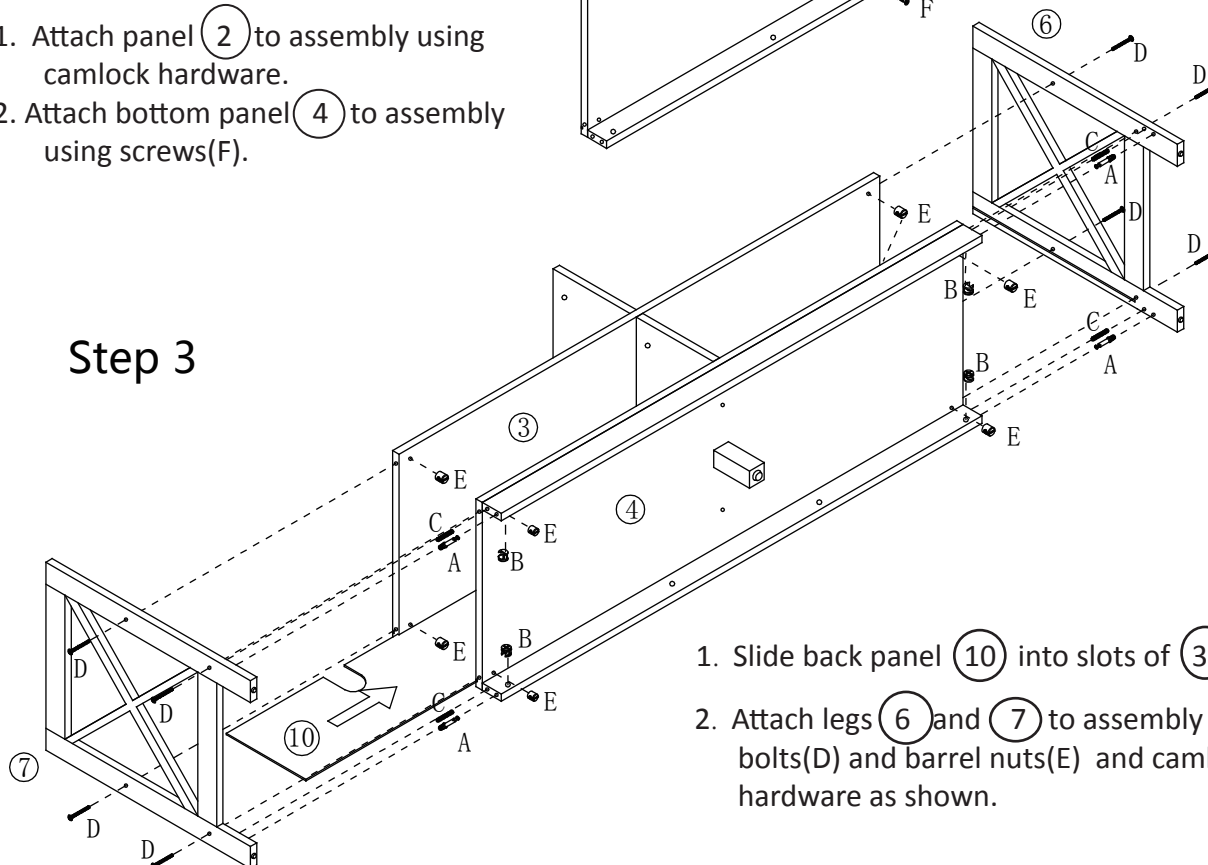 

1. Slide back panel (10) into slots of (3) and (4).
2. Attach legs (6) and (7) to assembly using SSSg allen bolts (D) and barrel nuts (E) and camlock hardware as shown.


Note: Barrel nut (E) threads must face bolt holes.

## Step 4

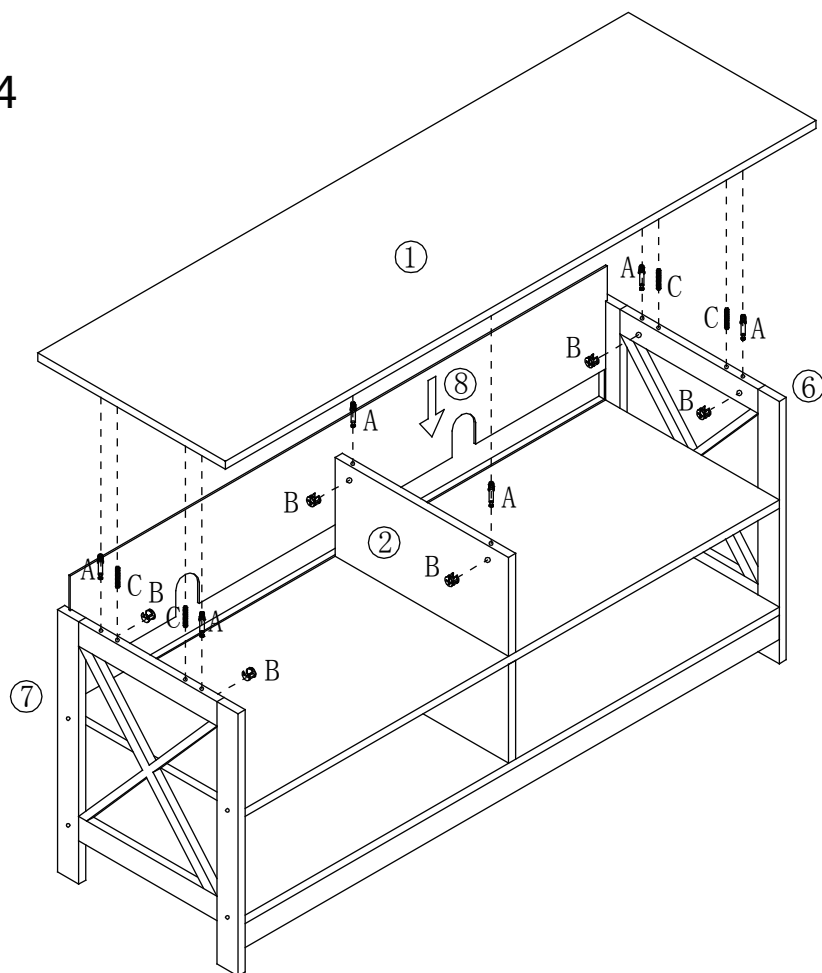 

Attach top panel ① to unit using camlock hardware as shown.

## Step 5

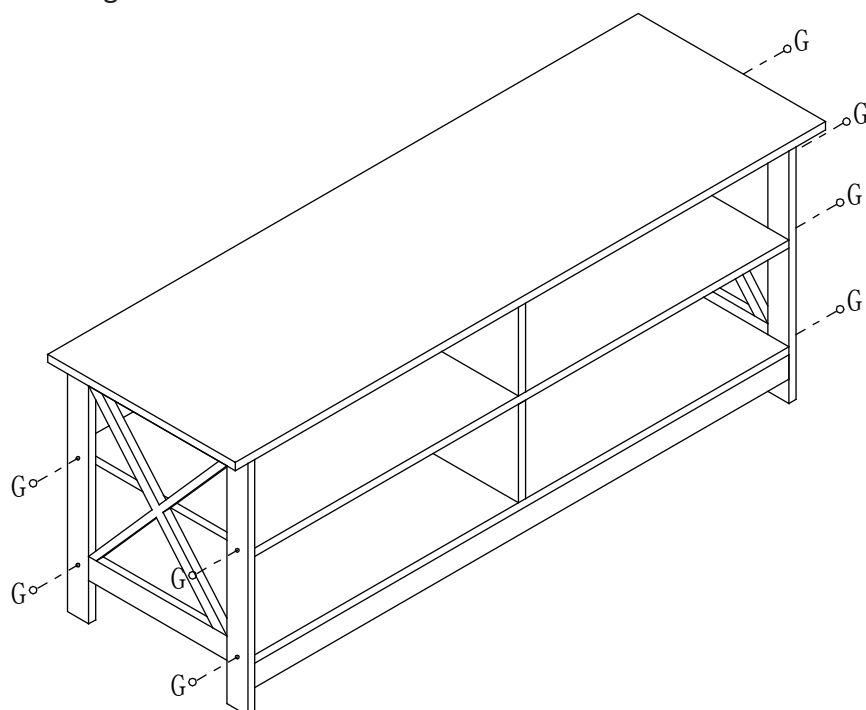 

1. Apply stickers (G) over bolt holes on sides of legs.
2. Enjoy!