



**AVAILABLE PARTS ARE:**  
 32248SHBRAT (SHORTER SHADE)  
 32248SHRAT (TALLER SHADE)  
 HPYBULBSHIELD (GLASS DOME)

## ASSEMBLY INSTRUCTIONS

### READ AND SAVE THESE INSTRUCTIONS

READ INSTRUCTIONS ALL THE WAY THROUGH PRIOR TO ASSEMBLY. THIS LAMP SHOULD TAKE APPROXIMATELY 20 MINUTES TO ASSEMBLE. MAKE SURE ALL PARTS ARE FIRMLY TIGHTENED.

**WARNING:** WHEN USING FOR OUTDOOR USE, FOLLOW IMPORTANT SAFETY INSTRUCTIONS LISTED AT BOTTOM OF PAGE TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, AND PERSONAL INJURY.

TWO PEOPLE ARE REQUIRED TO ASSEMBLE THIS LAMP.

**NOTE:** PLEASE BE CAREFUL, DO NOT DAMAGE THE SWITCH.

### UNPACK THE LAMP

YOU SHOULD HAVE RECEIVED THE FOLLOWING PARTS IN THE PACKAGE: UPPER CAGE ASSEMBLY, LOWER CAGE ASSEMBLY, (2) SHADES, LOWER SOCKET ASSEMBLY, (2) GLASS DOMES, METAL WASHER, NUT AND WRENCH. TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE.

### ASSEMBLE THE LAMP

1. TAKE OUT OF THE SHADES FROM CAGE, THEN REMOVE THE PLASTIC BAG FROM THE SHADES.
2. PLACE THE LOWER SOCKET ASSEMBLY INTO SHORTER SHADE, THEN PLACE THE SHORTER SHADE INTO UPPER CAGE, MAKE SURE THE WIRE TUBE IN THE UPPER CAGE INSERTED INTO THE NOTCH OF SHORTER SHADE AND THE LOWER SOCKET ASSEMBLY EXITS FROM BOTTOM OF THE SHORTER SHADE.
3. INSTALL A 100 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO UPPER SOCKET.
4. SCREW A GLASS DOME TO THE UPPER GLASS DOME HOLDER.
5. PLACE THE TALLER SHADE INTO LOWER CAGE, MAKE SURE THE WIRE TUBE IN THE LOWER CAGE INSERTED INTO THE NOTCH OF TALLER SHADE.
6. INSERT THE NIPPLE OF LOWER SOCKET ASSEMBLY INTO THE HOLE IN BASE AND SECURE WITH METAL WASHER AND NUT FROM BOTTOM OF BASE. (WRENCH INCLUDED)
7. INSTALL A 100 WATT MAXIMUM MEDIUM BASE TYPE "A" BULB (NOT INCLUDED) INTO LOWER SOCKET.
8. SCREW A GLASS DOME TO THE LOWER GLASS DOME HOLDER.
9. LAY DOWN THE UPPER CAGE ASSEMBLY AND LOWER CAGE ASSEMBLY ON A SMOOTH, FLAT FLOOR, PULL THE EXCESS POWER CORD THROUGH THE BASE.
10. STAND THE LOWER CAGE ASSEMBLY ON FLAT FLOOR, PLACE THE UPPER CAGE ASSEMBLY WITH SHADE ONTO TOP OF THE LOWER CAGE, MAKE SURE THE SHADES ARE INSERTED INTO THE INNER METAL RING OF UPPER CAGE.
11. LINE UP THE HOLES IN UPPER CAGE WITH THE HOLES IN LOWER CAGE AND SECURE WITH (3) BALL SCREWS.
12. PLUG THE POWER CORD INTO AN OUTLET AND TURN ON AT SWITCH.

### BULB REPLACEMENT

1. BEFORE REPLACING THE BULB, BE SURE THAT THE GLASS DOME AND BULB ARE COOL AND LAMP IS UNPLUGGED.
2. DISASSEMBLE THE LAMP AND UNSCREW GLASS DOME AND EXISTING BULB, REPLACE WITH A NEW BULB AND RECOVER THE GLASS DOME.
3. REASSEMBLE THE LAMP AND PLUG POWER SUPPLY CORD BACK INTO OUTLET.

### TROUBLE SHOOTING

1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE OUTLET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE POWER OUTLET.
2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET. CHECK THE BULB FOR A BROKEN FILAMENT. REPLACE BULB IF NECESSARY, PLUG IN LAMP AND TURN IT ON.
3. IF THE LAMP STILL DOES NOT LIGHT, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

### IMPORTANT SAFETY INSTRUCTIONS

1. USE ONLY THREE-WIRE OUTDOOR EXTENSION CORDS THAT HAVE THREE-PRONG GROUNDING PLUGS AND GROUNDING RECEPTACLES THAT ACCEPT THE APPLIANCE'S PLUG.
2. GROUND FAULT CIRCUIT INTERRUPTER (GFCI) PROTECTION IS TO BE PROVIDED ON THE CIRCUIT OR OUTLET TO BE USED FOR THE WET LOCATION PORTABLE LUMINAIRE. RECEPTACLES ARE AVAILABLE HAVING BUILT-IN GFCI PROTECTION AND ARE ABLE TO BE USED FOR THIS MEASURE FOR THIS MEASURE OR SAFETY.
3. USE ONLY WITH AN EXTENSION CORD FOR OUTDOOR USE. SUCH AS AN EXTENSION CORD OF CORD TYPE SW, SW-A. SOW, SOW-A, STW, STW-A, STOW, STOW-A, SJW, SJW-A, SJOW, SJOW-A, SJTW, SJTW-A, OR SJTOW, SJTOW-A.

