BT-9076 PARTS (1)X1 ASSEMBLY INSTRUCTION (7)X5 2 -(5) Φ -(8) -(9) (2)-(2)X1 (8)X12 **-(7)** ③ (3)X1(L)X1(R) (9)X4 (4)-(1) (1) (10) (8) >==+0(0) -=-(3) _ **energ** (1) - energ (1) (4)X1 (10) (8) (10)X8 (4) -(2) (4)6 **(5)** (11)X1 (5)X1 -(1) -(3) (6)X1 **--(5)**

-(6)

(7)