



Parker House
FURNITURE


Assembly Instruction

Item NO: TID Console Wall

Rev :2021-07-27

Preinstallation notes:

- Always build near final resting position.

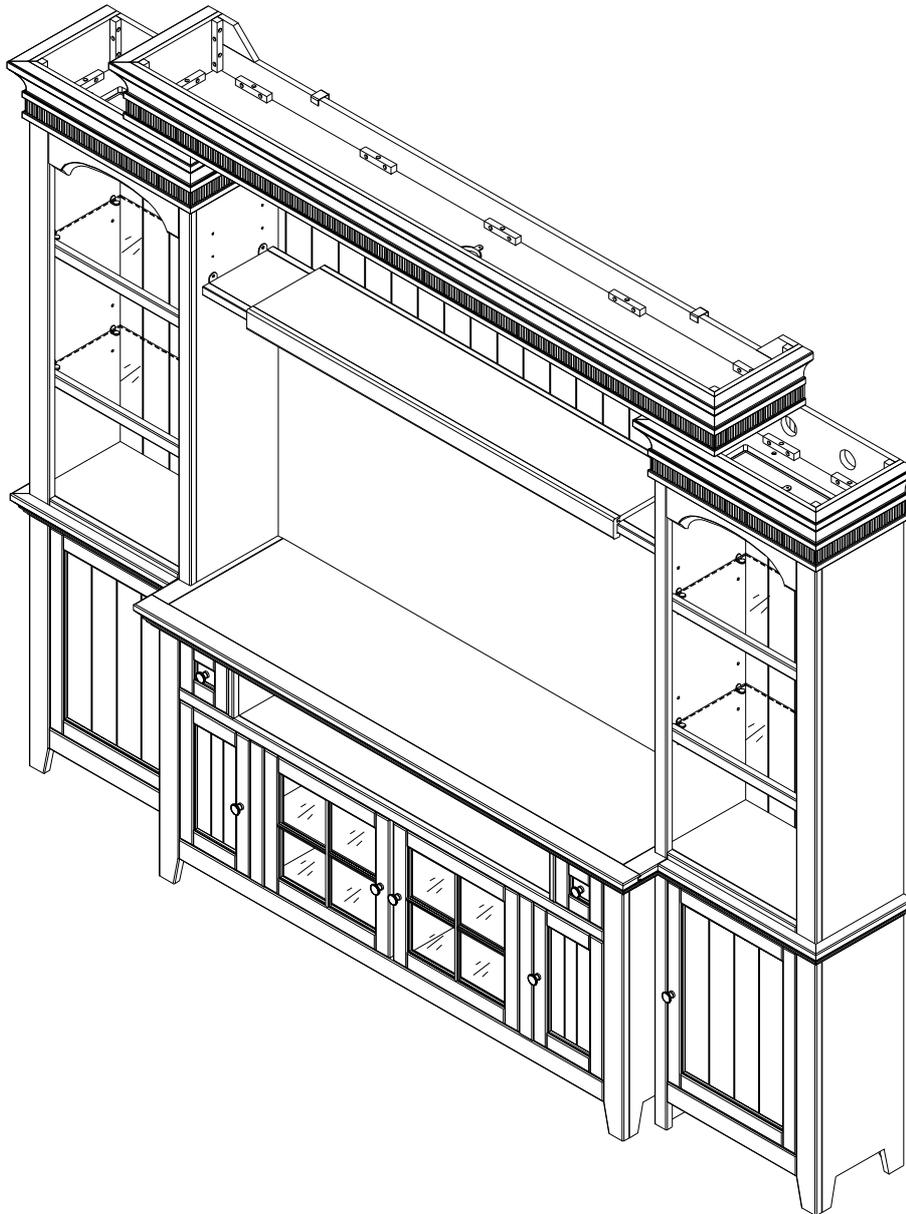




Assembly Instruction


Item NO:TID#50/TID#62/TID#72

Rev :2021-07-27


The TID Bridge & Piers is compatible with the following TV Consoles:

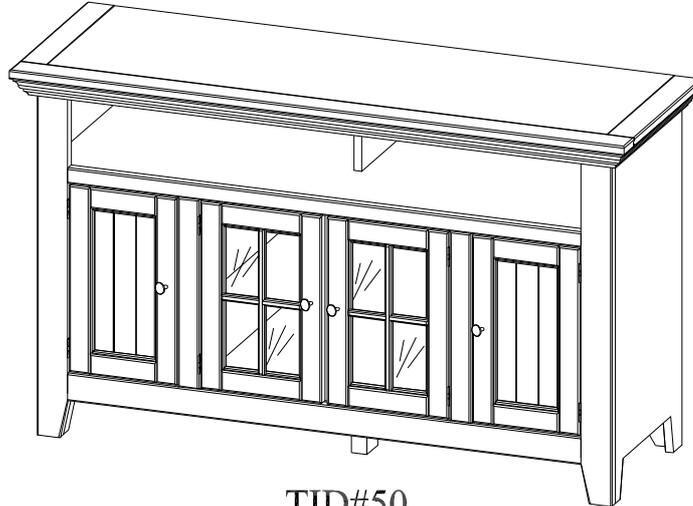

TID#50

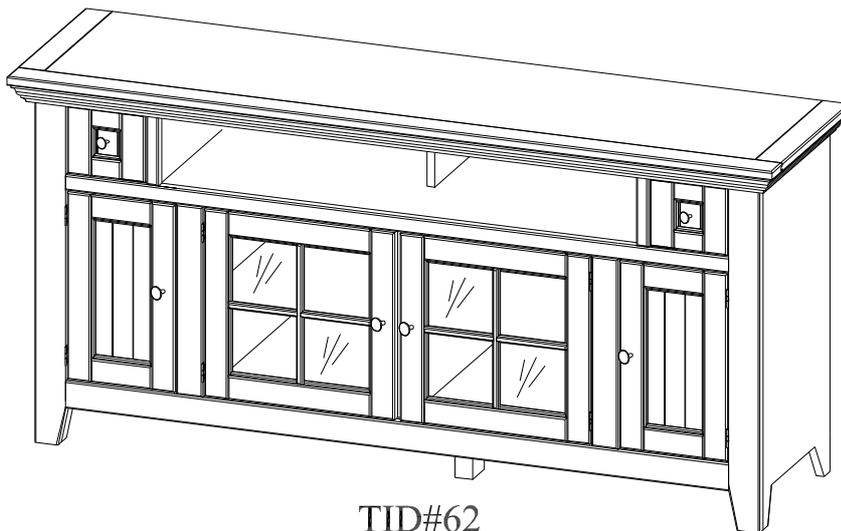

TID#62

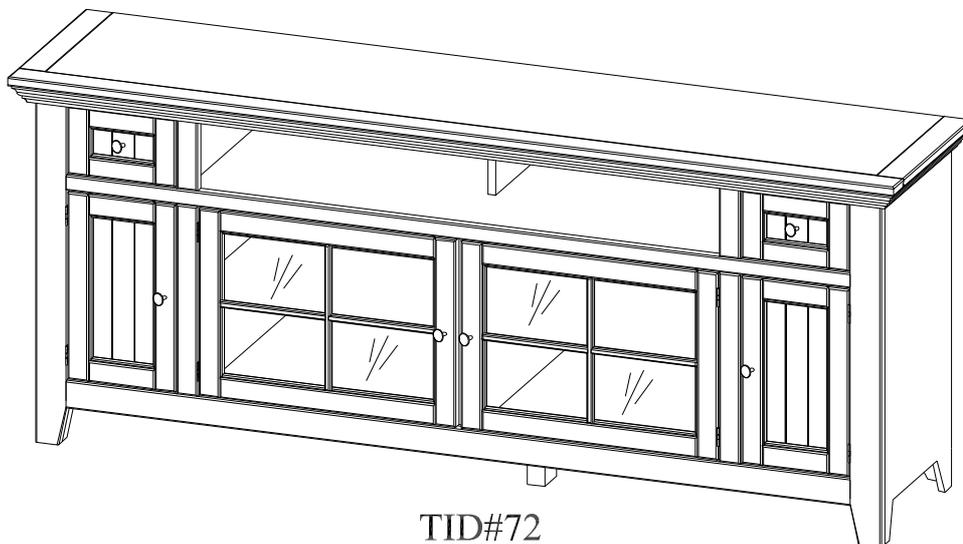



TID#72



Assembly Instruction

Item NO:TID#250P

Rev :2021-07-27

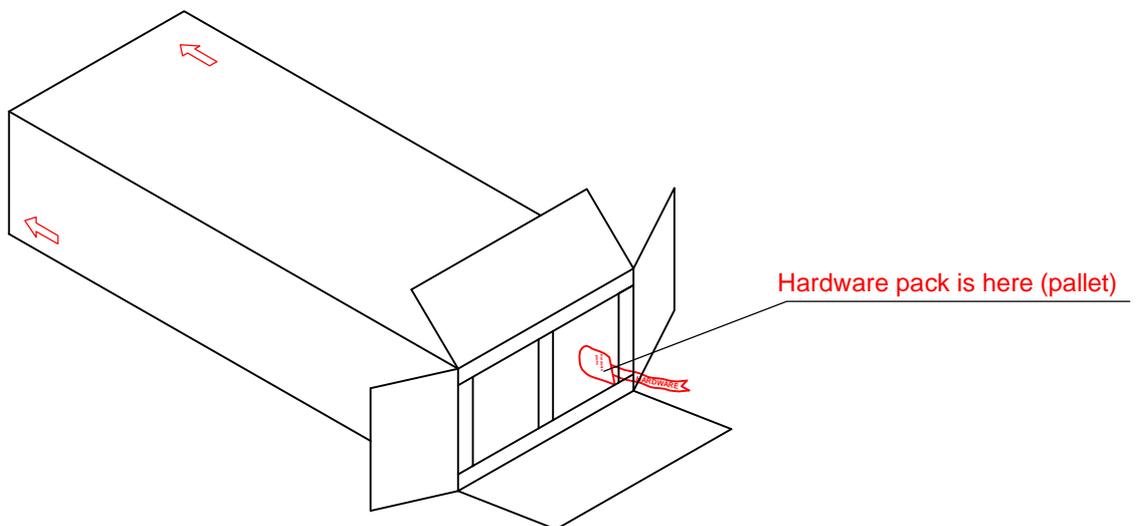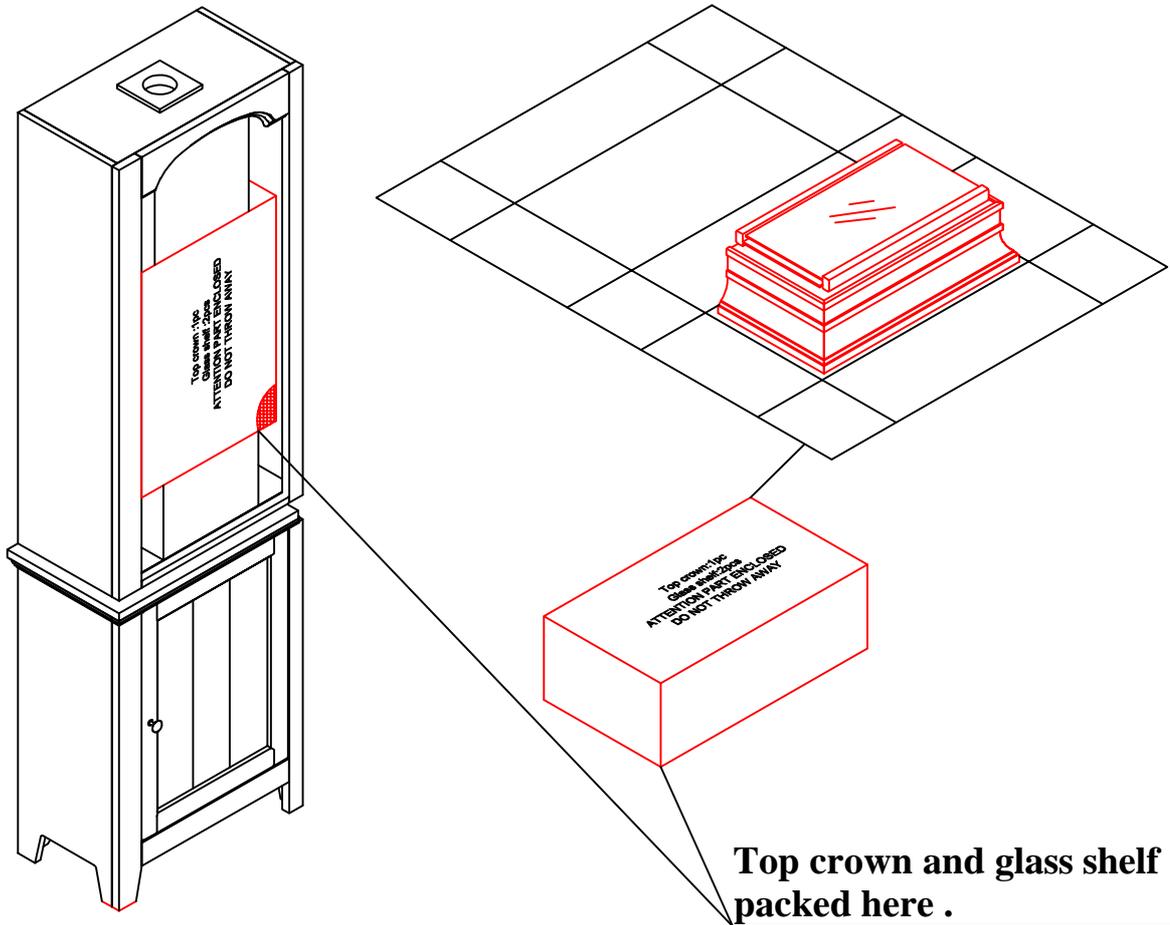



Parker House
FURNITURE


Assembly Instruction

Item NO:TID#250P

Rev :2021-07-27

Secure Crowns onto each Pier with Wood Screw (A) as shown.
Note: Crown is not load bearing when moving unit into final position.

NO	Description	Sketch	Q'TY
A	Wood screws 1"		16
B	Shelf pin		16

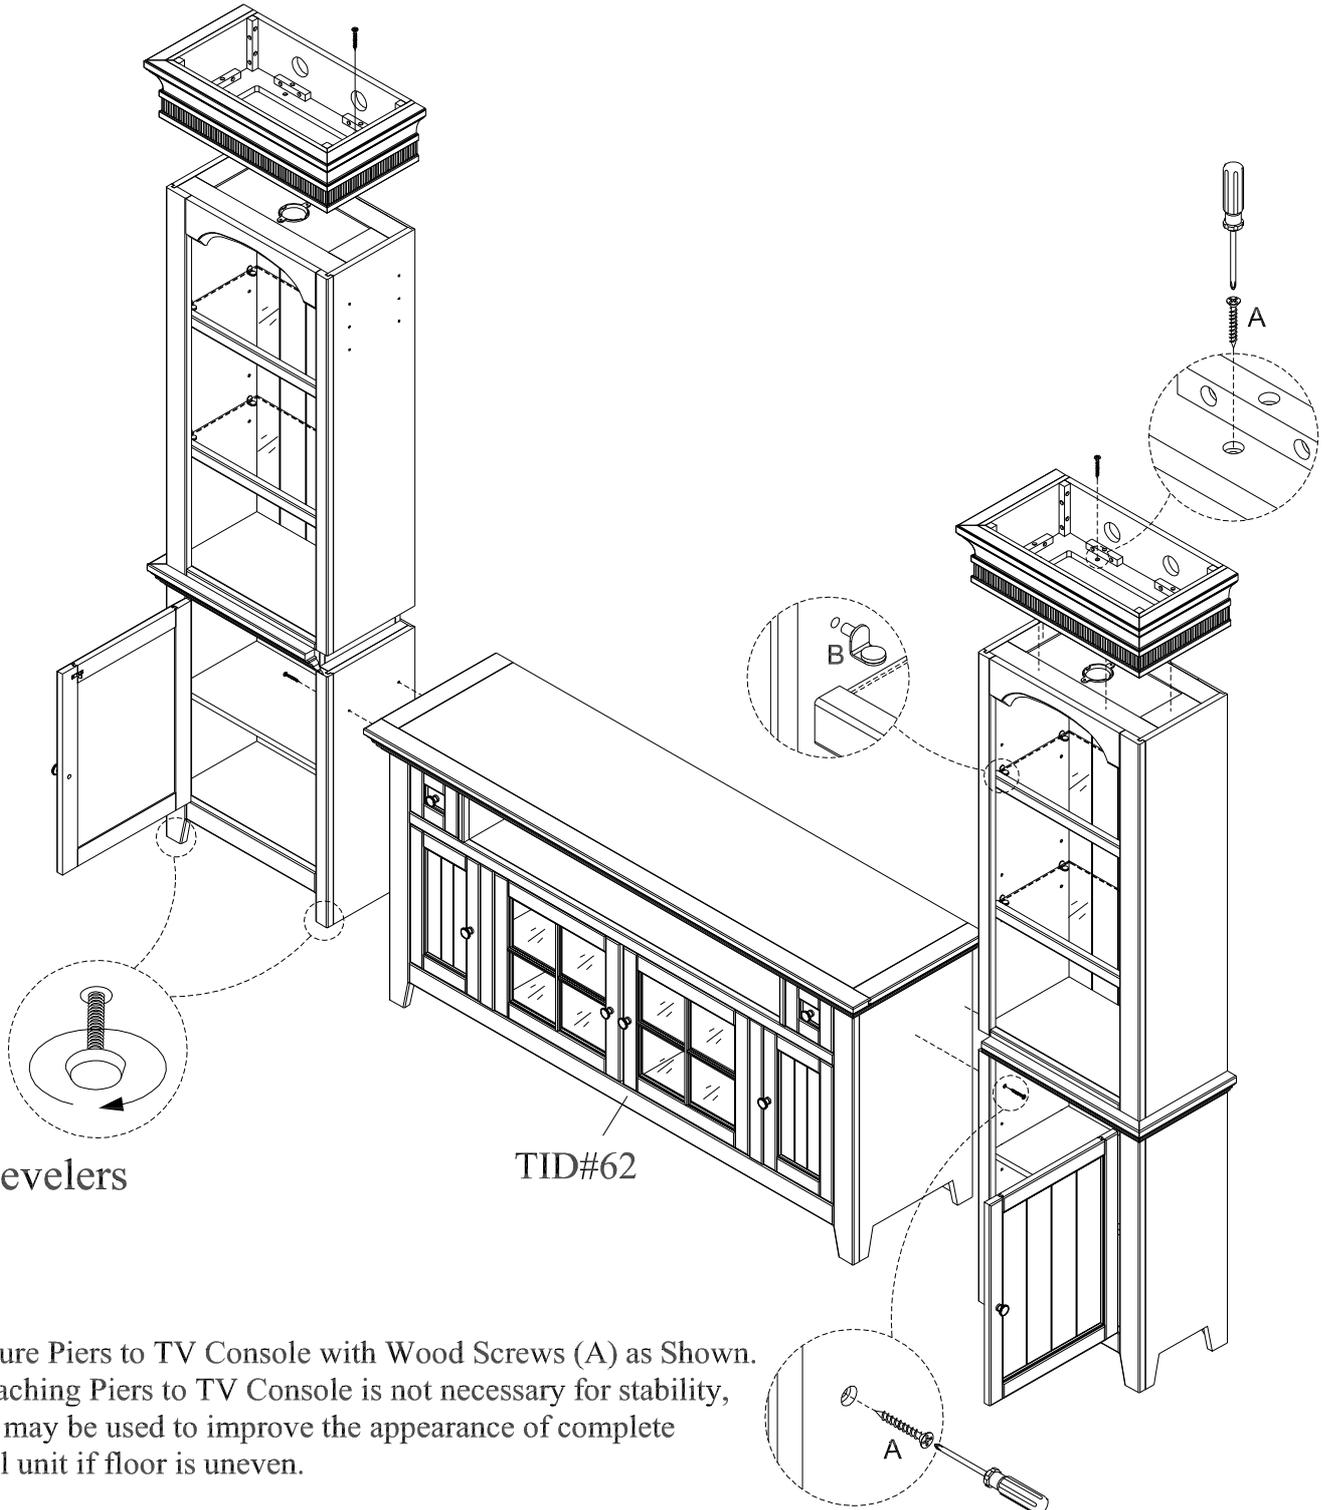

Levelers

TID#62

Secure Piers to TV Console with Wood Screws (A) as Shown.
Attaching Piers to TV Console is not necessary for stability,
but may be used to improve the appearance of complete
wall unit if floor is uneven.



Parker House
FURNITURE


Assembly Instruction

Item NO:TID#100

Rev :2021-07-27


Secure Large Shelf Pin to both Pier and expandable TV area shelf as shown with Wood Screws (A). To expand shelf, loosen screws underneath it, expand shelf extensions, to proper position in TV area, then re-secure shelf extensions by re-tightening screws.

NO	Description	Sketch	Q'TY
A	Wood screws 22mm		4
B	Wood screws 1/2"		22
C	Large Shelf Pin		4
D	Hooks		2
E	Wood screws 10mm		4

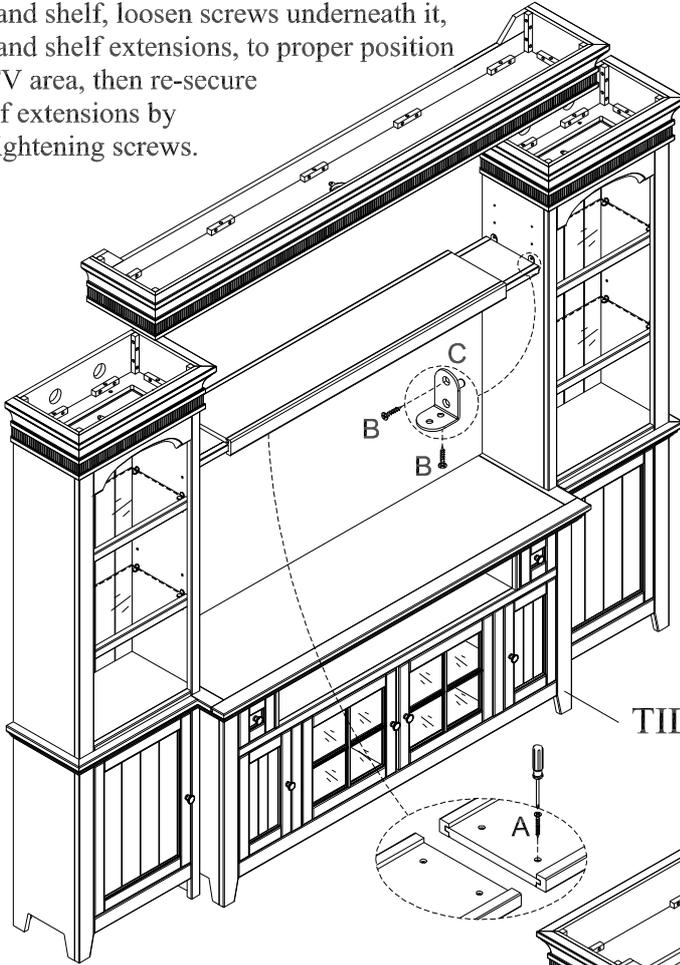

TID#62

Connect Pier lights to dimmer unit on Bridge.

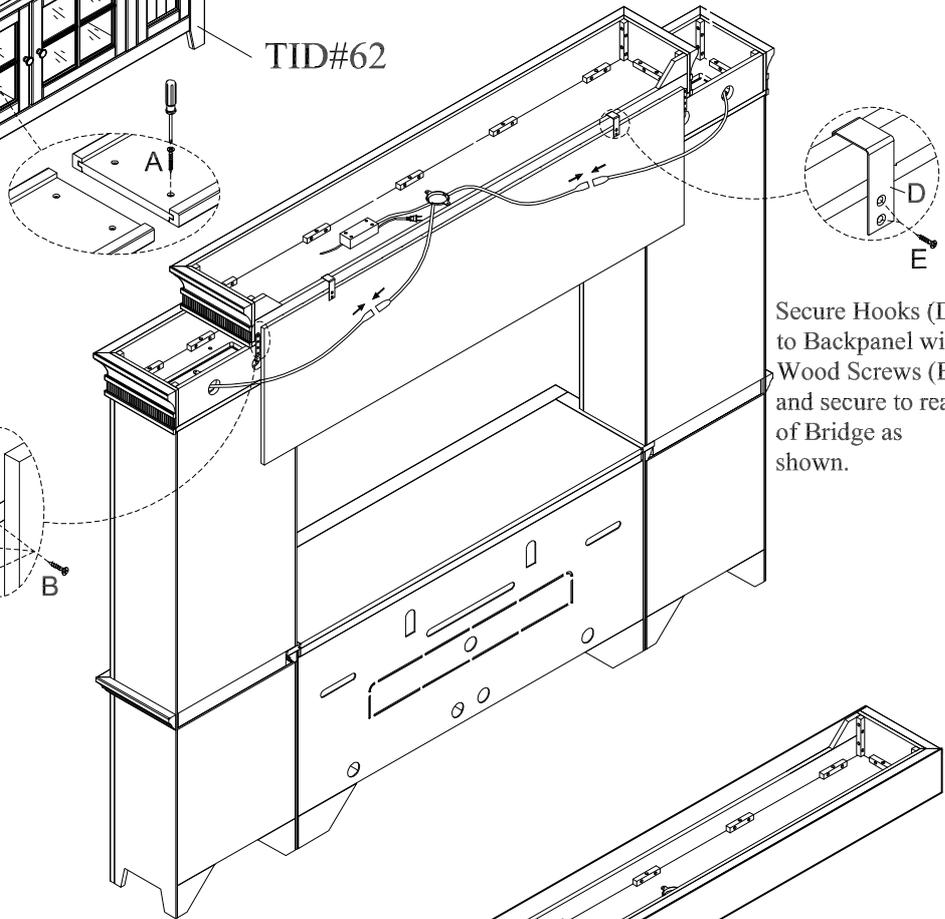

To secure Bridge to Pier, adjust Connector Plate located at rear of Bridge, and secure with Wood Screws (B) as shown.


Secure Hooks (D) to Backpanel with Wood Screws (E), and secure to rear of Bridge as shown.

Hardware pack is here



Anti-Tip Hardware Installation Instructions

Notice: In homes where small children may be present, Parker House recommends that steps be taken for certain furniture items to prevent or minimize the risk of tip-over. This furniture is equipped with Tip-over Restraint Hardware for use to minimize this risk, if used. Please follow below installation steps. Parker House recommends that parents and guardians periodically visit the U.S. Consumer Product Safety Commission (CPSC) website at <http://www.cpsc.gov/> and stay up to date on all issues related to children's product safety.

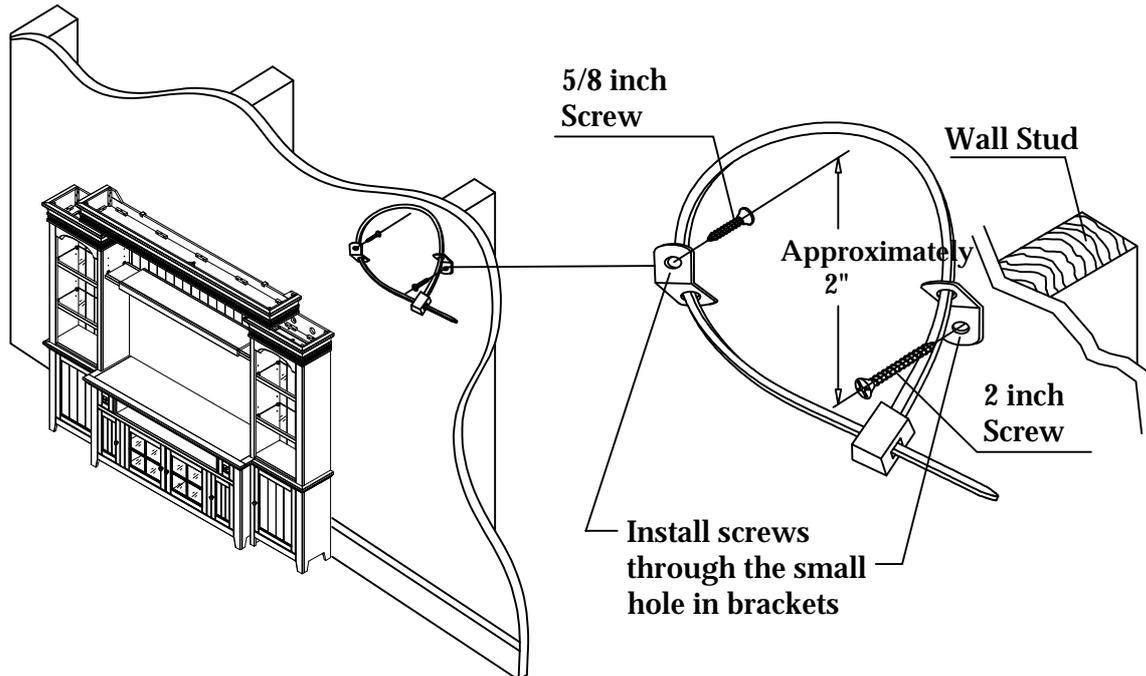

1. Temporarily locate the furniture to near its final location in the room next to a wall. Locate a wall stud behind your furniture and also mark the stud's location on the back of your furniture.
2. Firmly attach one bracket to the stud approximately 2" below the top of the furniture with the 2 inch long Wood Screws provided. It may be necessary to drill 3/32 dia. pilot holes for the screws.
3. Firmly attach the other bracket onto a solid, structural part on the back of the furniture using the 5/8 inch long Wood Screws. It may also be necessary to pilot bore for these screws.
4. Move the furniture into its final position, taking care to line up the wall bracket with the furniture bracket. Thread a strap through the bracket as shown in the illustration. Tighten strap until snug but do not over tighten.

Caution: Parker House assumes no liability for improper installation or excessive loads placed on screws, brackets or straps. Failure to detach this restraint before moving furniture may result in personal injury and property damage.

Warning: This tip-over restraint is not to be a substitute for proper adult supervision. Do not allow children to climb on furniture. Items left on top of the TV and furniture, such as toys, remote controls, and treats might tempt young children to climb. Push the TV as far back as possible from the front of its stand. Place electrical cords out of a child's reach, and teach children not to play with the cords.