


FL-003

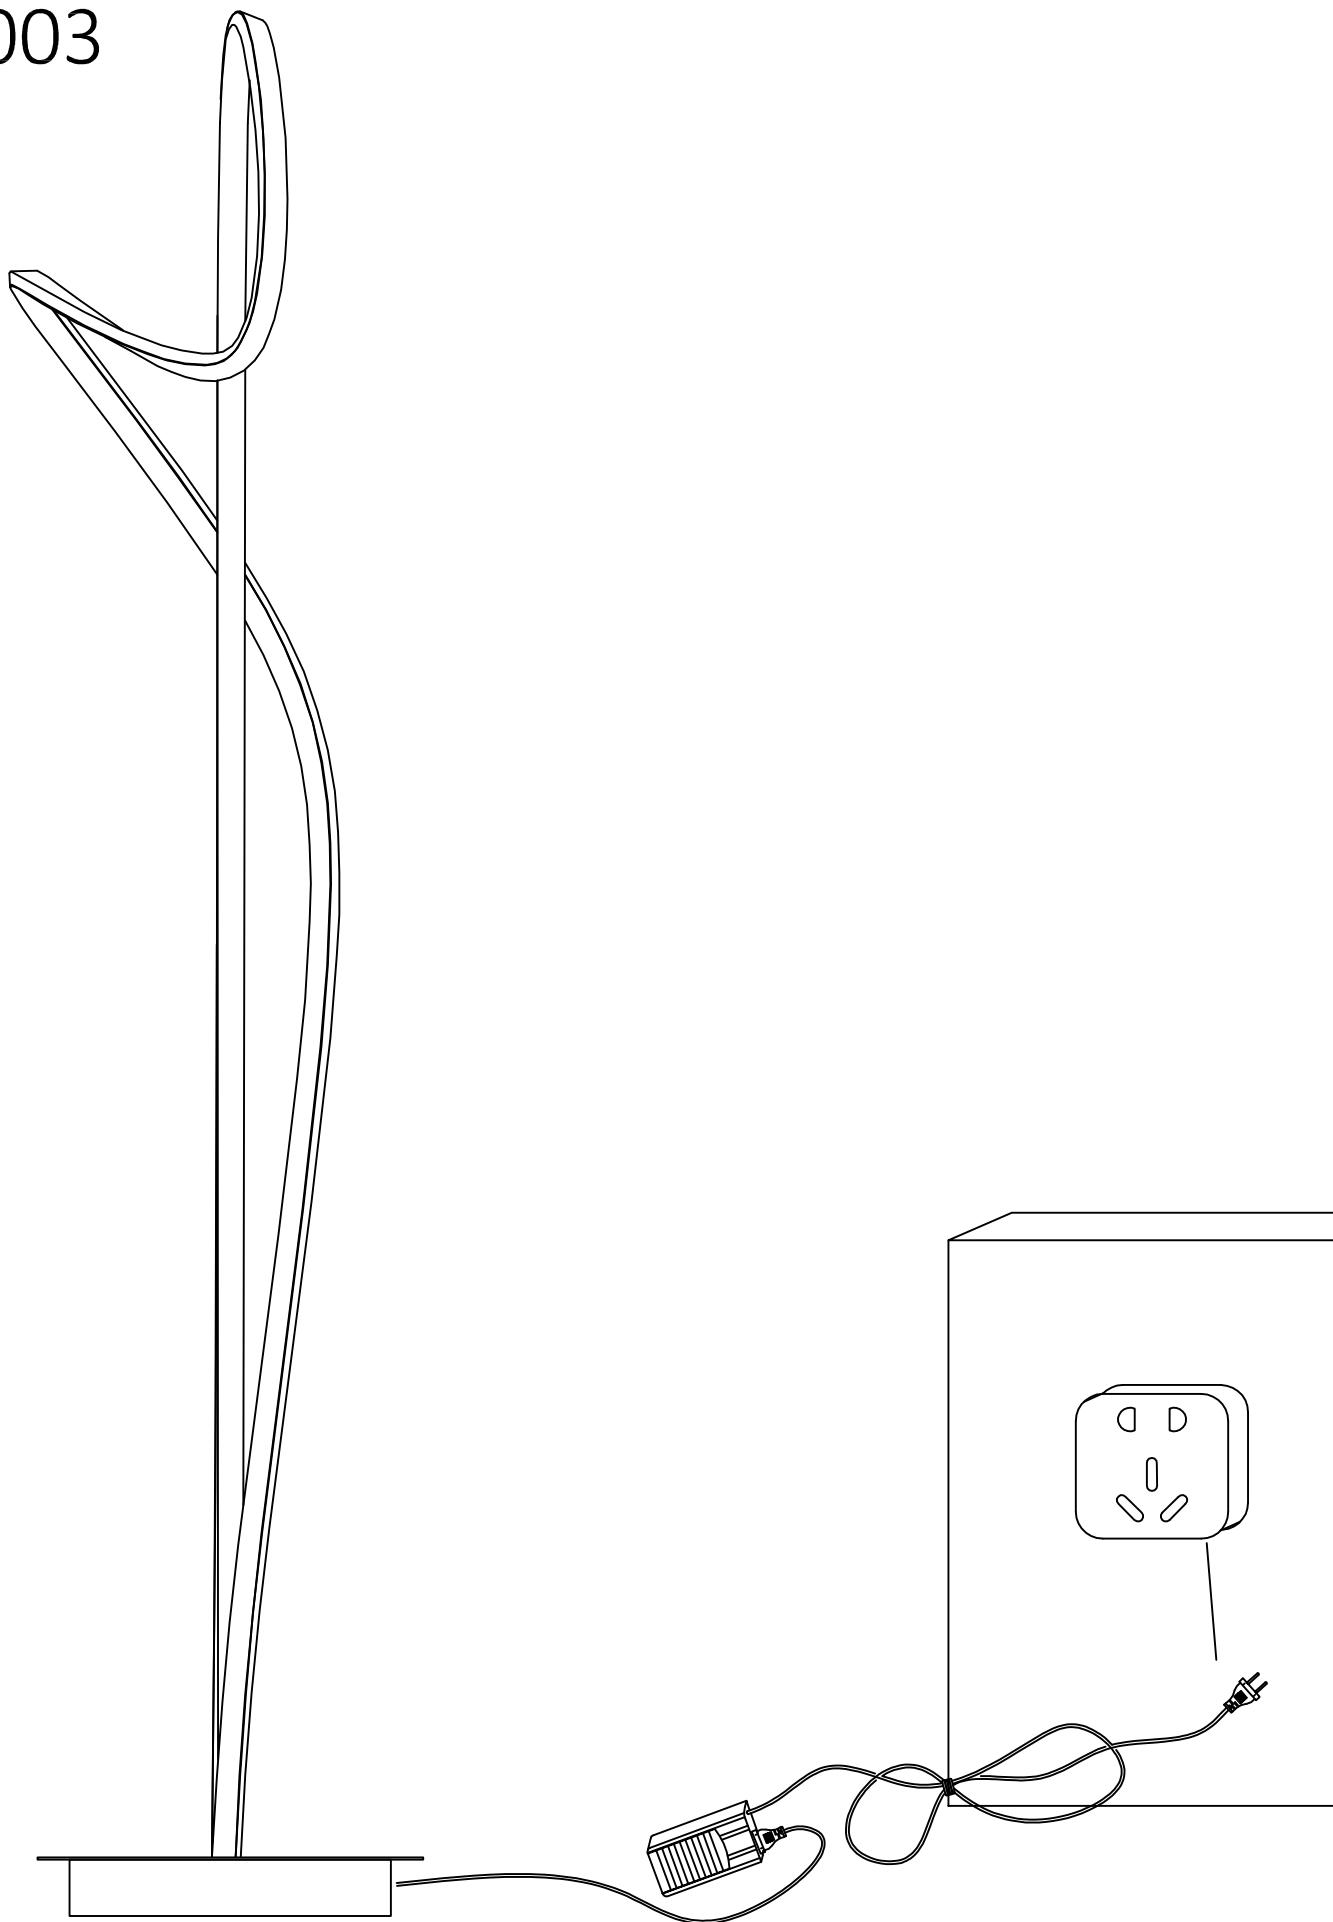

- 1.This light fitting operates at a normal supply voltage of 100-120V.
- 2.When changing the bulb or fuses,always switch off at the mains and allow the old bulb to cool downbefore handling.