


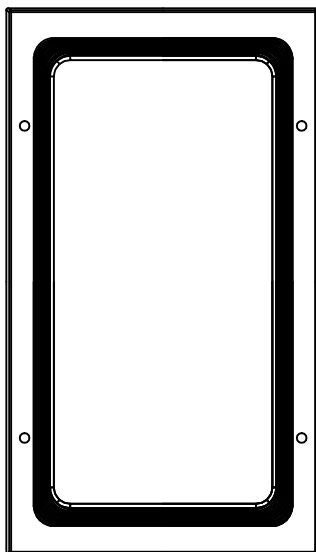

PRODUCT NAME:WALL PACK
ITEM NUMBER:55550CLBK

Please consult your electrician for hanging fixture and wiring.



WARNING:Wires need to be connected to driver found in canopy and should not be connected directly to power source or a short may occur

55550CLBK : 15W LED 3000K NO DIMMABLE




PRODUCT NAME:WALL PACK

ITEM NUMBER:55550CLBK

CAUTION:Turn off the main power at the circuit breaker before installing and servicing the fixture to prevent possible injury from electric shock.

All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

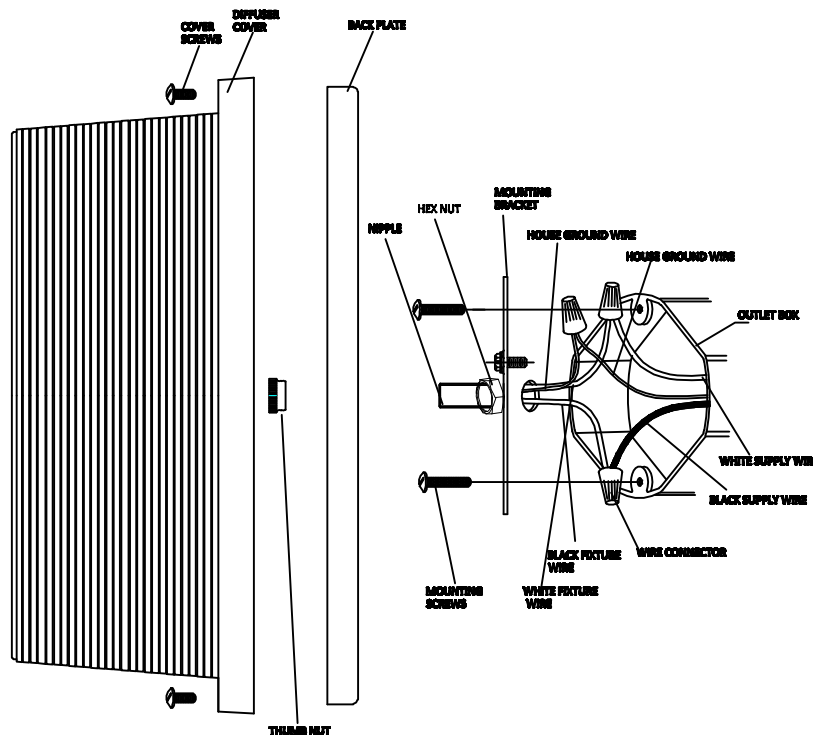

- 1:Thread the 1/8" IPS HEX NUT onto the NIPPLE, and screw the NIPPLE into the center hole off MOUNTING BRACKET. Do not tighten the HEX NUT at this time. (Fig.1)
- 2:Pull the power supply wires out from the OUTLET BOX, and mount the MOUNTING BRACKET to the OUTLET BOX , using MOUNTING SCREWS.
- 3:Feed the fixture wires through the provided hole on the FOAM PAD. Place the FOAMPAD inside the BACK PLATE of the fixture.
- 4:Make the following wiring connections using the provided WIRE NUTS WHITE SUPPLY WIRE TO WHITE FIXTURE WIRE ,BLACK SUPPLY WIRE TO BLACK FIXTURE WIRE ,SUPPLY GROUND WIRE TO FIXTURE GROUND WIRE
- 5:Place the BACK PLATE of the fixture over the OUTLET BOX and onto the NIPPLE , and adjust the NIPPLE until it protrudes out from the BACK PLATE 1/4". Remove the BACK ,PLATE and secure the position of the NIPPLE by tightening the HEX NUT against the MOUNTING BRACKET. Place the BACK PLATE back onto the NIPPLE , and secure into place using the THUMB NUT provided.
- 6:Apply the FOAM ADHESIVE STRIPS around the inner edge of the DIFFUSER COVER .
- 7:Attach the DIFFUSER COVER onto the BACK PLATE using the four COVER SCREWS