ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS: 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed.

2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread.

3. Keep all hardware parts out of reach of children.

NOTE: THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY.

Tool needed: Screwdriver & Rubber Mallet (not provided).

. 1	DARTHOT					
•	PART LIST					
9	ITEM	DESCRIPTION	BOX	QTY		
	Α	CHAIR	1	1 PC		
	В	BACK RAIL	1	1 PC		
	С	FRONT RAIL	1	1 PC		
	D	LEG	1	2 PCS		

HARDWARE LIST (BOX : 1)							
ITEM	DESCRIPTION		QTY				
1	JCBC BOLT M6 x 50mm	⊕	4 PCS				
2	M6 SPRING WASHER	0	4 PCS				
3	WOOD SCREW M4 x 45mm		4 PCS				
4	WOOD DOWEL M8 x 30mm		5 PCS				
5	M4 ALLEN KEY (BALL SHAPE)	>	1 PC				



