



ITEM #: RV-CSF146-707

IMPORTANT SAFETY INSTRUCTIONS

- To avoid injury or damage, mount only on a surface that is sturdy.
- To avoid electric shock, make sure the electricity is turned off at the main circuit breaker panel. If you are replacing an existing fixture, turn off the following in order: fixture, wall switch, and main fuse or breaker box.
Note: Some types of fuses must be unscrewed to shut the power off.
- If you are unclear as to how to proceed, please consult a licensed electrician.

UNPACK THE FIXTURE: Check the contents of the box. Box should contain all items on the parts diagram.



For any replacement parts or installation issues, please Contact Us!

Email: help@kira-home.com

Facebook/Instagram: @KiraHomeDecor

Phone: 888.208.2085

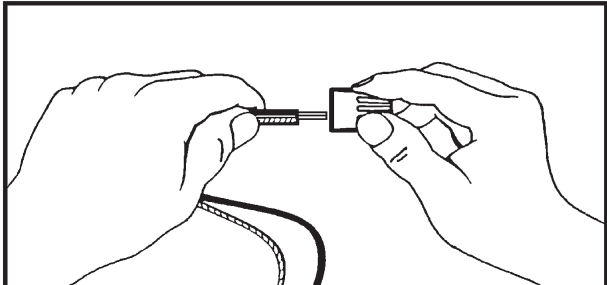

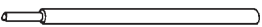
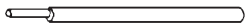





INSTALLATION INSTRUCTIONS

1. Slide Shade (J) onto Center Plate (G) and secure in place with Cap Nuts (H).
2. Install light bulbs (not included) into the sockets.
3. Thread 1/4" of Screw Stem (K) into the bottom of the socket assembly and secure in place using the hex nut. Remove Hex Nut (O) from the opposite end of Screw Stem (K). Adjust remaining hex nut to 1/2".
4. Thread Metal Washer (L), Rubber Washer (M) and Diffuser (N) onto Screw Stem (K).
5. Secure Diffuser (N) in place with remaining Rubber Washer (M), Metal Washer (L) and Hex Nut (O). Attach Cap (P) and secure with Finial (Q).
6. Hook Metal Frame (I) over Shade (J).
7. Measure the canopy height on Canopy Assembly (E) with measuring tape. Adjust Canopy Screws (C) on Mounting Plate (A) to the height of the measured canopy plus 1/4" to allow them to protrude through the canopy during installation. Lock Canopy Screws (C) in place with the hex nuts.
8. Secure Mounting Plate (A) to the junction box (not included) using Mounting Screws (B) provided. Ensure Mounting Plate (A) is positioned with Canopy Screws (C) pointing away from the junction box.

9. Place Canopy Assembly (E) against the ceiling by inserting Canopy Screws (C) through the appropriate holes located on Canopy Assembly (E). Adjust Canopy Screws (C) and hex nuts until 1/4' of the threaded portion is visible. Remove Canopy Assembly (E) from the ceiling and set it aside.

Note: If 1/4" of Canopy Screws (C) are not visible, remove Canopy Assembly (E) and re-adjust Canopy Screws (C) to proper length and lock them in place with the hex nuts.

10. Using the wire graph below, connect the appropriate wires from the fixture to the corresponding wires in the electrical junction box (not included) and secure Wire Connectors (D).

	
Connect to BLACK house wire	Connect to WHITE house wire
BLACK 	WHITE 
PARALLEL WIRE (ROUND & SMOOTH) 	PARALLEL WIRE (RIBBED / RIDGED) 
WHITE OR GREY WITH TRACER 	WHITE OR GREY WITHOUT TRACER 
BROWN, GOLD OR BLACK WITHOUT TRACER 	BROWN, GOLD OR BLACK WITH TRACER 

A. Connect the ground wire (bare copper or green) from your fixture to the:

- 1) ground wire in the junction box, or
- 2) ground screw in the junction box

B. Connect the BLACK house wire to fixture hot wire that corresponds to diagram (black, round & smooth, white/grey with tracer, brown/gold without tracer).

C. Connect the WHITE house wire to fixture neutral wire that corresponds to diagram (white, ribbed/ridged, white/grey without tracer, brown/gold with tracer).

11. Place all wires and Wire Connectors (D) back into the junction box.

12. Place Canopy Assembly (E) against the ceiling, ensuring Canopy Screws (C) are protruding through the holes in the canopy on Canopy Assembly (E). Secure the fixture in place to the Mounting Plate (A) with Decorative Caps (F).

Note: If fixture does not sit flush against the ceiling, remove fixture and readjust Canopy Screws (C) and hex nuts.

Enjoy your new fixture!

ITEM #: RV-CSF146-707 - PARTS DIAGRAM

HELPFUL TOOLS: Safety Goggles, Screwdriver, Wire Cutter/Stripper, Ladder, Measuring Tape

