

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion, within the one-year warranty period. Proof of purchase, with the date of purchase as well as photos of the defective merchandise, must be provided. If you have any questions, comments or concerns please feel free to contact us by phone at: 888-881-4668. You may also contact us by email: [customerservice@serenityhealth.com](mailto:customerservice@serenityhealth.com), or via our webpage at: [www.serenityhealth.com/contact-us/](http://www.serenityhealth.com/contact-us/)



### **Art Deco Rippling Stream Outdoor Fountain**



#### **ASSEMBLY INSTRUCTIONS:**

**Please read the assembly and operating instructions carefully and observe the safety instructions. Keep these details in a safe place for future reference.**

Place the fountain on a level surface, away from areas where it is likely to get clogged with leaves and make sure that the cable will reach the socket.

**Follow the assembly steps below for this fountain as shown in the illustration above.**

**Step (1)** Route the water pump's power cord out through the plastic tube in the base pedestal, lay the water pump in the bottom of the fountain basin the base pedestal, and then route the water pump's power cord through the base pedestal, the cord exits through the bottom slot of the base pedestal. Lastly insert the stopple in the tip of the plastic tube.

**Step (2)** Insert, twist and lock the ball to the middle pedestal, make sure the water tube goes through the plastic tube in the middle pedestal.

**Step (3)** Connect the water tube to the outlet of the water pump. Insert, twist and lock the middle pedestal to the base pedestal.

**Step (4)** Fill the base pedestal with clean water and ensure pump is fully submerged.

**Step (5)** Plug the pump then water will start to flow soon.

- Adjust the pump flow rate to achieve the desired effect and to minimize any splashing. Splashing can occur if the flow rate is too high or the reservoir is too full. The flow rate can be increased or decreased by moving the flow rate control slider on the pump body. Moving the switch towards '+/ Max.' will increase the flow rate and moving it towards '-/Min' will decrease it. On some type of pumps, flow regulator may be turned clockwise or counterclockwise to adjust.

#### **Troubleshooting**

-- TURN OFF THE POWER BEFORE YOU CHECK FOLLOWING --

If pump does not run --

- (1) Check the circuit breaker, try another outlet.
- (2) Check the water level in the fountain. Running the pump without sufficient water can damage the pump.
- (3) Check the setting of the flow control on the pump and adjust the flow.
- (4) Check the pump discharge and intake for dirt and debris.
- (5) Check the fountain feature tubing for kinks and obstructions.
- (6) The pump might be "air locked". Plug and unplug the pump several times to release the air inside the pump.
- (7) Check and reconnect all the cords and try again.