


ASSEMBLY INSTRUCTIONS

ITEM#: OCS1406GYBG

Important Safety Instructions:

- Please read all instructions before beginning assembly
- Please make sure receive all the parcels to start the assembly
- For your safety and convenience, assembly by two people is recommended
- Use the parts and hardware lists to identify and separate each of the components included
- Save all packing materials until assembly is completed to avoid the accidental discarding of smaller parts or hardware

Note: You may find cushions placed underneath the table or between frames!

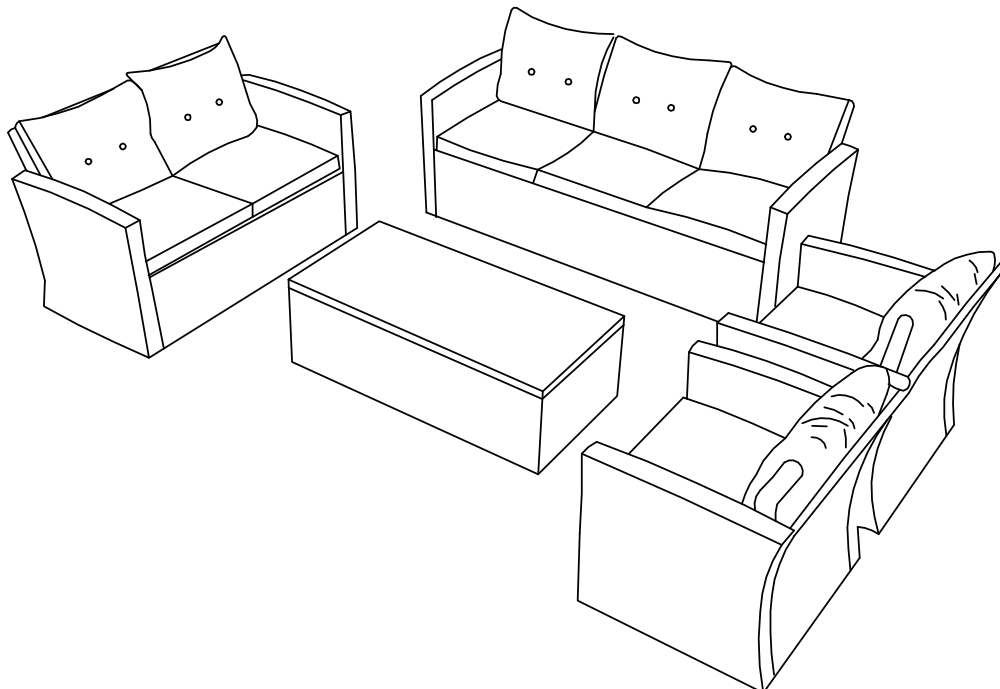



THANK YOU FOR PURCHASING

PARTS LIST



1	ARMREST A	4PCS	
2	ARMREST B	4PCS	
3	SOFA BACKREST	1PC	
4	SOFA SEAT	1PC	
5	CHAIR BACKREST	2PCS	
6	CHAIR SEAT	2PCS	
7	LOVESEAT BACKREST	1PC	
8	LOVESEAT SEAT	1PC	
9	TABLE TOP	1PC	
10	TABLE BASE	1PC	
11	TABLE SIDE FRONT	1PC	
12	TABLE SIDE A	1PC	
13	TABLE LONG SIDE BACK	1PC	
14	TABLE SIDE B	1PC	
15	SEAT CUSHION	7PCS	
16	BACK CUSHION	7PCS	

HARDWARE LIST



E		BOLT (M6x30 mm)	63PCS+1PC
F		WASHER	63PCS+1PC
H		ALLEN WRENCH	1PC
G		GAS SUPPORT STRUTS	2PCS
I		SELF-TAPPING SCREW ($\varnothing$ 3X16 mm)	9PCS+1PC
J		WRENCH	1PC

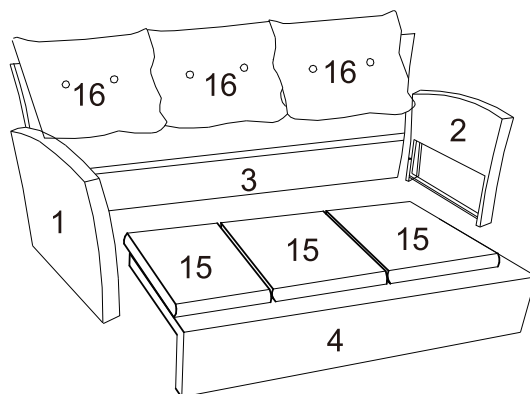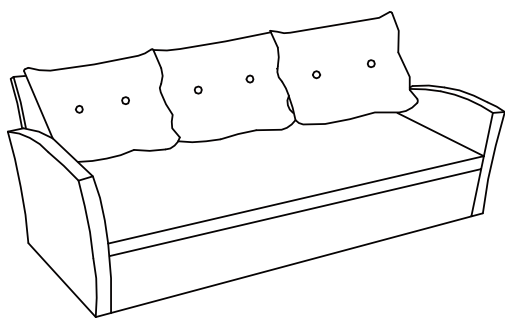

THREE SEATER SOFA X 1

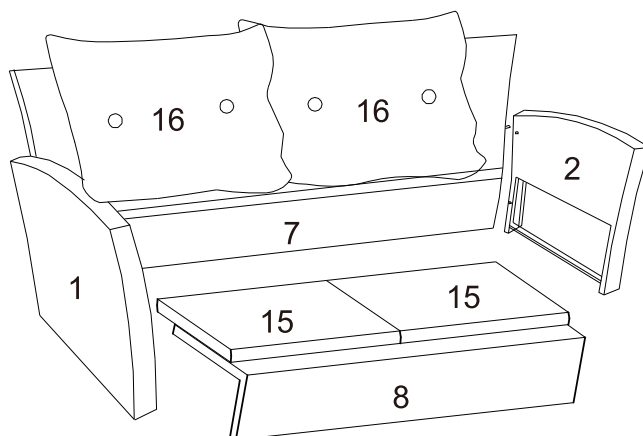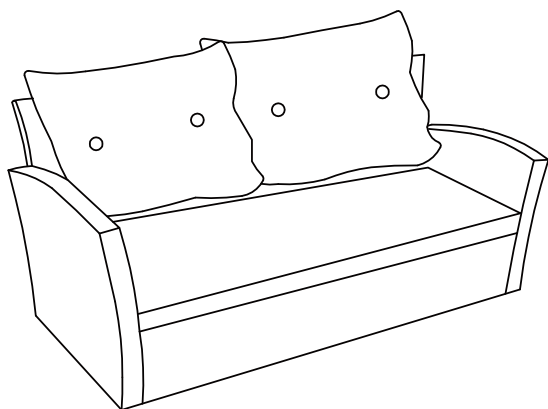

LOVESEAT X 1

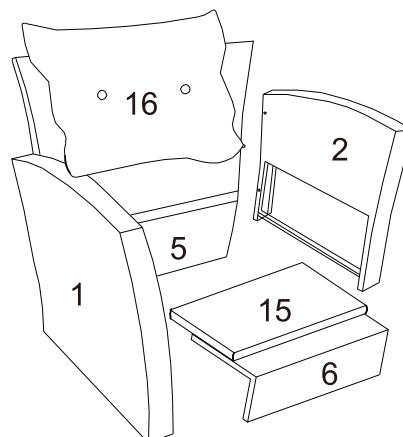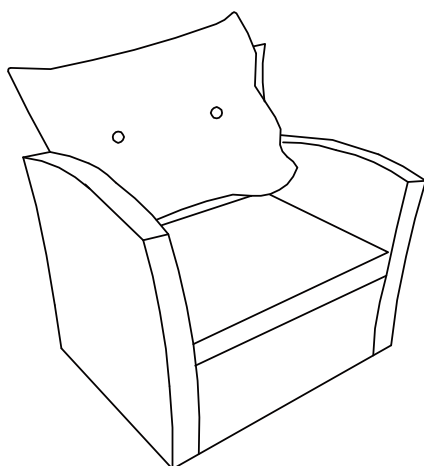

SINGLE CHAIR X 2



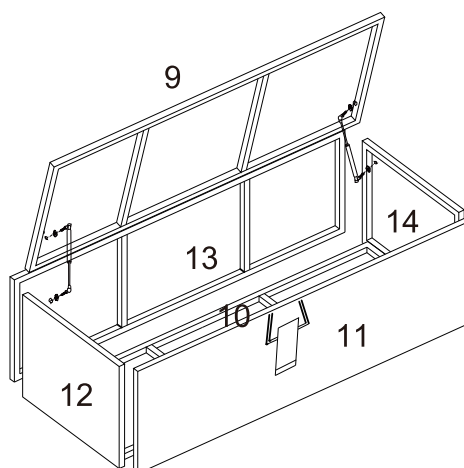






TABLE X 1

ASSEMBLY INSTRUCTION STEPS

Note: Do not tighten bolts until all parts are connected




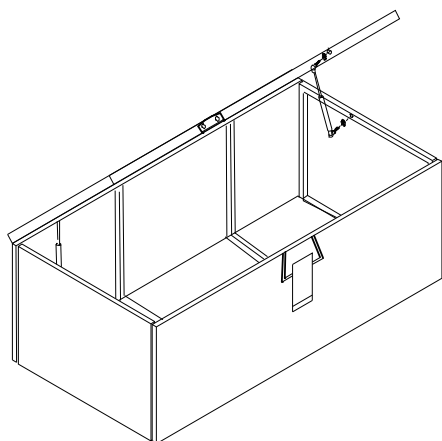
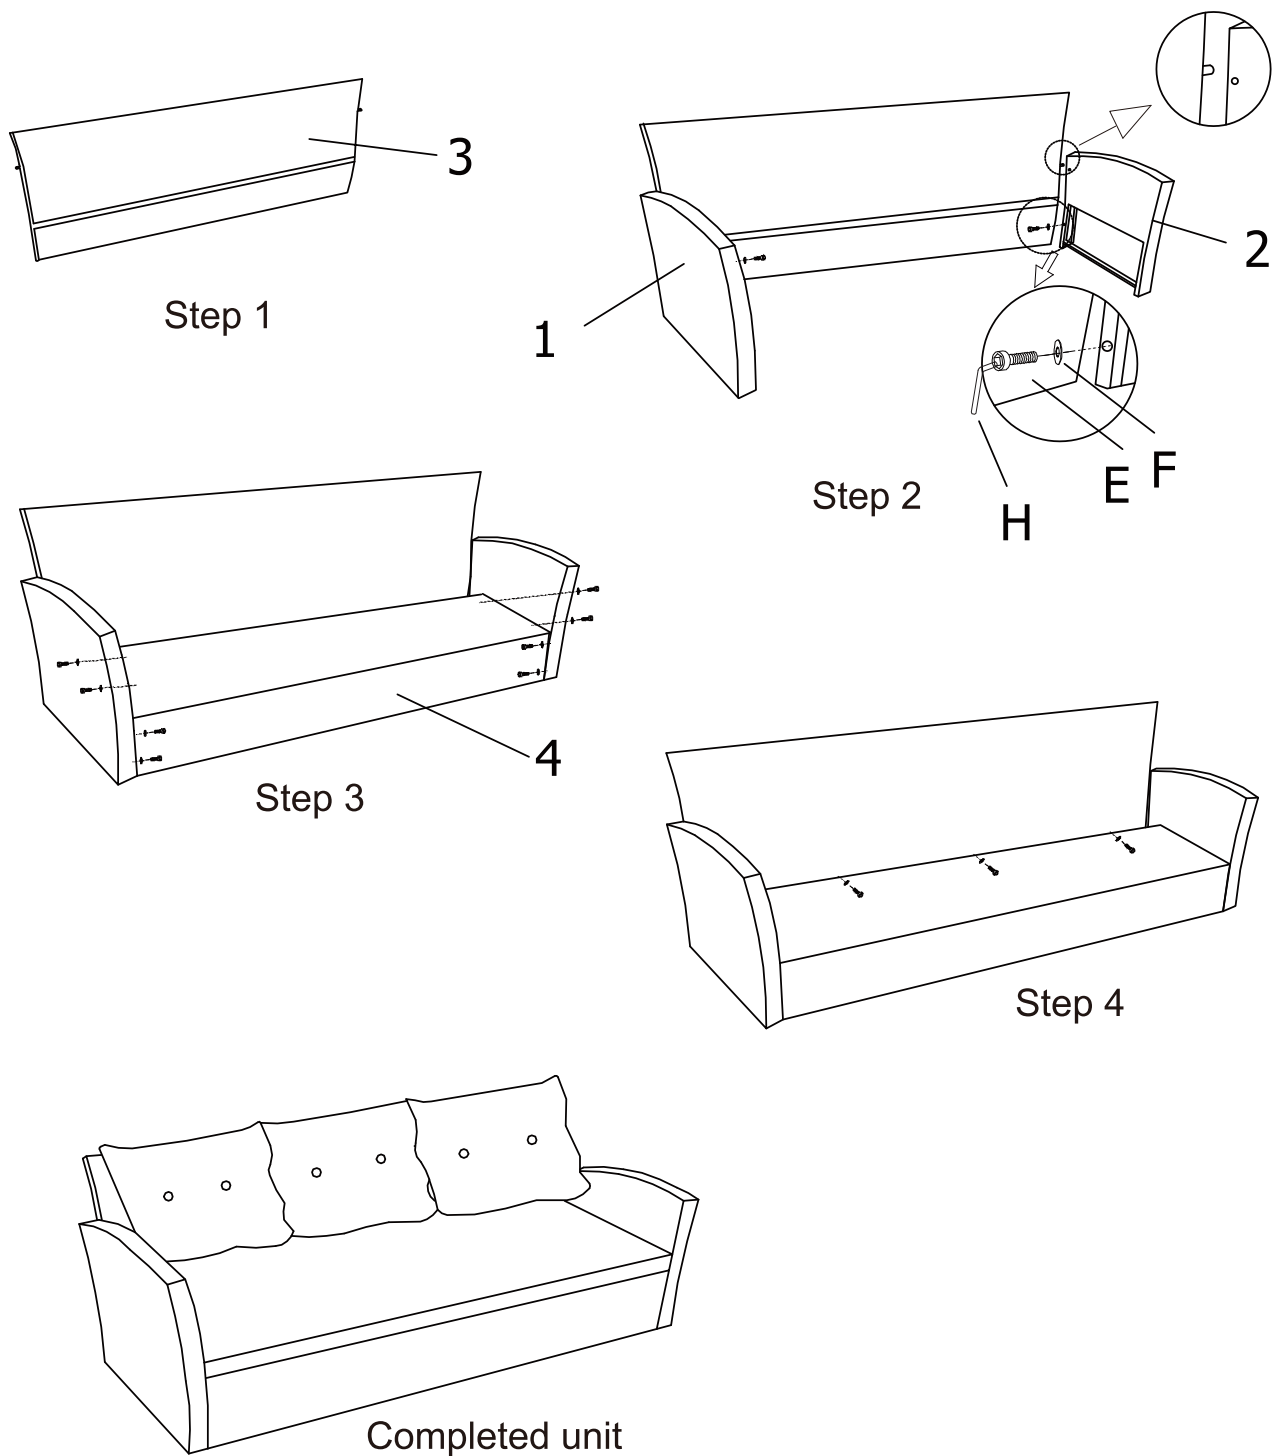


Note: Do not tighten bolts until all parts are connected

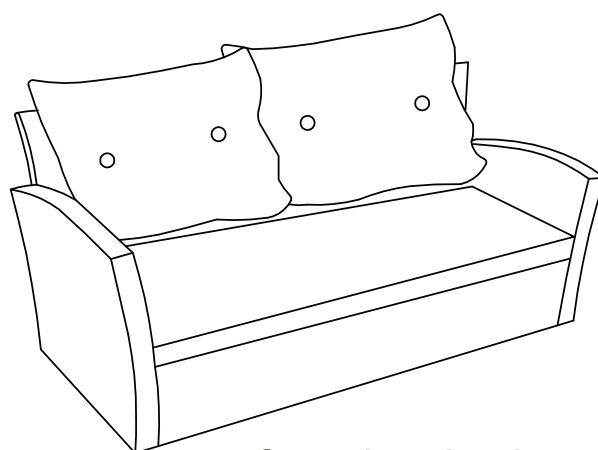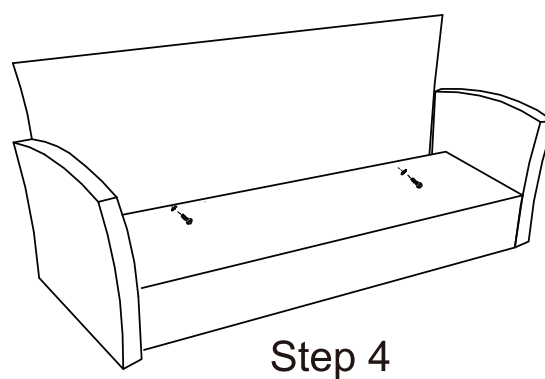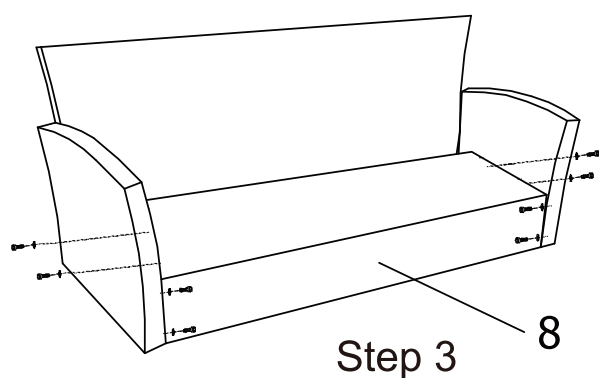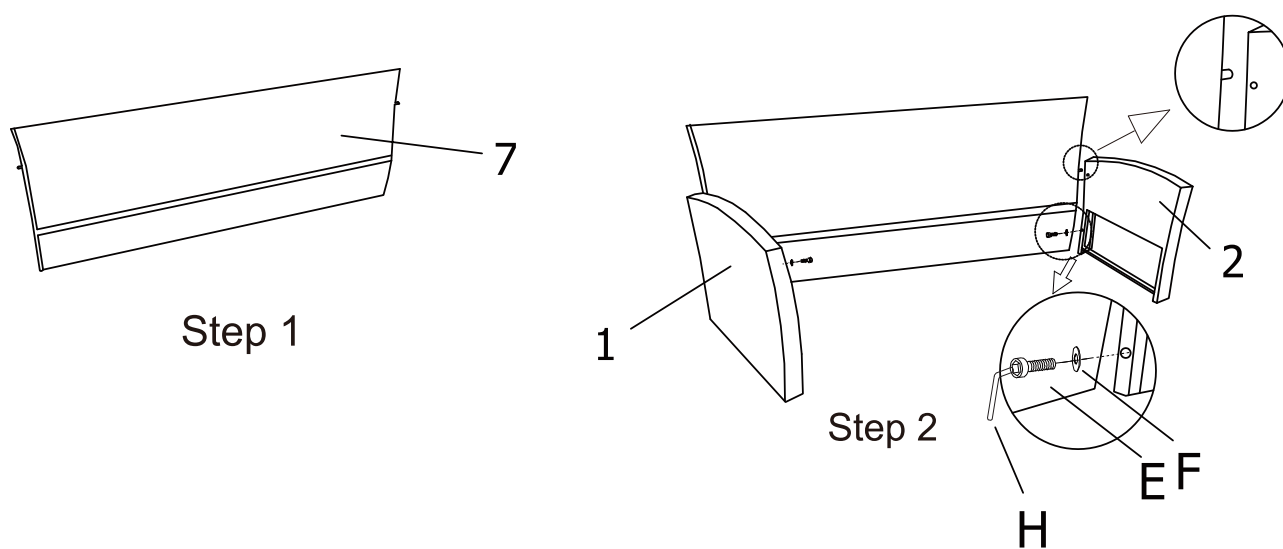


Completed unit

Note: Do not tighten bolts until all parts are connected

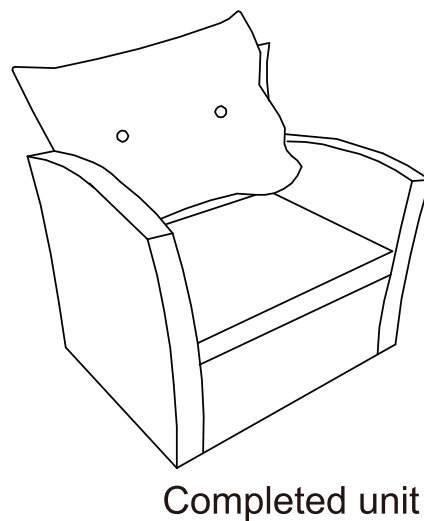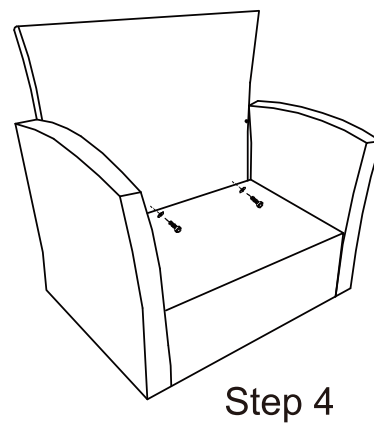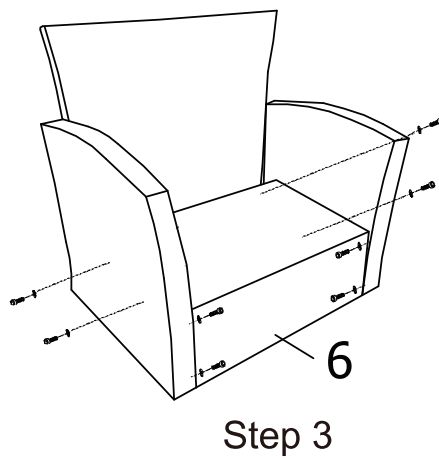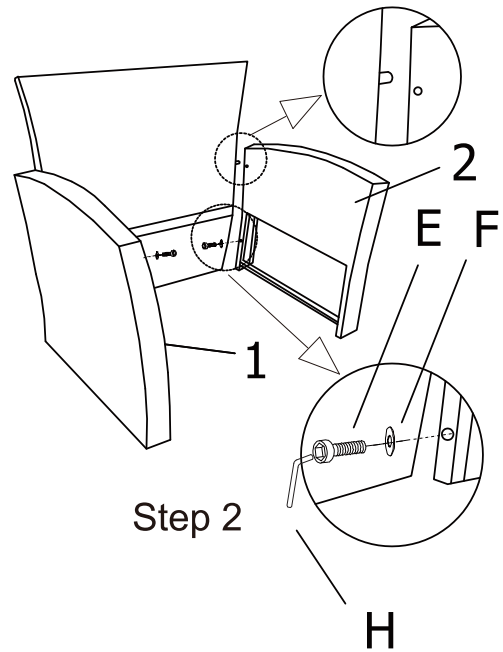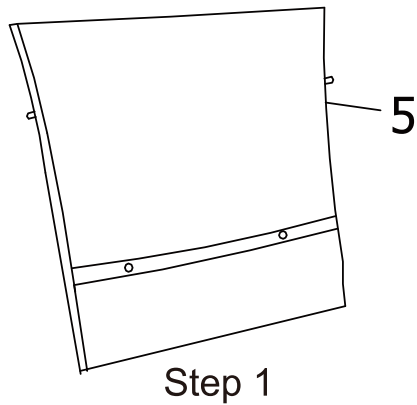

Note: Do not tighten bolts until all parts are connected

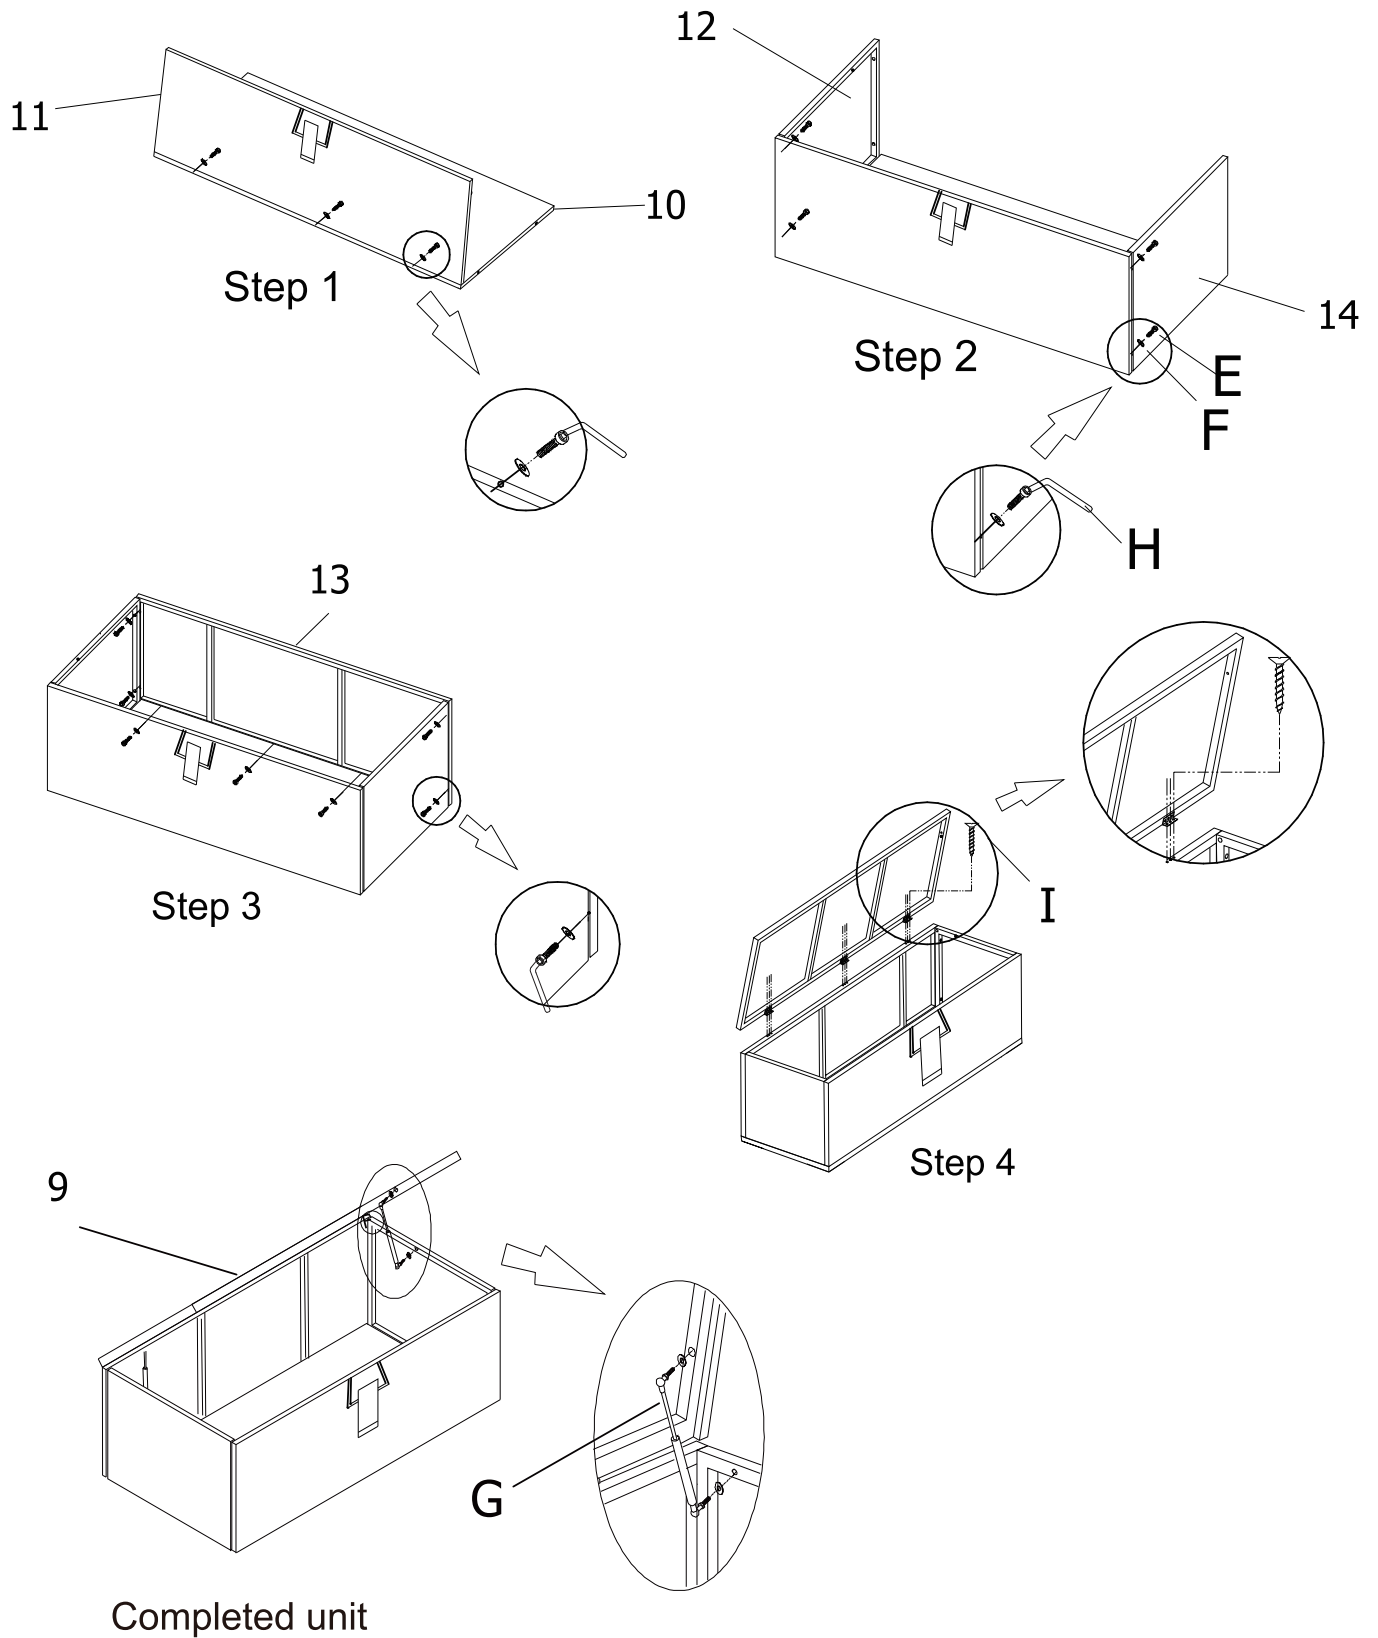

Bestsign International Inc.

900 Canada Ct, City of Industry, CA 91748

Tel: (626) 363-2901 Fax: (626) 363-2914

Furniture Care & Cleaning Instructions

- **Do not expose the furniture to strong sunlight, which causes discoloration and shorten the product lifetime.**
- **Do not expose the furniture to extreme heat, cold, or humidity, which may cause wood to swell or warp.**
- **Do not leave the furniture wet with beads of water standing on the furniture.**
- **Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use.**
- **Wipe spills with a clean dry cloth. Do not use chemicals or abrasives for cleaning!**
- **TAKE NOTE: THE BOLTS MAY SLIGHTLY LOOSEN OVER TIME. IF YOUR FURNITURE FEELS "WOBBLY" OR LOOSE, PLEASE RE-TIGHTEN BOLTS.**

Wicker Outdoor Furniture: For daily care, wipe with a soft dry cloth. Wipe spills with a clean dry cloth. Avoid the use of harsh cleaners and abrasives. Store indoors during long periods of inclement weather. Make sure furniture is completely dry before storage. Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use. Use a proper outdoor cover that allows for adequate ventilation without trapping moisture.

Outdoor Furniture Cushions: Extend the life of your cushions by keeping them free of dirt and foliage. Periodically shaking or rinsing the cushions is recommended. Thoroughly flush using a hose with cold water to remove all soil and residue. For deeper cleaning, spot clean with mild soap. Do not machine wash or use chlorine bleach. Stand cushions on end and dry completely in the sun before using or storing. Do not place in dryer. To prevent mildew, never wrap in plastic for storage and ensure the cushion is completely dry before storing. Store indoors when not in use for long periods of time or during inclement weather.

FURNITURE WARRANTIES

ALL-WEATHER WICKER & FRAMES

One-year warranty on all of our All-Weather Wicker Frames from date of delivery against manufacturer defects and structural failure (e.g., broken frame and welds) under normal use and conditions; One-year warranty from date of delivery against fading and cracking of wicker. Frames will be replaced, repaired or refinished in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

CUSHION INSERTS

Limited One-year warranty from date of delivery against manufacturer defects or excessive deformity of cushions under normal use and conditions. Replacements and repairs will be in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

IMPORTANT LIMITATIONS

Please note that our warranties do not cover failure due to any repairs or modifications to the product after purchase, accidental damage, abuse, misuse, commercial use, or normal wear and tear, including: fading, scratched or chipped finishes, weathering under normal weather conditions, staining or discoloration. The term "lifetime" as used in this statement of warranties shall mean a period of no longer than 30 years from the date of delivery of any item covered by a one-year warranty. The limited warranties described above are extended to the original purchaser of the product only.