

Installation Instruction

Item No: 7046-5H

WARNING: To avoid risk of electrical shock, be sure to shut off power while installing or servicing this fixture.

NOTE: We advise calling a qualified electrician when making the wire connections to the junction box.

WARNING:


1. Shut off the power to the area where you will be working.
2. Use 60 Watts maximum type B bulb.
3. Do not use polish or clearer on your fixture, just wipe with soft cloth as needed.

STEP 1 – Unpack

1. Carefully unpack your new fixture and lay out all the parts on a clean surface.

STEP 2 – Assembly

1. Install the socket sleeve (A) on the socket (B).
2. Install E12 bulb into the socket (BULBS NOT INCLUDED).

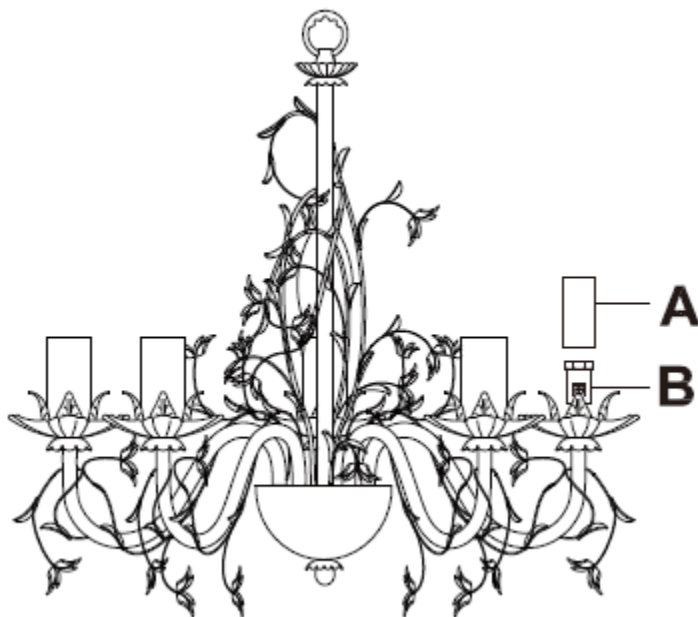

There are 2 ways to install this chandelier:

- Portable Wire – STEP 3
- Hardwire – STEP 4

NOTE: FOR HARDWIRE INSTALLATION WE ADVISE CALLING A QUALIFIED ELECTRICIAN WHEN MAKING THE WIRE CONNECTIONS TO THE JUNCTION BOX.

3. PORTABLE WIRE INSTALLATION

NOTE: Cut off the fixture copper ground wire

CAUTION: DO NOT install on a radiant heating ceiling

CAUTION: The hooks are to engage the chain only and not the electrical wire.

FOR PLASTER OR PLASTER BOARD CEILINGS

1. Drill a hole in the ceiling to the same diameter as the closed flaps of the included toggle bolt assembly (A).
2. Insert flaps and bolt into the ceiling with the toggle bolt protruding through the ceiling, lock the assembly by threading on the hook as shown.
3. Drape your chain to the second hook or let it hang straight.




FOR WOOD OR ACOUSTIC BOARD CEILINGS - MINIMUM THICKNESS IS 1-1/2 INCH

1. Select a place on the ceiling where a wood beam exists.
2. Thread the steel screw (B) into hook (C).
3. Screw the assembly into the wood beam.
4. Drape your chain to second hook or let it hang straight.



HOOK THE CHANDELIER ASSEMBLY TO THE CHAIN

1. Open the lock link (K1) provided, connect to the fixture loop (J) and chain link and close the lock link (K1).
2. One chain and wire are arranged, plug the wire plug into household electrical outlet.

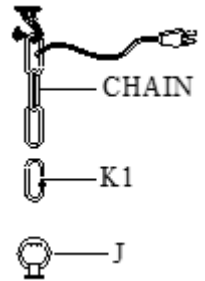


IMPORTANT SAFETY INFORMATION:

This portable fixture has a polarized plug (one blade is wider than the other.) As a safety feature, this plug will fit a polarized outlet only one way. If the plug does not fit fully in the outlet reverse the plug. If it still does not fit contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not attempt to disable this safety feature.

FIXED WIRE INSTALLATION


NOTE: IT IS ADVISED TO CONTACT A QUALIFIED ELECTRICIAN FOR THIS STEP.

1. Thread nipple (C) into loop (F) until snug.
2. Thread other end of nipple (C) with loop attached into crossbar (D) until snug.
3. Place lock washer (B) over end of nipple protruding through crossbar and thread the thread hex nut (A) onto nipple until tight.
4. Take this crossbar assembly and mount to ceiling junction box with junction box threads (E), tighten thread securely with screwdriver.
5. Open the lock link (K1) provided, connect to the fixture loop (J) and chain link and close the lock link (K1).
6. Lace the fixture wires through the chain. Slip loop collar (H) over the chain. Then do the same with the canopy (G).
7. Open the end link (K) of the chain and hang the fixture on the loop (F) and close the link (K).
8. Cut the wire plug off, feed the fixture wires through the loop (F) and nipple (C) and pull until taut.
9. Connect fixture wire to the wire from the junction box with wire connectors as below.

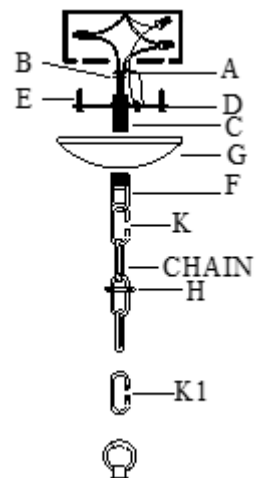

WIRE CONNECTION:

1. Connect smooth wire to the black house wire with wire connectors.
2. Ribbed wire to the white house wire with wire connectors.
3. Fixture ground wire to the supply ground wire with wire connectors or the fixture ground wire from the fixture to the green ground screw on the mounting bracket.
10. Push canopy (G) up against ceiling and secure with loop collar (H).

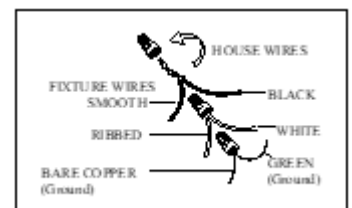

Install the bulb(s) into the socket. BULB(S) NOT INCLUDED
Installation is now complete. Turn on power.

Note: 120V/60W