














# ASSEMBLY INSTRUCTION


ITEM#:5566-29BK

## DESCRIPTION:PUB CHAIR


NO.	PARTS LIST		QTY	NO.	HARDWARE LIST		QTY
<b>A</b>		SEAT CUSHION	1	<b>G</b>		ALLEN BOLT 1/4*16MM	<b>8</b>
<b>B</b>		BACK	1	<b>H</b>		ALLEN BOLT 1/4*30MM	<b>4</b>
<b>C</b>		UPPER LEG	1	<b>I</b>		SCREW 4*30MM	<b>4</b>
<b>D</b>		LOWER LEG	1	<b>J</b>		FLAT WASHER	<b>12</b>
<b>E</b>		BOTTOM RING	1	<b>K</b>		SPRING WASHER	<b>12</b>
<b>F</b>		SWIVEL PLATE	1	<b>L</b>		ALLEN KEY	<b>1</b>

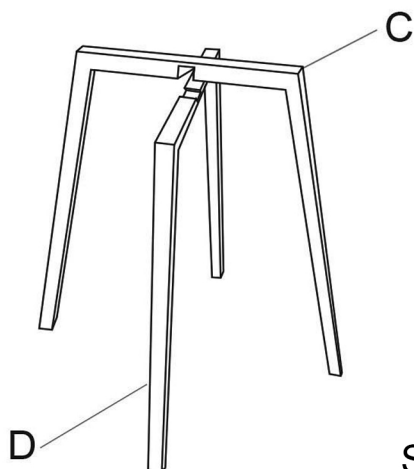


STEP 1

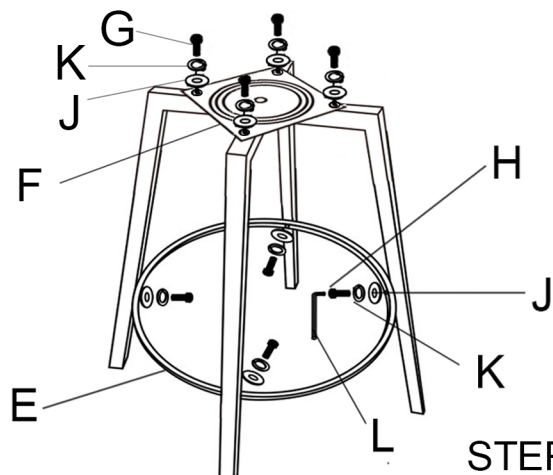


STEP 2

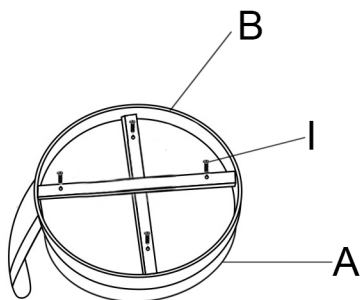

STEP 3

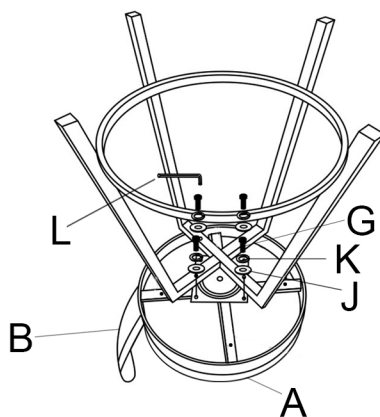

STEP 4

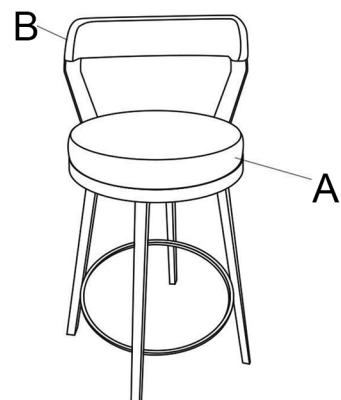

STEP 5



For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration

Do not tighten bolts until completely assembled