


USAM/SW-3B Part List-1/4


A		2PCS	P		4PCS
B		2PCS	Q		1PC
C		1PC	R		2PCS
D		1PC	S		4PCS
E		1PC	T		4PCS
F		1PC	U		2PCS
G		2PCS	V		2PCS
H		4PCS	W		2PCS
I		1PC	X		15PCS
J		3PCS	X1		6PCS
K		2PCS	Y		15PCS
L		1PC	Y1		6PCS
M		2PCS	Z		15PCS
N		2PCS	Z1		6PCS
O		2PCS	AA		1PC
			BB		2PCS

Three Swing -2/4


1

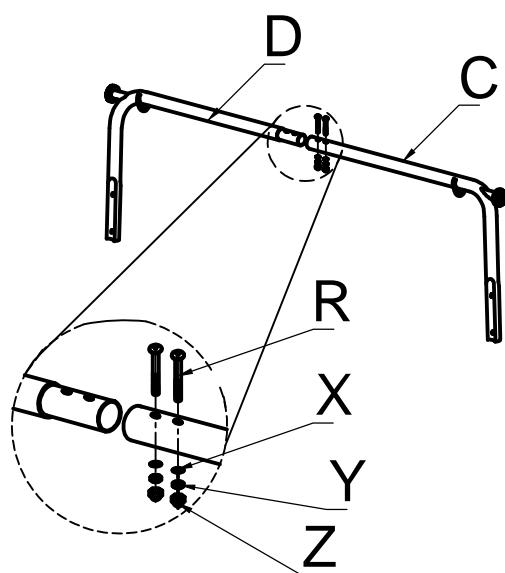

2

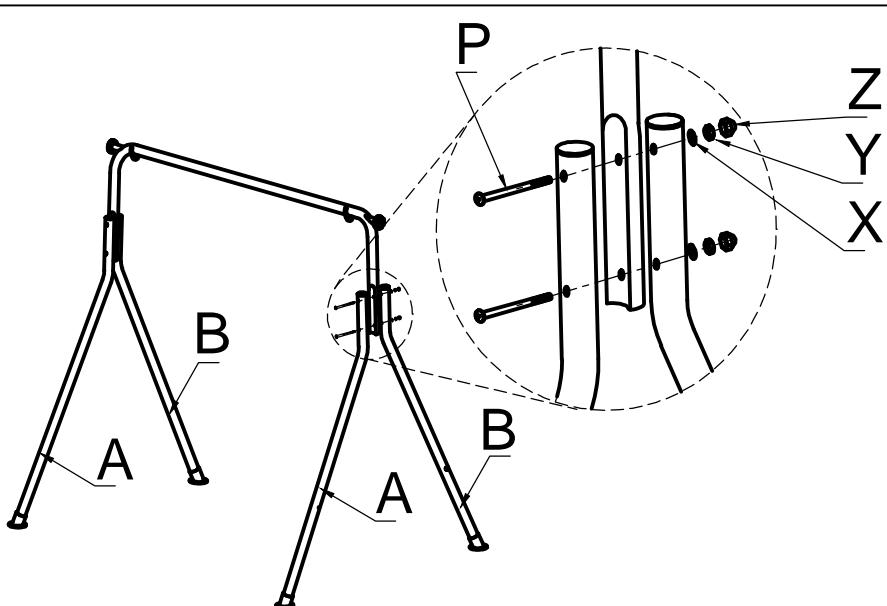


3

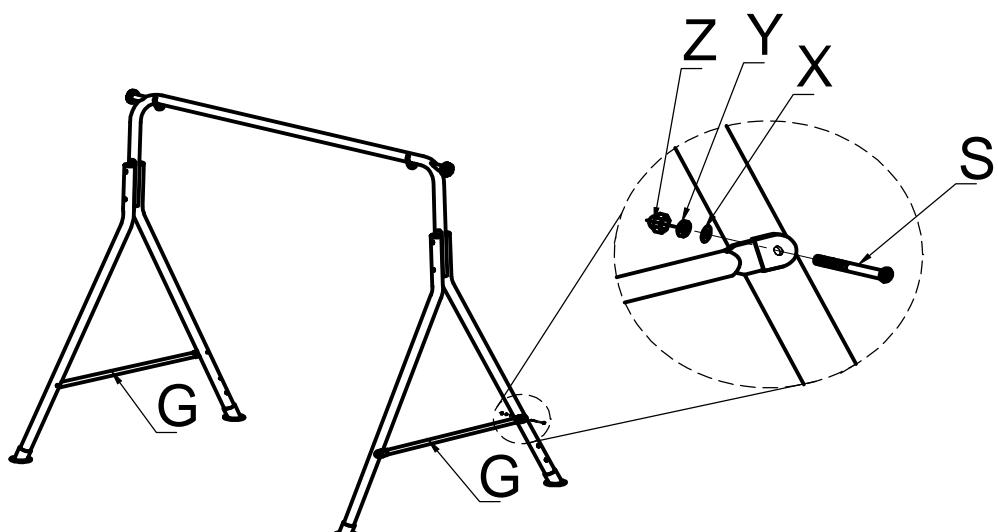


Three Swing -3/4


4

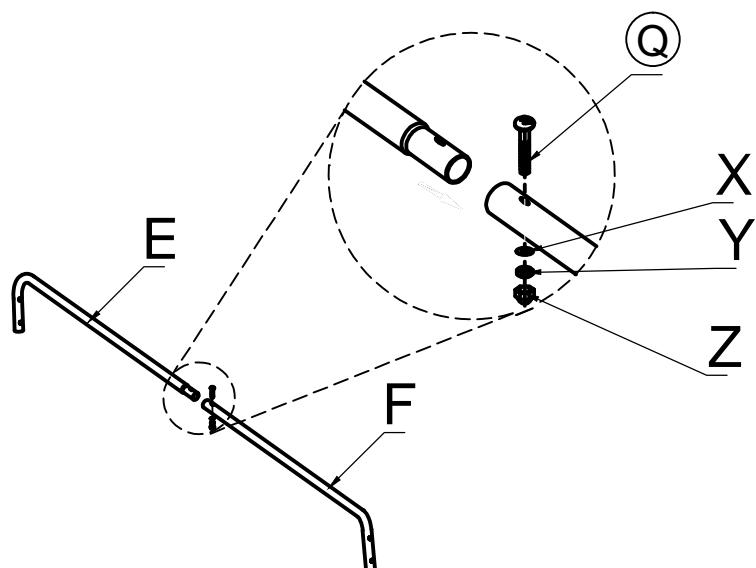

5

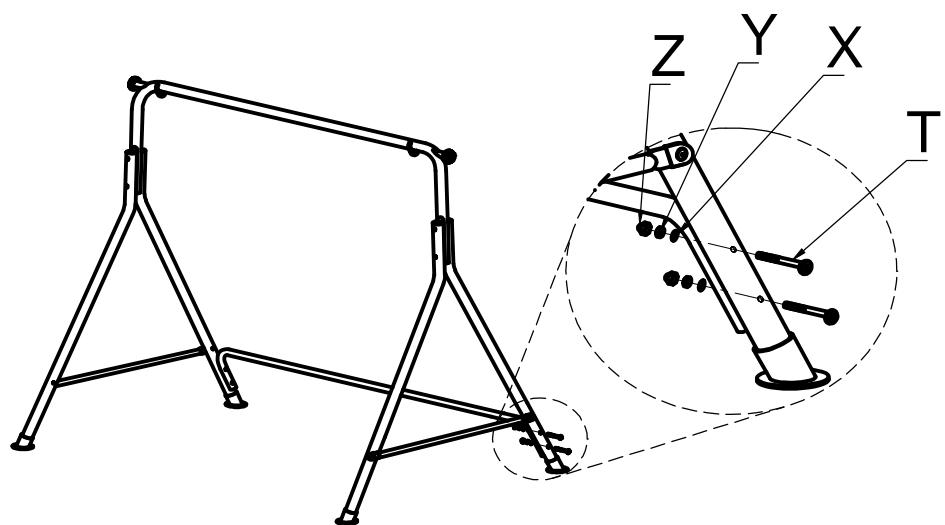

6

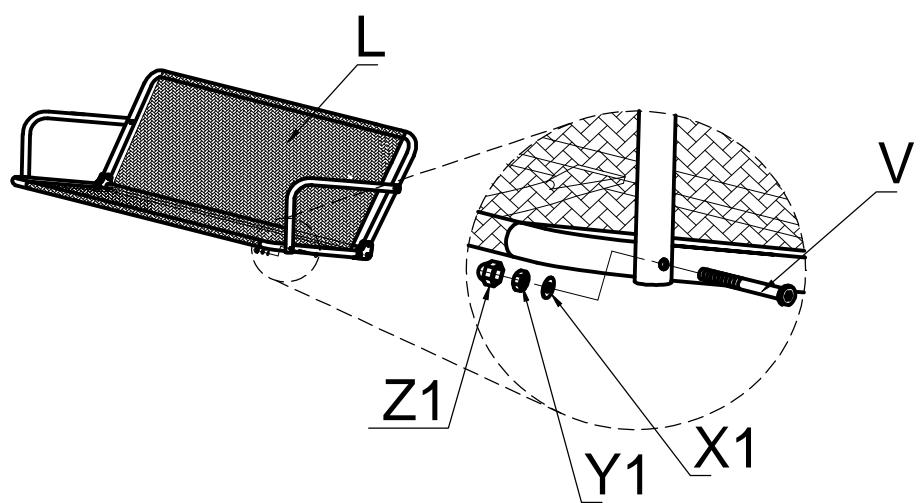

Three Swing -4/4

