

ASSEMBLY INSTRUCTION **SUNPAN®**



Sunpan Item No: 104100

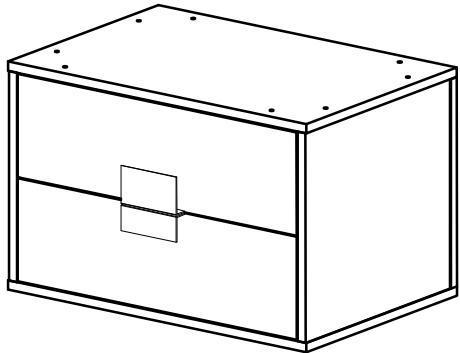
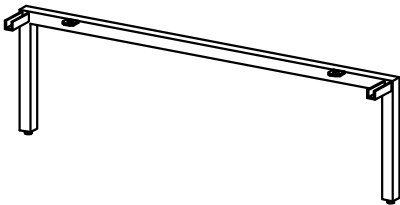
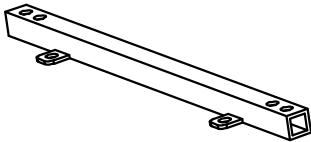
Sunpan Product Name: **JADE NIGHTSTAND**

Please visit our web-site : www.sunpan.com for more great products.





For assembly questions please call: 1-800-787-1019 (or +1-416-736-0094) outside North America or email to: info@sunpan.com

PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

No.	DESCRIPTION	QUANTITY	ILLUSTRATION
A	CABINET	01	
B	LEG FRAME	02	
C	STRETCHER	02	

HARDWARE LIST

1	BOLT M6 x 15	16	
2	LOCK WASHER Ø8	08	
3	WASHER Ø8 x 16	08	
4	ALLEN KEY K4	01	

ASSEMBLY INSTRUCTIONS

STEP	DESCRIPTION	ILLUSTRATION
1	<p>Connect the 2 Legs "B" to the 2 Stretchers "C" as in the drawing.</p> <p>Use 08 Bolts "1" snap to the appropriate locations, as shown.</p> <p>Use Allen Key "4" when assembling the bolts.</p>	
2	<p>Put the cabinet (A) upside down.</p> <p>Place the leg frames already assembled on the Step 1 on the underneath cabinet and screws it by using :</p> <p>08 Bolts (1) + 08 Lock Washers (2) + 08 Washers (3)</p> <p>Tighten by Allen key (4).</p>	
3	<p>Turn the table on legs.</p> <p>Adjust the adjustable leveler.</p> <p>Finished.</p>	

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.
 Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
 Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
 Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Do not attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
 Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basis steps will help to ensure that you enjoy your furniture for a long time:
 Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.
 Excessive exposure to sunlight may cause fading.
 Excessive temperature and humidity or cold may cause cracking or splitting.
 Dust with a clean, damp, lint free cloth.
 Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.
 Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.