## ASSEMBLY INSTRUCTIONS

Read this instruction carefully. See hardware and furniture part list for guidance. Be sure all parts are complete, before you assemble. Place all wooden furniture parts on a clean and flat soft surface to prevent from being scratched. Follow the figure to start assembling.

CAUTIONS : 1. Do not FULLY - TIGHTEN the nut or nut bolt until all nut or bolt is ready assembed. 2. Do not OVER - TIGHTEN the nut or bolt to avoid causing damages to the thread. 3. Keep all hardware parts out of reach of children.

NOTE : THE LIST AND QUANTITY SHOWN ARE FOR 1 UNIT ASSEMBLY. Tool needed : Screwdriver & Rubber mallet (not provider).

PART LIST			HARDWARE LIST		
ITEM	DESCRIPTION	QTY	ITEM	DESCRIPTION	QTY
А	SEAT	1 PC	1	JCBB BOLT M8 x 50mm	8 PCS
В	LEG FRAME	2 PCS	2	M8 SPRING WASHER	8 PCS
С	RAIL TOP	2 PCS	3	WOOD SCREW M4 x 32mm	23 PCS
D	RAIL BOTTOM	2 PCS	4	WOOD DOWEL M10 x 30mm	14 PCS
Е	CENTER RAIL TOP	1 PC	5	M5 ALLEN KEY (BALL SHAPE)	1 PC
F	CENTER RAIL BOTTOM	2 PCS	L		
G	BOARD	1 PC			



## ASSEMBLY INSTRUCTIONS

А

PAGE 2 OF 3





## ASSEMBLY INSTRUCTIONS

## PAGE 3 OF 3

