Purchased your product online?

We would really appreciate it if you can share your experience with others by reviewing our product on the website from which you purchased. Owner's Manual Item # MLT102



Silver Mirror Waterfall Fountain with Decorative Stones and Halogen Light



Have Questions or Issues? Need help with assembly? Contact us and we will resolve them within 12 hours.

Support Hours: M-F 7:30–5:00 (U.S. Pacific Time)

Call: 877-460-4511

Email: info@alpine4u.com



MAINTENANCE

If the water does not flow through the top panel after several minutes

- **1.** Adjust the water flow with the Red Lever on the Valve inside of the Fountain Base.
- If the problem persists, remove the top cover from the Fountain Top. Using the Cloth or Brush provided, clean the stainless steel barrier back & forth until the desired flow effect is achieved.
- **3.** If the water does not flow completely to the sides of the mirrored glass panel, use the Cloth to direct the flow of the water

Note: When operating the fountain, please not touch the stainless barrier located on the top of the fountain with bare hands as scratches to the surface.

CONTENTS

Contents	1
What's Included	2
Features	3
Specifications	3
Assembling & Using Your Product	4
Replacement Parts	8
Troubleshooting	9
Caution	10
Warranty	11
Maintenance	12

WHAT'S INCLUDED





LIMITED WARRANTY INFORMATION

Thank you for choosing an Alpine product! We aim to please with our wide range of products including Fountains, Birdbaths, Statuary, Pond Supplies & More. All of our products are constructed from the highest quality materials. In the event that we have not achieved our usual standard of excellence, we will repair or replace, at our discretion, within the warranty period. A valid proof of purchase, with the purchase date clearly indicated, must be provided. Photos of defective merchandise will also be required to help distinguish the actual cause of the defect. Please read below for a detailed description of warranty coverage.

Water Damage

Alpine products are not manufactured to withstand extreme temperatures. Improper storage that allows water to freeze within a product may cause damage, is considered negligence, and will not be covered under this warranty. The use of "hard water," and/or caustic cleaners, can affect the painted or other finishes. Failure to keep the unit clean, and use of such additives/cleaners, will also void the warranty. Please note: for fountains, it is normal for some splashing to occur and protecting the immediate surfaces is not the responsibility of Alpine Corporation.

Paint & Color (Retention and/or Loss)

The use of water will cause natural erosion to the color. This area can be touched up using standard paint. The paint is designed to protect the entire finish against breakdown of color. As with any product, all finishes with time will gradually fade and discolor. The warranty will only cover against severe or complete fading, within the first year from date of purchase, with the above exclusion.

Procedure/Service

Should a warranty/claim be needed, you should contact the retailer from whom you purchased the product. If that is not an option, you can contact Alpine Corporation at www.alpine4u.com. When contacting Alpine Corporation, you must be prepared to show proof of purchase, provide photographs and any other information needed to validate your claim. This may be necessary to distinguish between a partial or complete replacement of a defective product. The warranty does not cover any items with multiple parts; the warranty will ONLY cover the individual component of the unit/item that may be defective. Replacement parts can be made available to a consumer through the original selling party, or an approved parts retailer. If this is not an option, contact our customer service department. Item is covered under one year limited warranty from the date of purchase. When requesting replacement parts due to a warranty claim after 30 days of purchase, credit card information will be requested for shipping charges.

Not Covered Under Warranty

The limited warranty will NOT cover cases of damages due to:

- 1. Damages caused in Transit
- 2. Inadequate care and/or neglect
- 3. Environmental and/or natural elements
- Immersion in water, unless specified 4
- 5. Improper Installation/Storage and/or Maintenance

This warranty is void if the product has been damaged by accident, misuse, negligence, improper installation and/or modifications have occurred. This includes any and/or all defects arising out of freezing water damage, hard water damage, failure to keep the unit clean and free of harmful additives such as bleach, chlorine, etc.... which affects the paint and/or parts. This warranty also does not cover any additional charges or installation, removal, disposal and/or shipping costs or consequential damage associated with any warranty claim.

1x

9. Plug the pump and light cord into your local power supply. Make sure that there is no water around the plug & always keep the power source in a dry place.



10. Finally add Rocks to your Fountain Tray and enjoy your new Fountain. Don't forget to add water regularly as water will evaporate over time.



REPLACEMENT PART	ITEM#	
• Submersible Stream Pump	PAD900	
Replaceable Transformer	PL022T	
Replacement Light Bulb	RBS1210	
ALSO AVAILABLE FROM ALPINE		


• Fountain Care Formula......PPL102 Foam and scale remover for indoor and outdoor fountains. **3.** Remove the pump from its packaging and adjust the flow control to the lowest setting to avoid splashing until the fountain is completely assembled.



Alpine Quick Tip #1

Turn to the Left / Counter-Clockwise to turn down the water flow. Turn the adjuster to the Right / Clockwise to turn up the water flow.

4. Place the Pump and Pump Valve into the Fountain Base. Connect the Pump to the Valve first, then connect the Valve to the PVC connector of the Fountain Top.

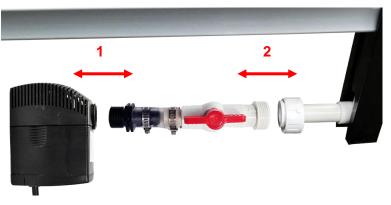

5. Next place the supplied Sponge under the Pump. This will help the Pump from excess vibration in the Fountain Base.



6. Place the Fountain Tray onto the Fountain Base, and route the light cord through the Hole in the Tray then into the Base. Next Route both the Pump and Light cords through the hole in the back of the Fountain.



7. Pull out the light cord plug through the back opening & connect to the transformer.



8. Gently pour water into the fountain basin, being careful not to overflow and cause splashing. Make sure the water completely submerges the pump and the water runs clear during operation.

NOTE: We recommend that you use distilled water to prevent scale build-up. The first time you operate the pump it can take up to 5 minutes for the air to be completely expelled and water begins to flow properly



ASSEMBLING & USING YOUR PRODUCT

Unpack all components carefully. Please check to ensure all parts have been removed from the packaging. *Some splashing may occur when the product is in use.

1. Place the fountain base on a smooth & level surface. Allow enough space to access the pump. Place the Fountain Top into the Fountain Base with the mirror facing forward. A CAUTION: It's important to lean the fountain up against a wall until filled with water, or the fountain will tip over.



2. Next tighten the wing nuts preinstalled into the Fountain Base This will secure the Fountain Top.



TROUBLESHOOTING

If you have any questions and/or problems, please contact the retail store you purchased this fountain.

- If your pump fails to run
 - Check the circuit breaker or try a different outlet to make sure the pump is receiving electrical power.
 - Check the pump discharge and tubing for any kinks and/or obstructions
 - Any buildup obstructing the water flow can be flushed with a garden hose
 - Check the rotor by removing the front cover & plate to access the impeller area. Turn the rotor and make sure that the rotor is not jammed or broken
- If your pump "spews"
 - Check the water level to make sure the pump is completely submerged and there is enough water in the basin to operate your fountain. Not having enough water will cause your pump to spew
- If your pump is making abnormal loud noises
 - Disconnect the pump from the electrical power supply and remove the front cover & plate
 - Carefully grip the impeller and gently pull the impeller/rotor assembly out of the pump housing
 - Rinse the impeller/rotor assembly and clean the cavity with clean water. If breakage or damage is found, contact your local retailer for parts. 9

CAUTION

FEATURES



- Always unplug the pump from the electrical outlet before cleaning & handling
- Use with clean water only, do not place the fountain and/or parts in any other liquid.
- Periodically change water & clean the pump to keep free from microorganisms
- Disconnect and store the unit in a dry place if not in use for an extended period of time, or during freezing weather.
- Do not operate the fountain in temperatures below 41° F / 5° C.
- Do not operate with water above 90°F / 30°C.
- Do not lift, carry or pull the pump by the power cord.
- Do not exceed the maximum voltage & wattage on transformer.
- NEVER LET THE PUMP RUN DRY.



 Integrated Spotlight to draw attention to soothing water ripples

SPECIFICATIONS

Power Requirements	Standard Household 120V
Water Capacity	6-1/2 US Gallons / 25 Liters
Tubing Diameter	³ ⁄ ₄ " I.D.

10