# **REGSS-181 Regal Kitchen Faucet**

### Recommended pressure range: 15-88 PSI (1-6 bar)

Max. temprature: 176°F (80°c)





#### **Instructions:**

- 1. Flush out some water from hot and cold valve in the wall. This will ensure smooth operation during the faucet life.
- 2. Remount lock nut, metal washer, one rubber washer and plastic spacer. A second rubber washer or O-ring, depending on the model, will remain on the faucet
- 3. Insert faucet body into sink.
- 4. Remount rubber washer followed by plastic base, if necessary, and metal washer to faucet shank under sink. Remount lock nut to shank and hand-tighten.
- 5. Be sure the faucet is aligned properly. Make final tightening of lock nut.
- 6. Install the spout and rotate to the left and right, noting where it stops. Be sure the faucet is aligned properly. Make final tightening of lock nut.
- 7. Connect the supply hoses to the hot and cold water supply valves. When tightening the nut be sure not to twist the hoses.
- 8. Confirm that faucet operating handle is in closed position and open supply valves, check connections for leakage.

### **Cleaning:**

- 1. The aerator should be removed periodically and cleaned, depending on the quality of water.
- 2. In order to maintain the sparkling appearance of the finishes, wipe after each use with a soft cloth. Use only a mild soap or household vinegar to clean the faucet. Do not use steel wool or cleaning against containing alcohol, acids, abrasives, etc.

#### **Operation:**

- 1. The mixer is operated by moving the handle.
- 2. Swivel handle back and forward for cold and hot water. For mixed water, keep the handle in the middle until the desired temperature is reached.
- 3. To control the water flow, pull the handle away from the body until you reach the desired flow.



# HOUZER

Houzer Inc. 2605 Kuser Road, Hamilton, NJ 08691 p 800- 800-3639, f 877-880-3654 info@houzersink.com