



ASSEMBLY INSTRUCTIONS

Description: Harley Round Accent Table



 
Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.





Pre-assembly:


- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.

Parts List

Item	Description		QTY
P1	Table Top		1
P2	Shelf		1
P3	Legs		4

Hardware List

Item	Description		QTY
H1	Bolts Ø1/4"*1-1/8"		8
H2	Lock Washers Ø1/4"		8
H3	Flat Washers Ø1/4" (16mm)		8
H4	Allen Wrench 1/4"		1

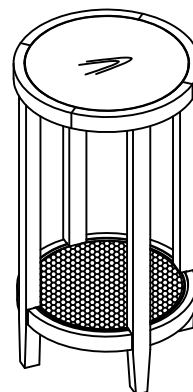

DISCLAIMER:

WHEN PROPERLY ASSEMBLED, THIS ITEM IS SAFE FOR INTENDED USE. SELLER IS NOT LIABLE FOR ANY DAMAGES RESULTING FROM ITEM BEING IMPROPERLY ASSEMBLED AFTER PURCHASE.

Assembly Procedures:


Step 1. Assemble the table on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Loosely attach the three legs (P3) to the bottom of table tap (P1) as shown below.

(H1)x3 Bolts Ø1/4"*1-1/8"

(H2)x3 Lock Washers Ø1/4"

(H3)x3 Flat Washers Ø1/4"(16mm)

(H4)x1 Allen Wrench 1/4"

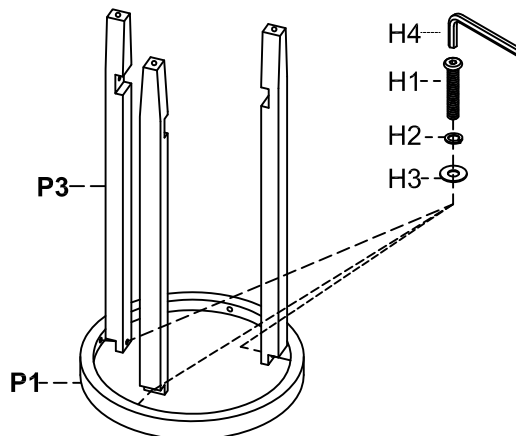


Step 2. Attach the shelf (P2) to the assembled legs (P3) as shown below.

(H1)x3 Bolts Ø1/4"*1-1/8"

(H2)x3 Lock Washers Ø1/4"

(H3)x3 Flat Washers Ø1/4"(16mm)

(H4)x1 Allen Wrench 1/4"

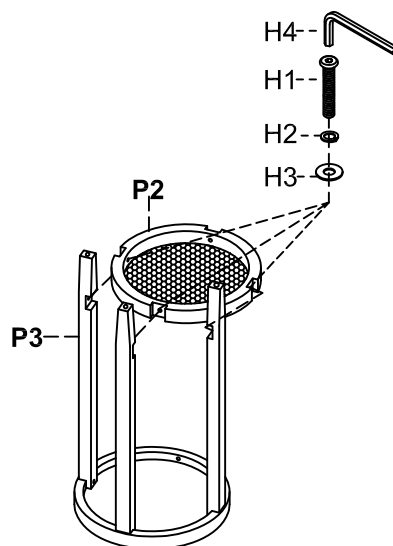


Step 3. Attach the fourth leg (P3) to the assembled shelf (P2) and table top (P1) as shown below.

(H1)x2 Bolts Ø1/4"*1-1/8"

(H2)x2 Lock Washers Ø1/4"


(H3)x2 Flat Washers Ø1/4"(16mm)

(H4)x1 Allen Wrench 1/4"

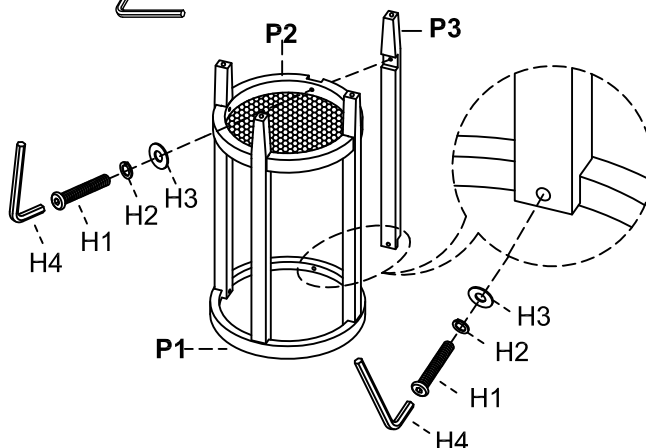

Step 4. Securely tighten all bolts with Allen wrench(H4), turn the assembled table to an upright position, Assembly is complete.

Leveler adjustment: Levelers are pre-installed on the legs and adjust as needed to make sure the table is leveled. **Failure to follow these instructions may cause the bolts to misalign during assembly.**

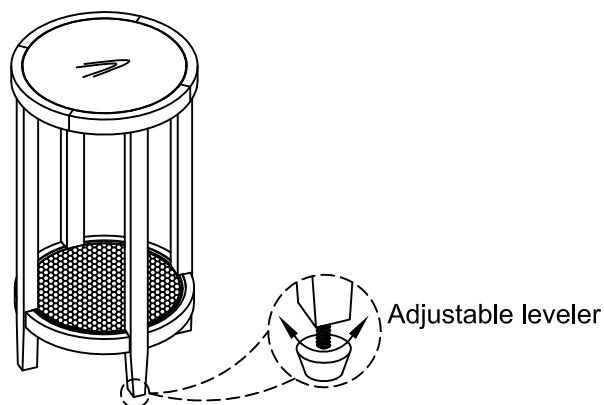

ADDITIONAL NOTE ABOUT SAFETY:

BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE.

THEY SHOULD BE INSPECTED AT LEAST EVERY 3 MONTHS AND RE-TIGHTENED AS NEEDED TO PREVENT DAMAGE OR INJURY, AND ENSURE STABILITY.

Thank you for your purchase