


 



HOOKER[®]


— FURNITURE —

ASSEMBLY INSTRUCTION

Item#:5751-75315-95 Upholstered Dining Bench

** Please make sure you have all parts indicated below prior to assembly.

HARDWARE LIST			
No	Item	Description	Q'ty
A		FLAT WASHER	16
B		LOCK WASHER	16
C		$\frac{5}{16}$ "**55MM BOLT	12
D		ALLEN WRENCH	1
E		$\frac{5}{16}$ "**100MM BOLT	4

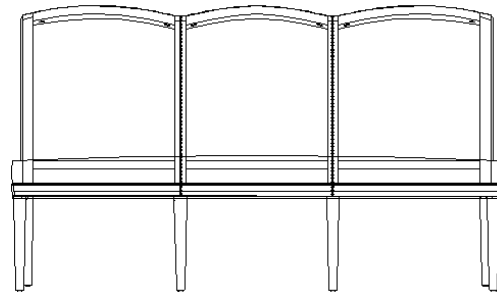

Assembly Steps:

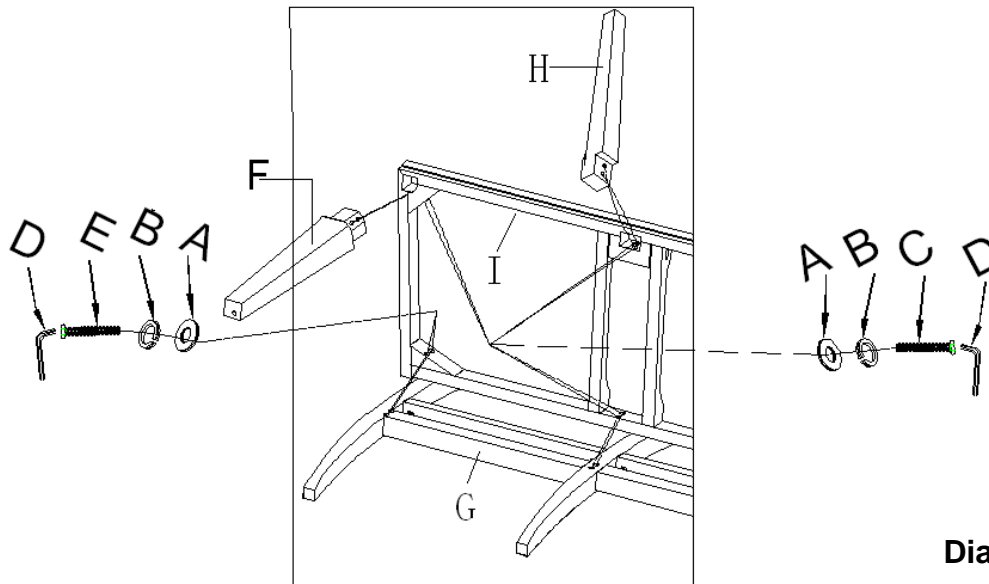


Diagram 1

Follow numbers on legs and corners when assemble.

1. Place bench back (G) on a clean surface.
2. Tighten seat frame (I) to bench back (G) by using bolt (C), lock washer (B) and flat washer (A) at those two center locations. (see diagram 1) Then tighten seat frame (I) to bench back (G) by using bolts (E), lock washers (B), flat washers (A) at corner . (See diagram 1)
3. Please follow numbers on legs (F) and corner blocks. Assemble front legs (F) onto four front blocks of seat frame (I), using bolts (C), lock washers (B) and flat washers (A). Tighten all bolts by hand. (See diagram 1)
4. After all bolts are attached and hand tightened, turn the bench upright.

Cleaning Instruction: Clean finished parts with a damp cloth using a mild dishwashing liquid and water solution. Polish the finish with soft cloth and an industry recognized furniture polish.