BT-8217 PARTS ASSEMBLY INSTRUCTION (1)X1 (1)-(3) (2)X1 (3)X4 4 (4)X1