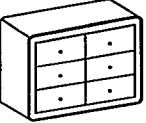
 



 
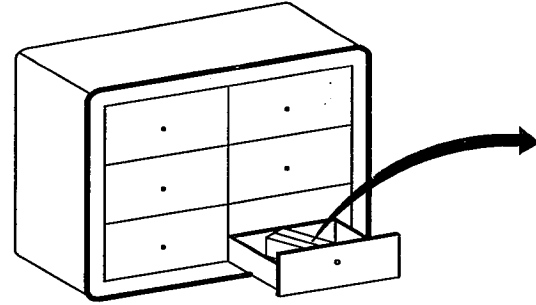


24525


MODEL : CF 70 DRESSER

NO.	PART LIST	QTY
	DRESSER	
A		1 PC
B	 LEG	4 PCS
C	HANDLE SCREW 	6 PCS
D	HANDLE 	6 PCS
E	 NO 35 Washers	4 PCS
F	 Support Legs	1 PC

Step 1 :Take out the small carton to assemble !



Step 2 :Attach the handle (D) by using handle screw (C).

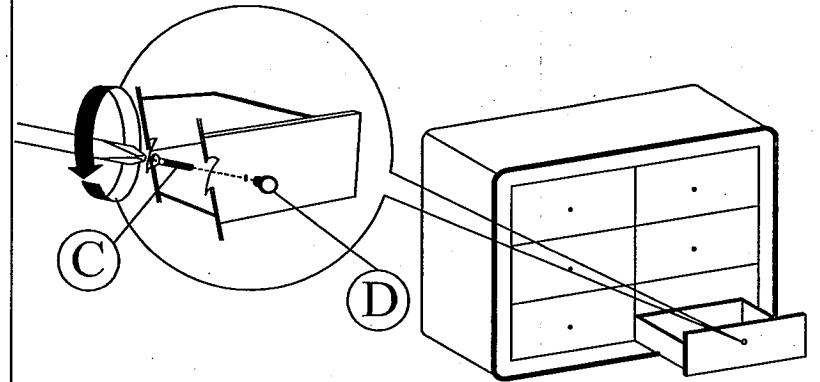

Step 3: Tighten the legs (B) and support legs (F) to dresser (A) as shown.

