

 
ASSEMBLY INSTRUCTIONS

ITEM#:BAS2513

Important Safety Instructions:




 


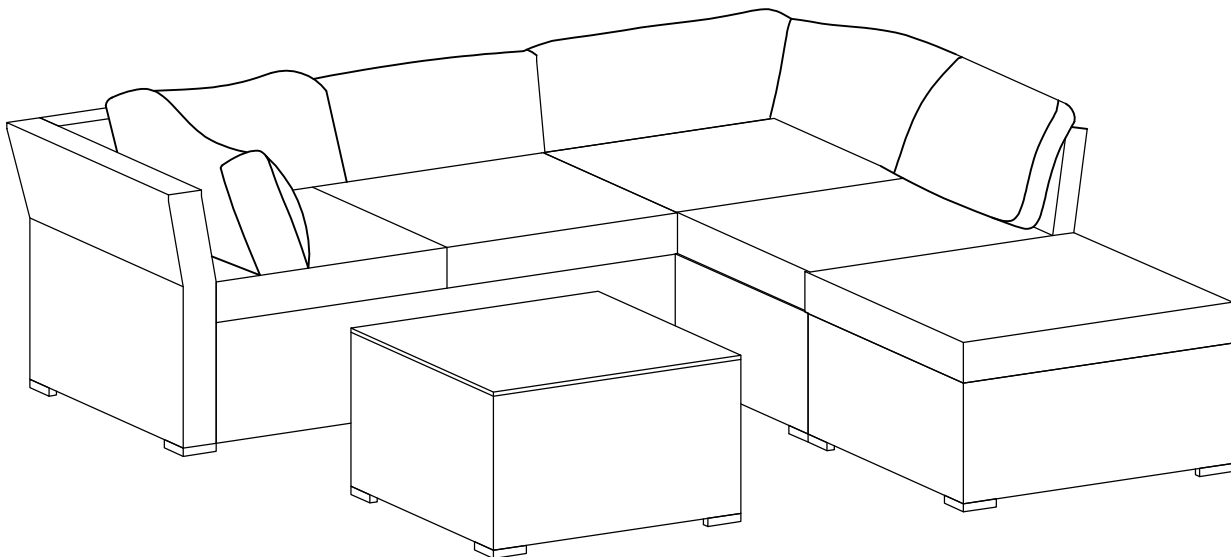 

 






- Please read all instructions before beginning assembly
- Please make sure receive all the parcels to start the assembly
- For your safety and convenience, assembly by two people is recommended
- Use the parts and hardware lists to identify and separate each of the components included
- Save all packing materials until assembly is completed to avoid the accidental discarding of smaller parts or hardware

Note:You may find cushions placed underneath the table or between frames!




 
 



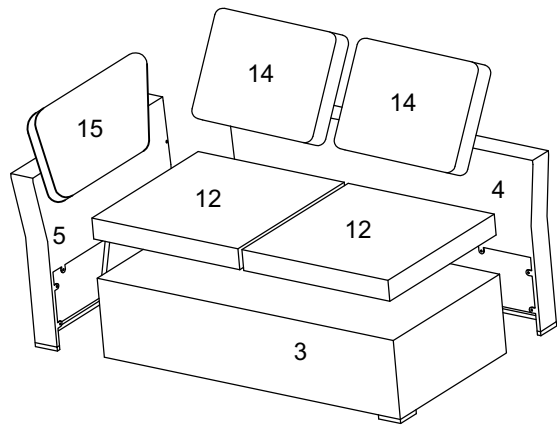 
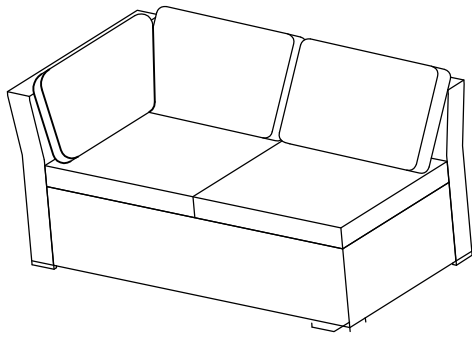 
THANK YOU FOR PURCHASING

PARTS LIST



1	ARMLESS CHAIR SEAT	1PC	
2	ARMLESS CHAIR BACKREST	1PC	
3	LOVESEAT SEAT	1PC	
4	LOVESEAT BACKREST	1PC	
5	LOVESEAT ARMREST	1PC	
6	CORNER CHAIR SEAT	1PC	
7	CORNER CHAIR BACKREST	1PC	
8	CORNER CHAIR ARMREST	1PC	
9	OTTOMAN	1PC	
10	COFFEE TABLE	1PC	
11	GLASS	1PC	
12	SEAT CUSHION-A	4PCS	
13	SEAT CUSHION-B	1PC	
14	BACK CUSHION-A	4PCS	
15	BACK CUSHION-B	2PCS	

HARDWARE LIST



A		ALLEN WRENCH	1PC
B		WASHER	54PCS+2
C		WRENCH	1PC
D		BOLT (M6*25 mm)	27PCS+1
E		NUT	27PCS+1
F		CONNECTOR	6PCS



 
 
LOVESEAT WITH RIGHT ARMREST X1

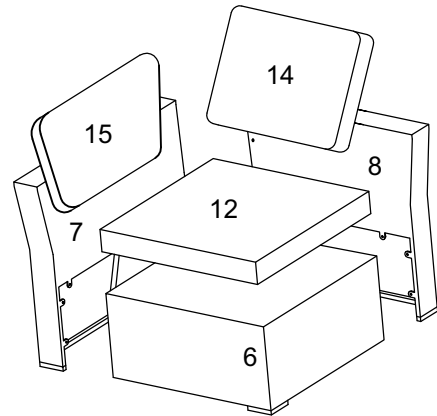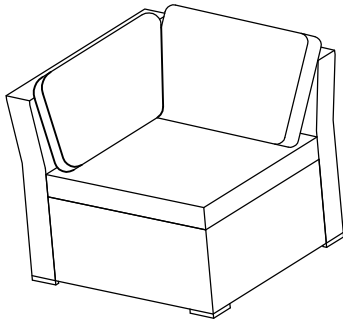



CORNER CHAIR X1

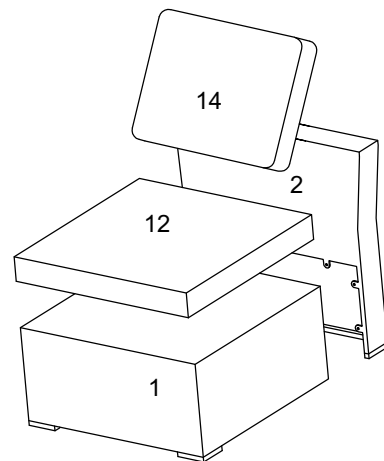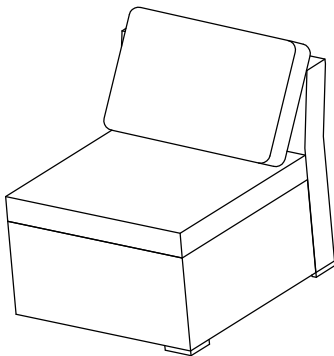  

ARMLESS CHAIR X1

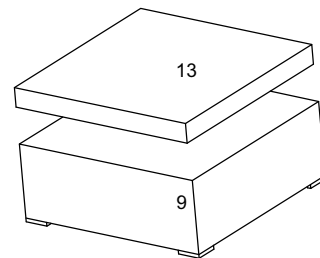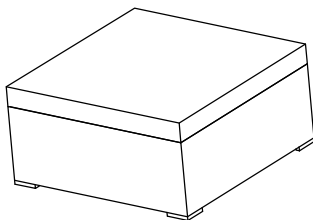  

OTTOMAN X1

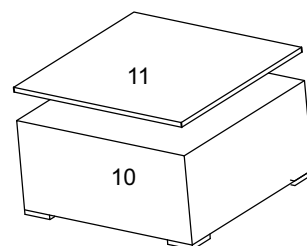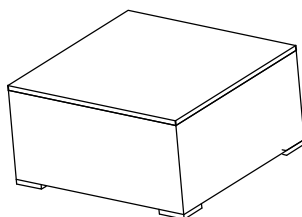  


COFFEE TABLE X1


ASSEMBLY INSTRUCTION STEPS

Note: Do not tighten bolts until all parts are connected

 
Step 1

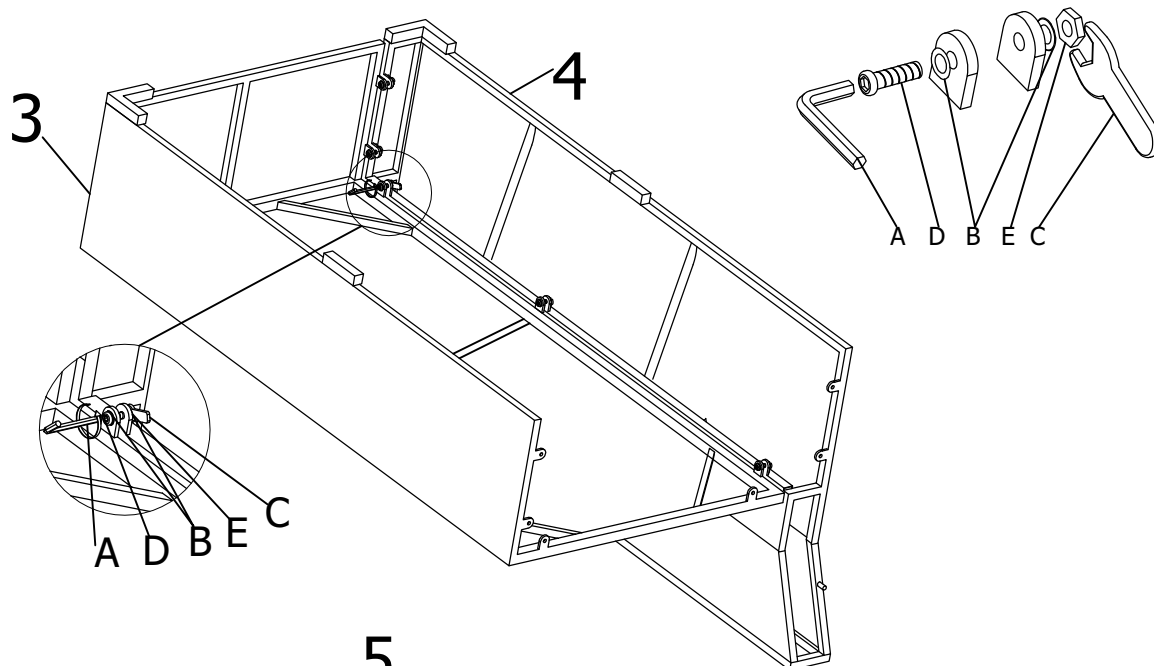

 Step 2

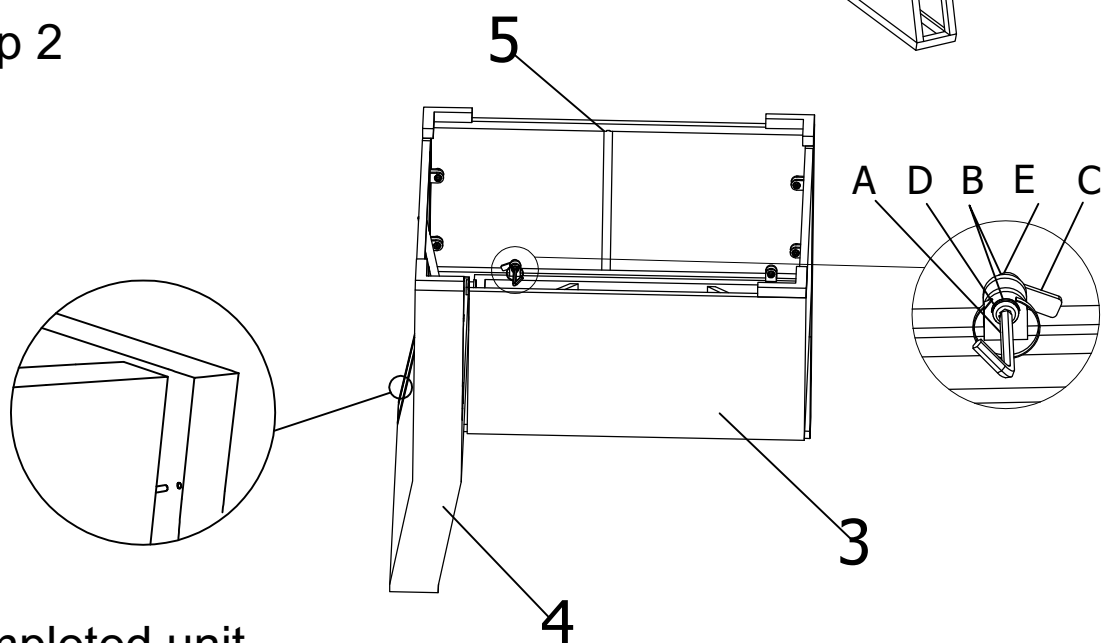


Completed unit

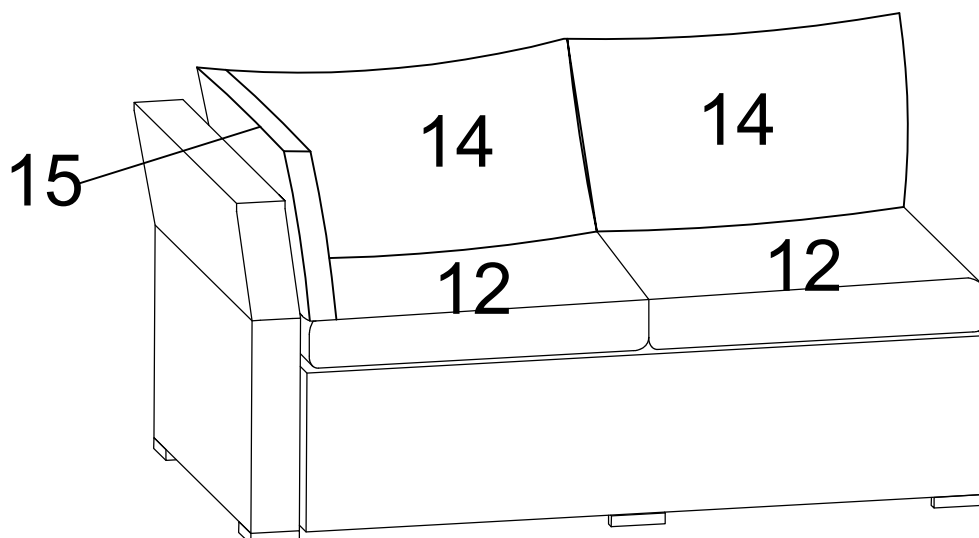 


Note: Do not tighten bolts until all parts are connected

 
Step 1

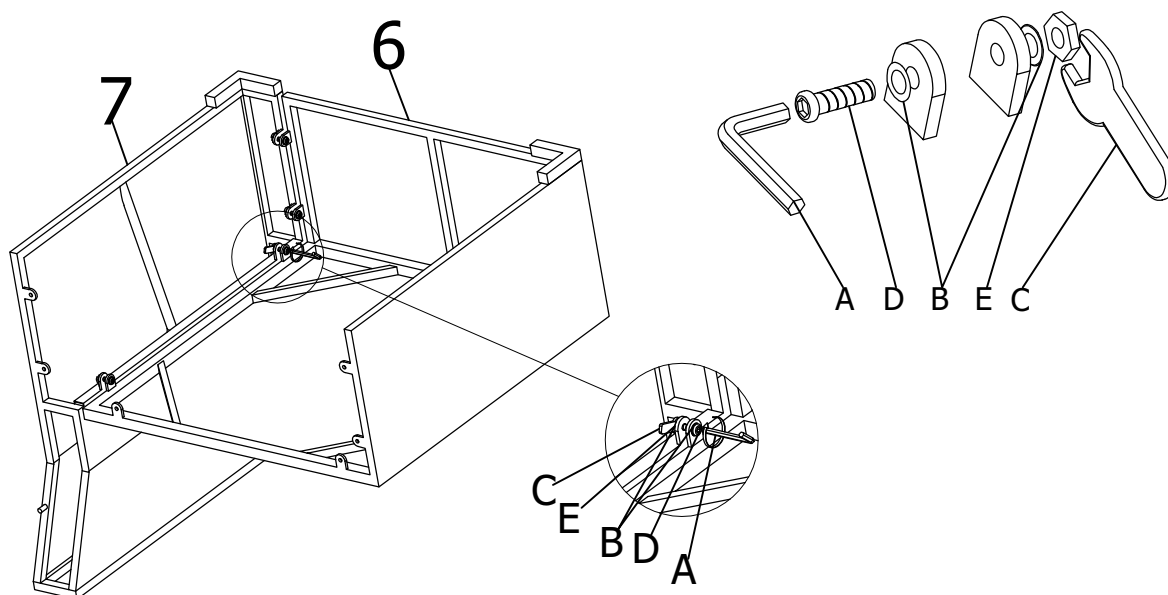

 Step 2

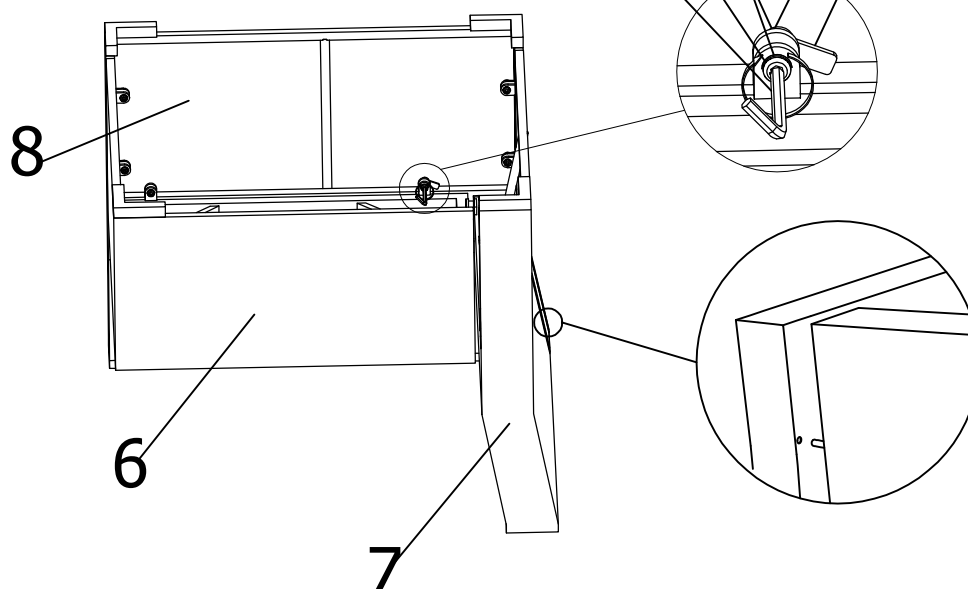


Completed unit

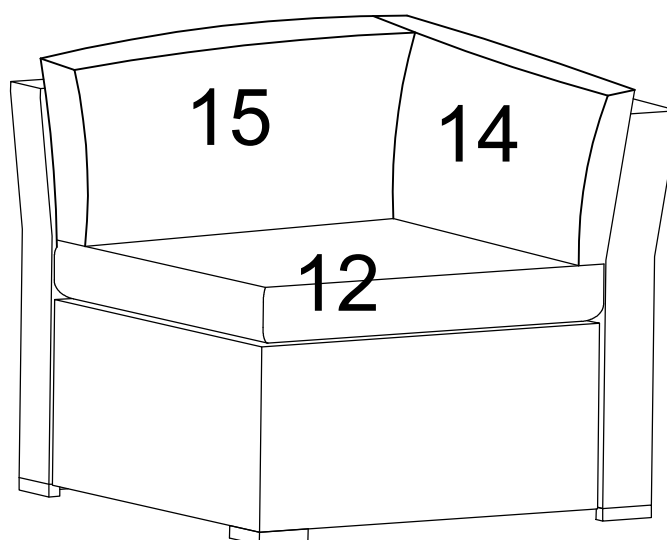 


Note: Do not tighten bolts until all parts are connected

 
Step 1

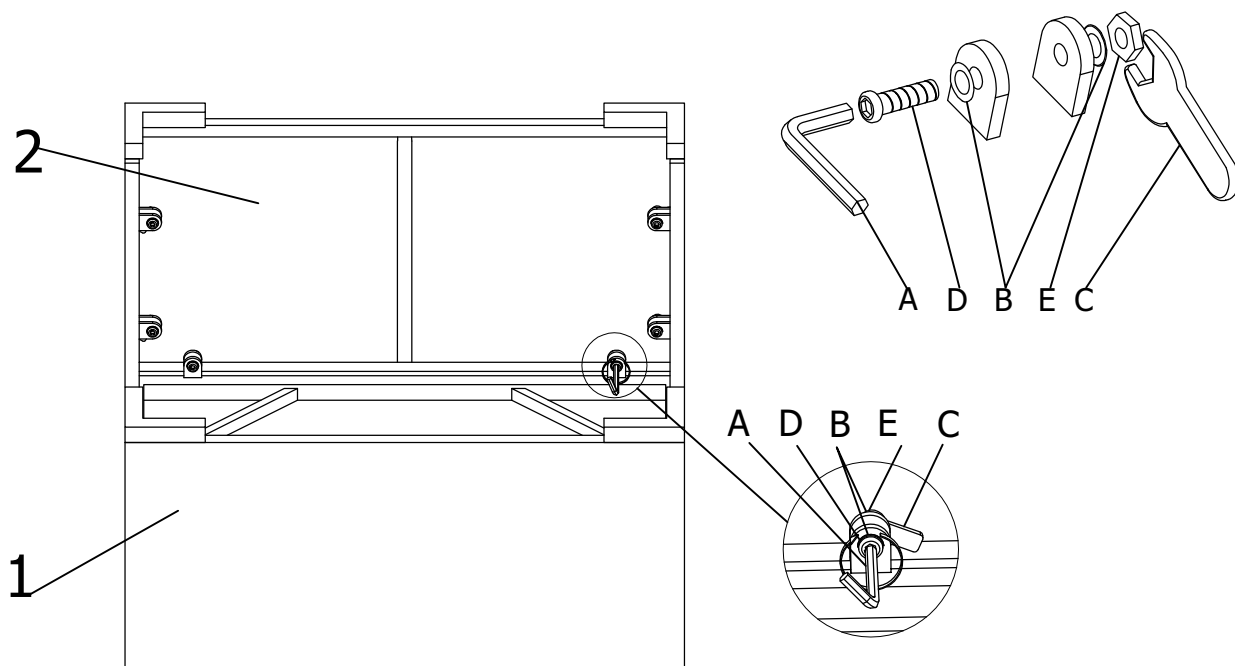


Completed unit

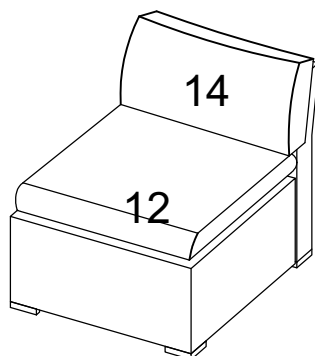 


Completed unit

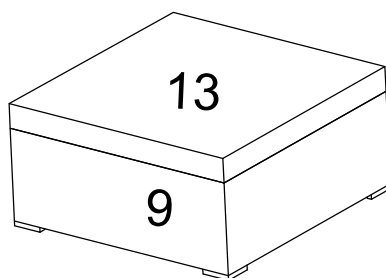 


Completed unit

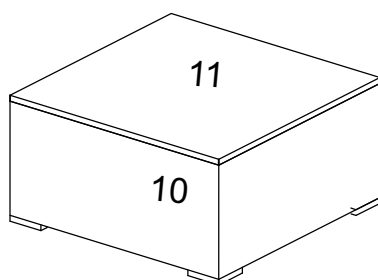 

Connector installation instructions

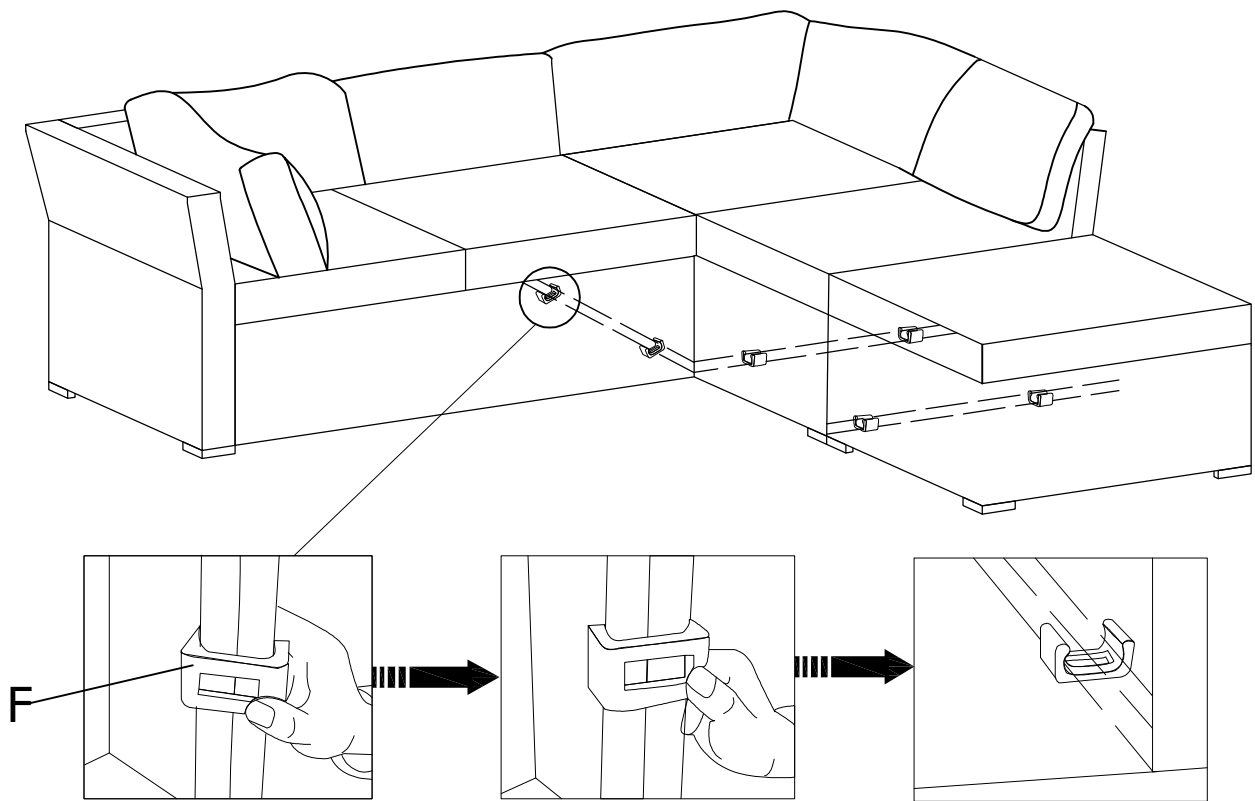 

Final Assembly

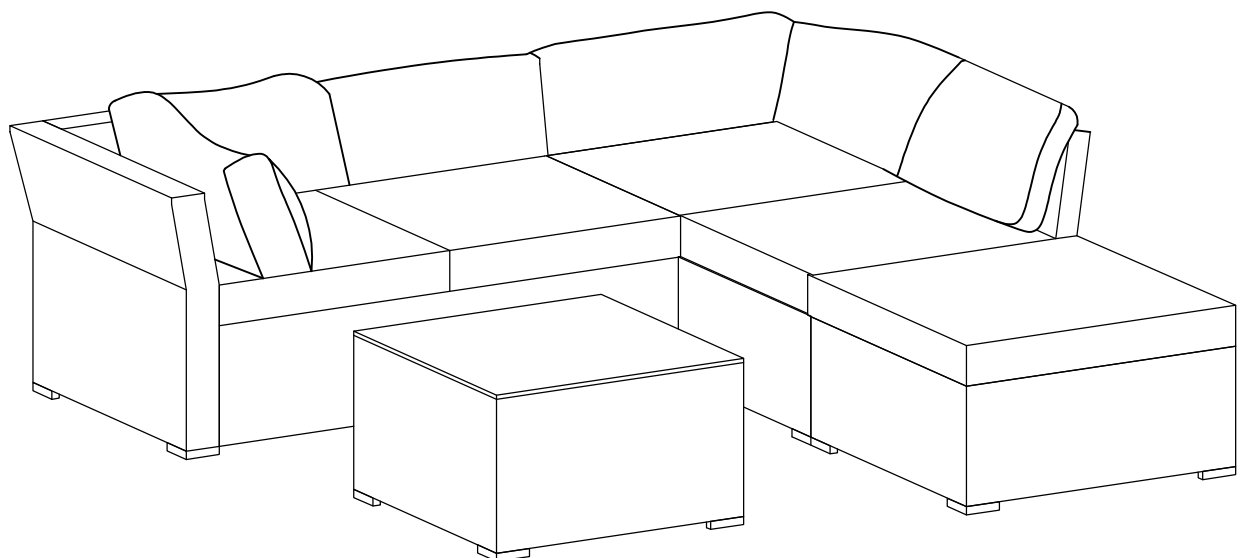 

Bestsign International Inc.

900 Canada Ct, City of Industry, CA 91748

Tel: (626) 363-2901 Fax: (626) 363-2914

Furniture Care & Cleaning Instructions

- Do not expose the furniture to strong sunlight, which causes discoloration and shorten the product lifetime.
- Do not expose the furniture to extreme heat, cold, or humidity, which may cause wood to swell or warp.
- Do not leave the furniture wet with beads of water standing on the furniture.
- Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use.
- Wipe spills with a clean dry cloth. Do not use chemicals or abrasives for cleaning!
- TAKE NOTE: THE BOLTS MAY SLIGHTLY LOOSEN OVER TIME. IF YOUR FURNITURE FEELS "WOBBLY" OR LOOSE, PLEASE RE-TIGHTEN BOLTS.

Wicker Outdoor Furniture: For daily care, wipe with a soft dry cloth. Wipe spills with a clean dry cloth. Avoid the use of harsh cleaners and abrasives. Store indoors during long periods of inclement weather. Make sure furniture is completely dry before storage. Cover furniture with outdoor covers (sold separately) when left outside during inclement weather or when not in use. Use a proper outdoor cover that allows for adequate ventilation without trapping moisture.

Outdoor Furniture Cushions: Extend the life of your cushions by keeping them free of dirt and foliage. Periodically shaking or rinsing the cushions is recommended. Thoroughly flush using a hose with cold water to remove all soil and residue. For deeper cleaning, spot clean with mild soap. Do not machine wash or use chlorine bleach. Stand cushions on end and dry completely in the sun before using or storing. Do not place in dryer. To prevent mildew, never wrap in plastic for storage and ensure the cushion is completely dry before storing. Store indoors when not in use for long periods of time or during inclement weather.

FURNITURE WARRANTIES

ALL-WEATHER WICKER & FRAMES

One-year warranty on all of our All-Weather Wicker Frames from date of delivery against manufacturer defects and structural failure (e.g., broken frame and welds) under normal use and conditions; One-year warranty from date of delivery against fading and cracking of wicker. Frames will be replaced, repaired or refinished in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

CUSHION INSERTS

Limited One-year warranty from date of delivery against manufacturer defects or excessive deformity of cushions under normal use and conditions. Replacements and repairs will be in the original color and style, if available; a similar color and style will be offered if the original has been discontinued.

IMPORTANT LIMITATIONS

Please note that our warranties do not cover failure due to any repairs or modifications to the product after purchase, accidental damage, abuse, misuse, commercial use, or normal wear and tear, including: fading, scratched or chipped finishes, weathering under normal weather conditions, staining or discoloration. The term "lifetime" as used in this statement of warranties shall mean a period of no longer than 30 years from the date of delivery of any item covered by a one-year warranty. The limited warranties described above are extended to the original purchaser of the product only.