 


ACADIAN / NORMANDY / BRUNSWICK

CONSOLE / SOFA TABLE

MODEL # AXWELL3-002-GR

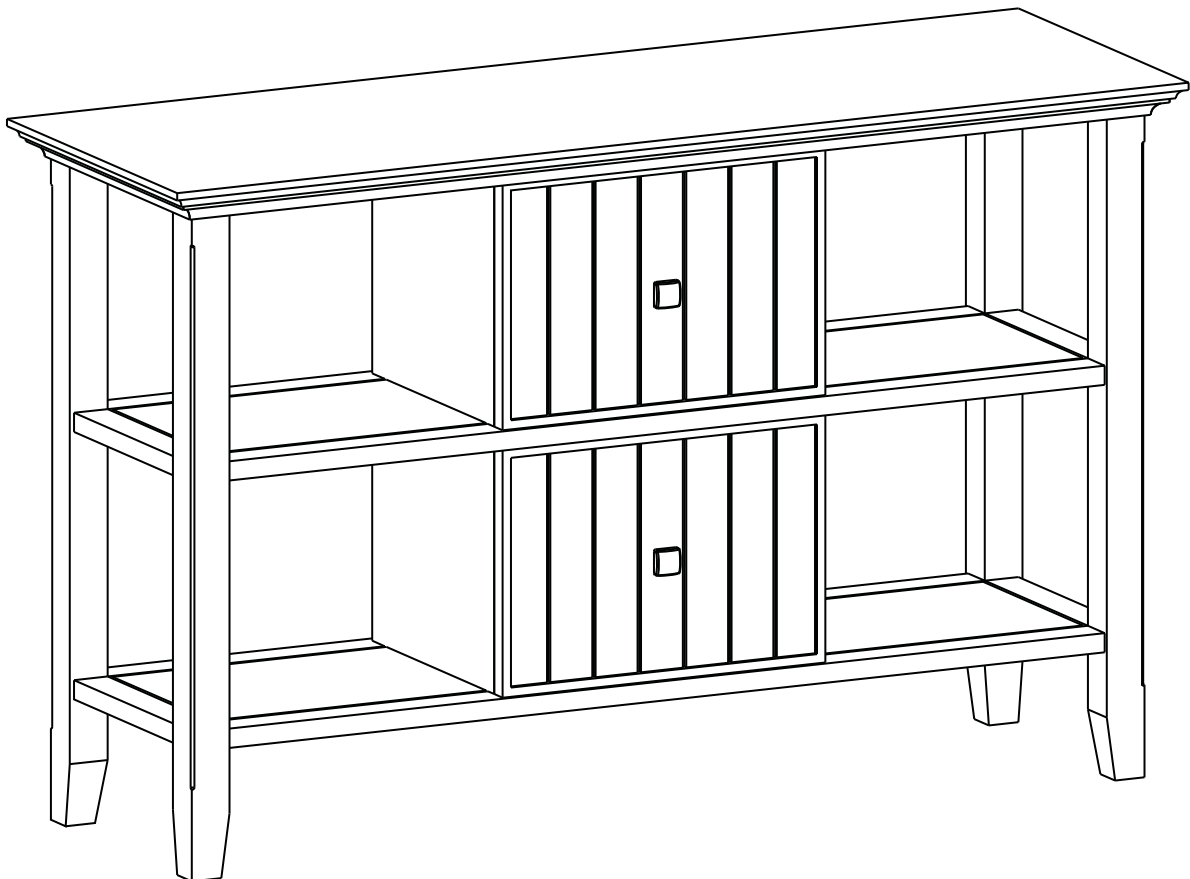



**FOR REPLACEMENT PARTS OR HELP WITH
ASSEMBLY PLEASE CONTACT US AT:**

simpli-home.com/customer-support

**PLEASE ENSURE TO HAVE THE MODEL #
FROM THE PACKAGING OR INSTRUCTION BOOKLET**

**TO RETURN THE PRODUCT:
PLEASE CONTACT THE RETAILER
WHERE THE ITEM WAS PURCHASED FROM**



**ENTER
TO WIN**

**Upload an image of our furniture
in your home with a short review
to our facebook page for a chance to**

**Win up to \$3000 of
Simpli Home furniture!!!**

www.facebook.com/simplihomefurnishings



IMPORTANT : Please read this manual carefully before beginning assembly of this product. Keep this manual for future reference.

SAFETY INFORMATION

Identify all the parts and hardware. Do not discard of the packaging until you have checked that you have all of the parts and hardware required. Hardware package may have spare parts.

WARNING: This item contains small parts which can be swallowed by children and pets. Keep children and pets away during assembly. To avoid danger of suffocation, always keep plastic bags away from children and pets. We recommend that you assemble this unit on a carpeted floor to avoid scratches. If using power tools, set the tool to low torque to avoid damage.

May require 2 people for ease of assembly.

CARE and MAINTENANCE

To clean, use a soft or slightly damp cloth, then wipe with a clean, dry cloth. Dust with soft dry cloth.

Do not use ammonia-based cleaning products, as they will damage the finish.

 
Do not leave liquids or damp cloths on this furniture.

To avoid dulling of the finish, do not place furniture in direct sunlight.

Please inspect and tighten all screws or bolts on a regular basis to ensure proper performance and safety of your item.


PARTS DESCRIPTION

A

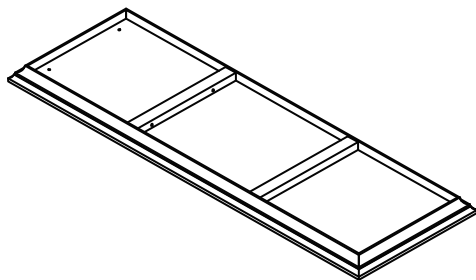


TOP
QTY 1

 B

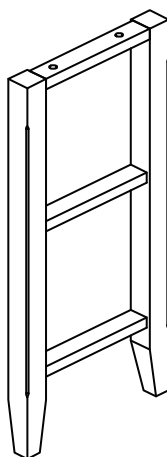


SIDE
QTY 1 PAIR

 C

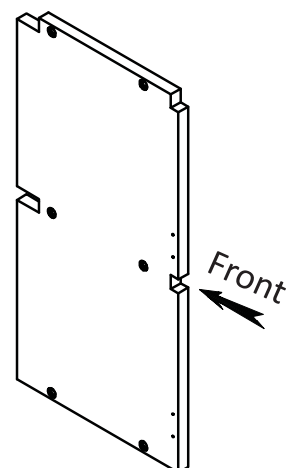


SHELF SIDE
QTY 1

 C1

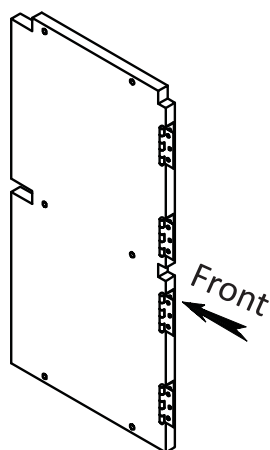


SHELF SIDE
QTY 1

 D

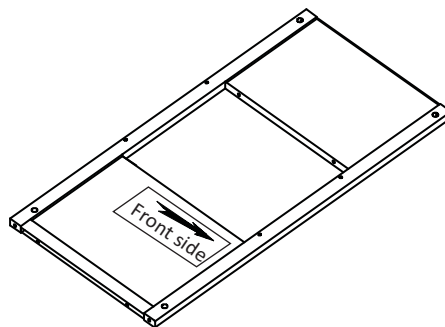


SHELF PART
QTY 2

 E

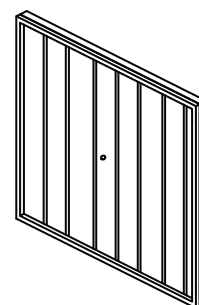


DOOR
QTY 2

 F

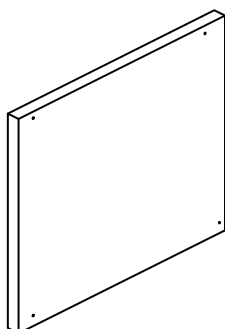

SHELF PANEL
QTY 2

 G

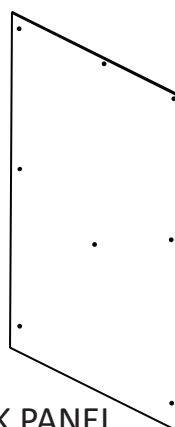


BACK PANEL
QTY 1

NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)


HARDWARE DESCRIPTION

 1



ALLEN KEY SCREW
M6 X 30 mm
QTY 16

 2




CAM LOCK PIN
CAM LOCK
QTY 8

3




WOOD DOWEL
Ø8 X 30 mm
QTY 8

 4




ALLEN KEY
QTY 1

 5




PHILLIPS LONG SCREW
M4 X 30 mm
QTY 8

 6




PHILLIPS SHORT SCREW
M3 X 12 mm
QTY 12

 7




PHILLIPS SCREW
ROUND HEAD
M4 X 15 mm
QTY 8

 8

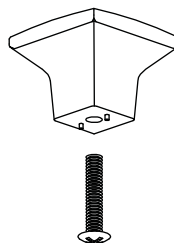

HANDLE
QTY 2 SETS

 9

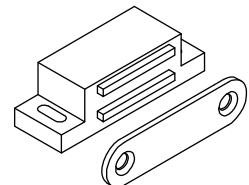


MAGNET and PLATE
QTY 2 SETS

10




 PHILLIPS SHORT SCREW
M3 X 15 mm
QTY 8

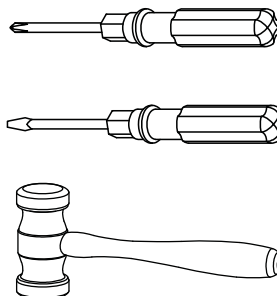


Required -
Flathead screwdriver
Phillips screwdriver
Rubber mallet
Not Included

 NEED HELP? For help with assembly or if you are missing a part,
Please call customer service at 1-866-518-0120 ext. 262 (9 am to 4 pm EST)

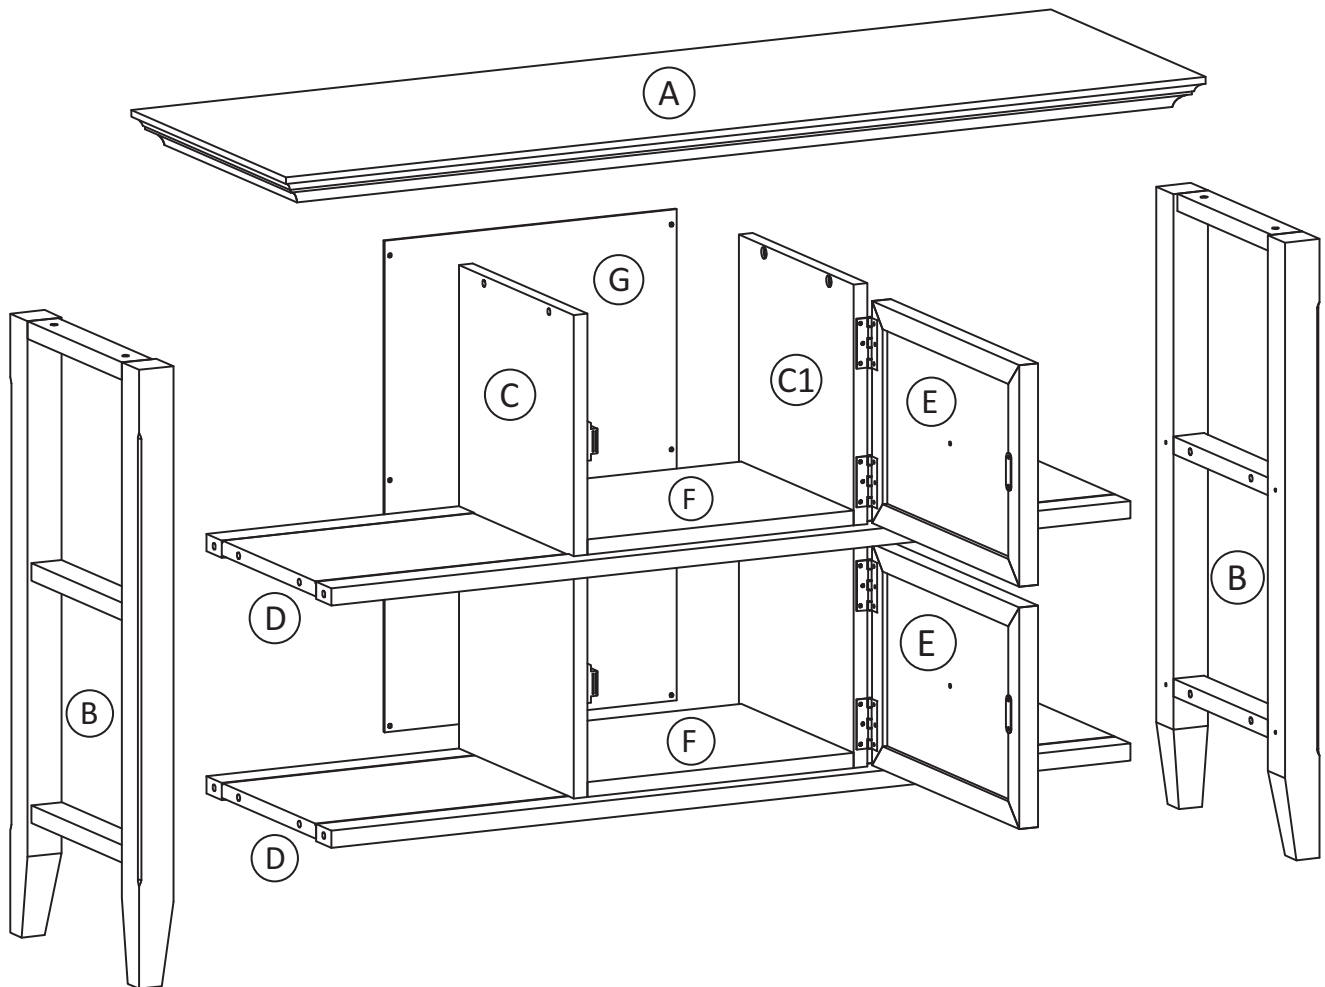


 STEP 1

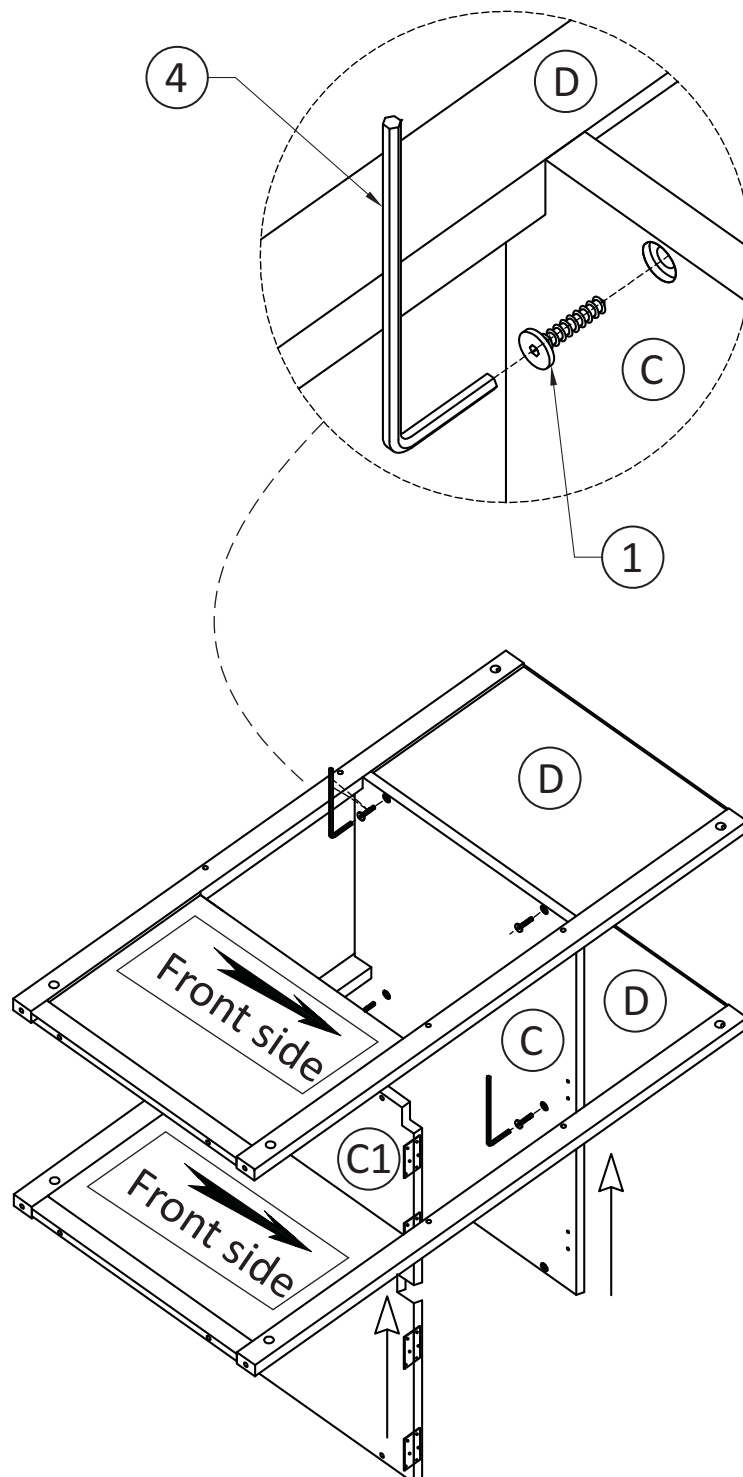


1. Attach Shelf Side (C) and (C1) to Shelf Part (D) with Allen Key Screw (1) through pre-drilled holes.
2. Use Allen key (4) to tighten screws. Do not over tighten.

 STEP 2




 NOTE: The screwdriver is not included in the hardware pack.

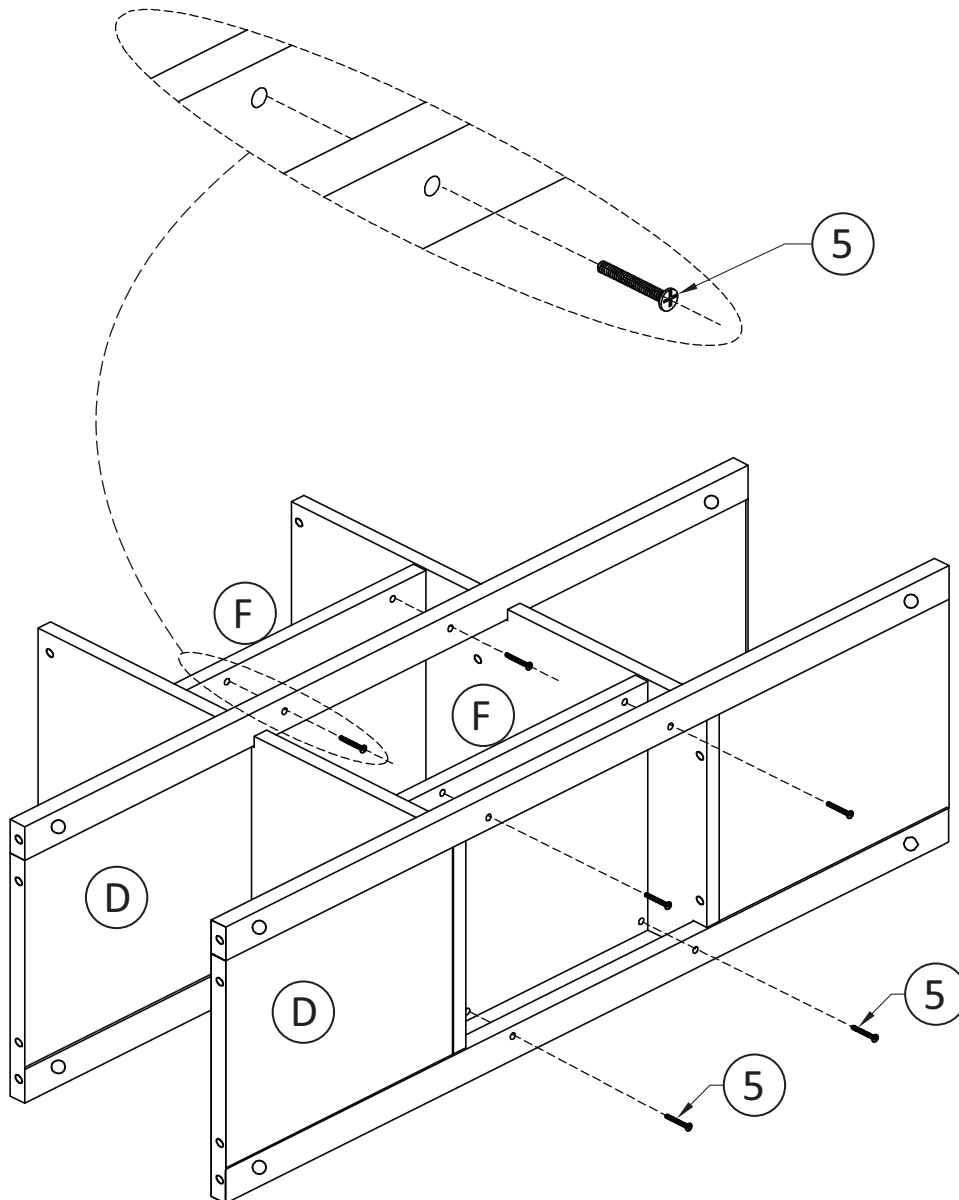


1. Attach Shelf Panels (F) to Shelf Parts (D) with Phillips Long Screws (5) through pre-drilled holes.
2. Use Phillips screwdriver to tighten screws. Do not over tighten.

 STEP 3

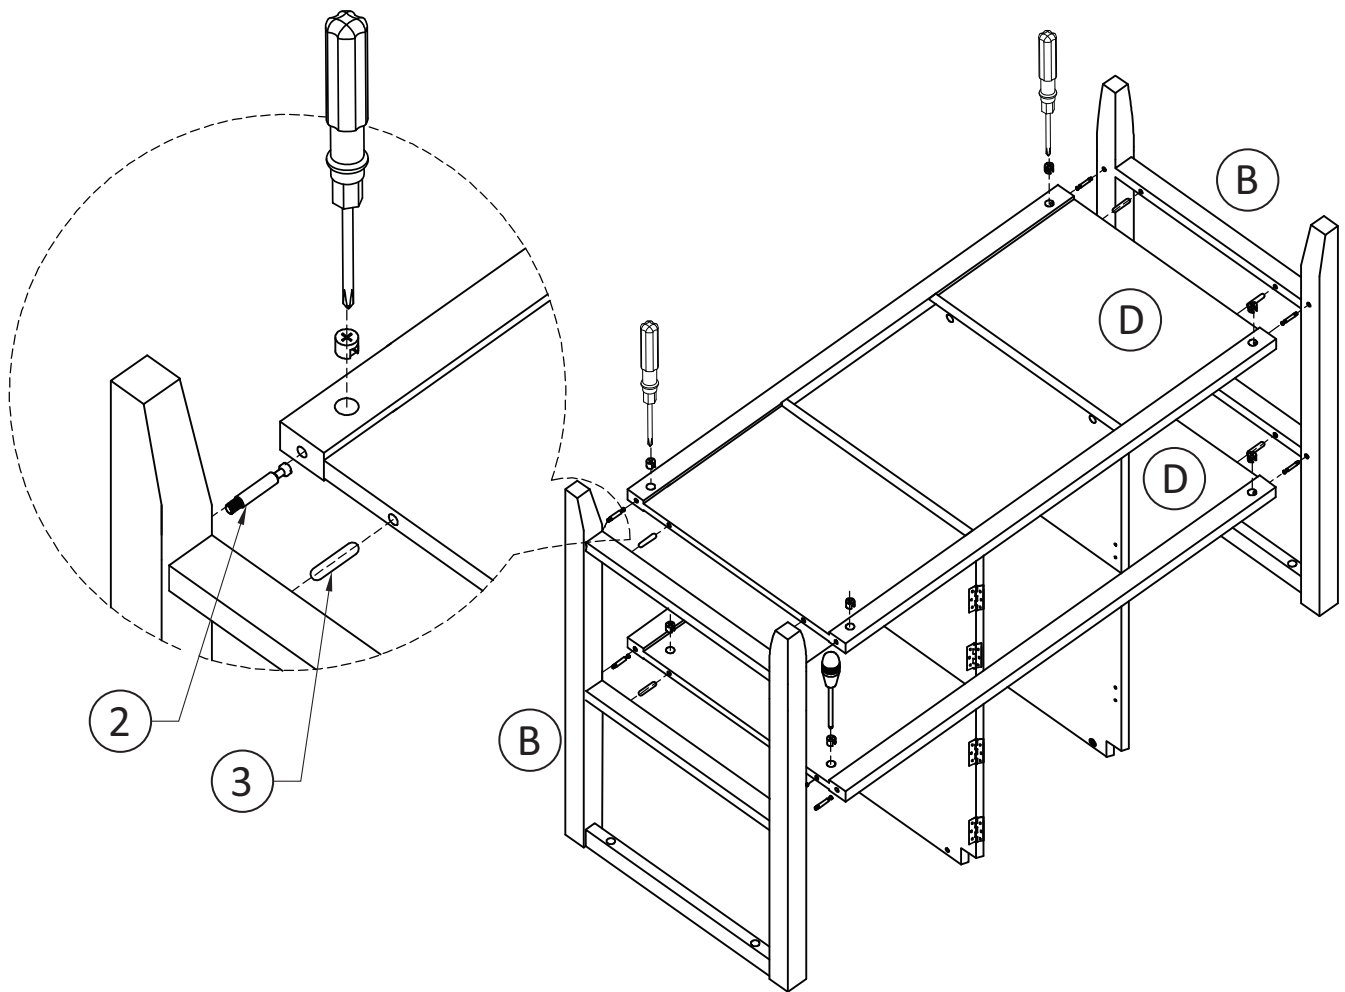


1. Insert Cam Lock Pins (2) and Dowels (3) to Sides (B) into guild holes.
2. Use rubber mallet to tap Dowels (3) into bottom of holes securely. 1/2 length of dowels should be expose.
3. Align and insert Cam Lock Pins (2) on Side (B) into pre-drilled holes on Shelf Part (D)
4. Insert four Cam Locks (2) into pre-drilled holes on each Shelf Part (D).
5. Using a flathead screwdriver tighten Cam Locks into Pins.

 STEP 4

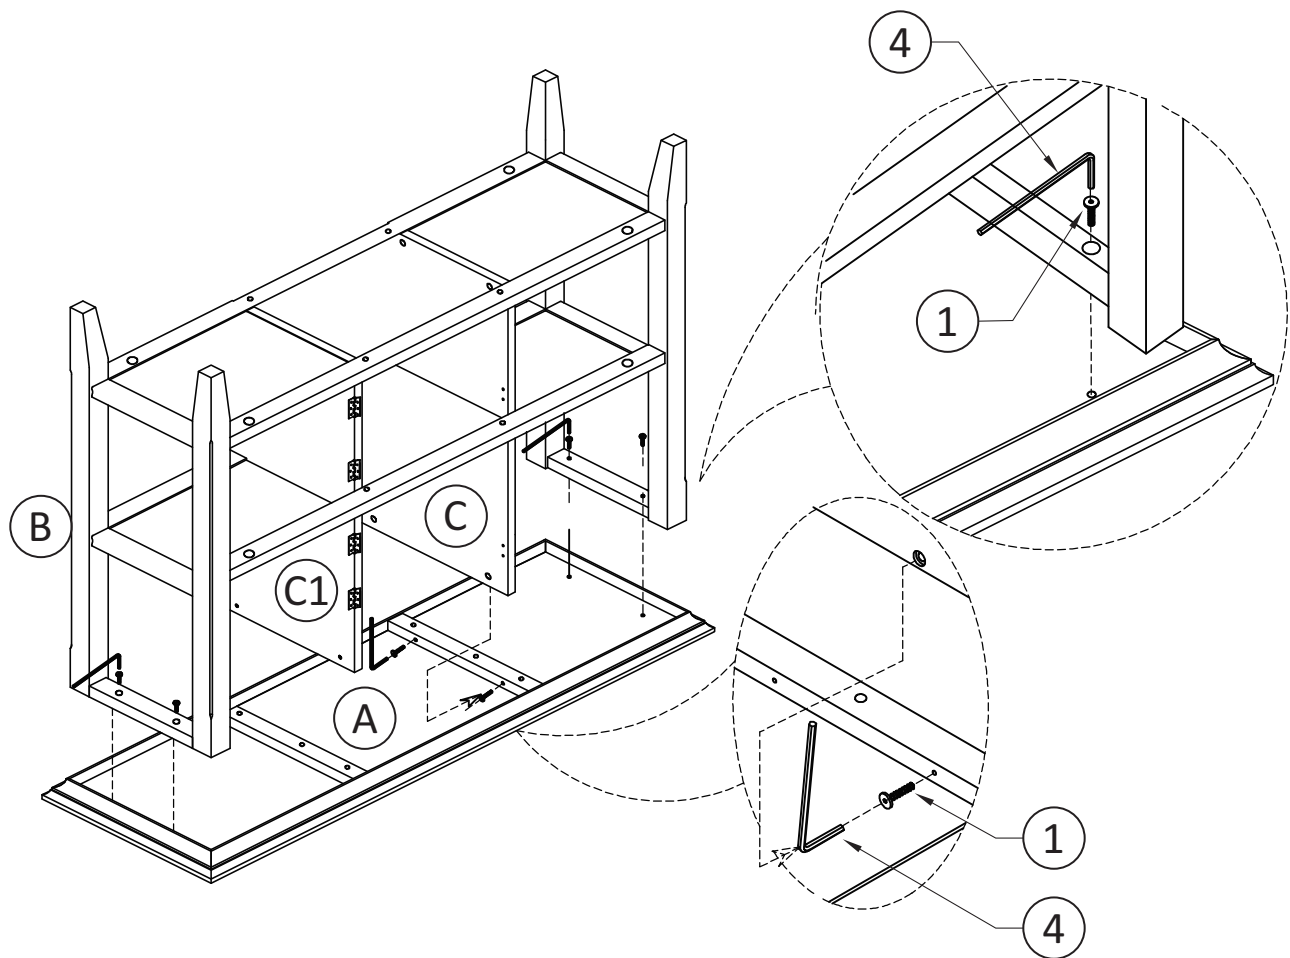


1. Using eight Allen Key Screws (1) to attach Top (A) to Sides (B) and to Shelf Sides (C) and (C1).
2. Use Allen Key (4) to tighten screws. Do not over tighten.

 STEP 5




 NOTE: The screwdriver is not included in the hardware pack.

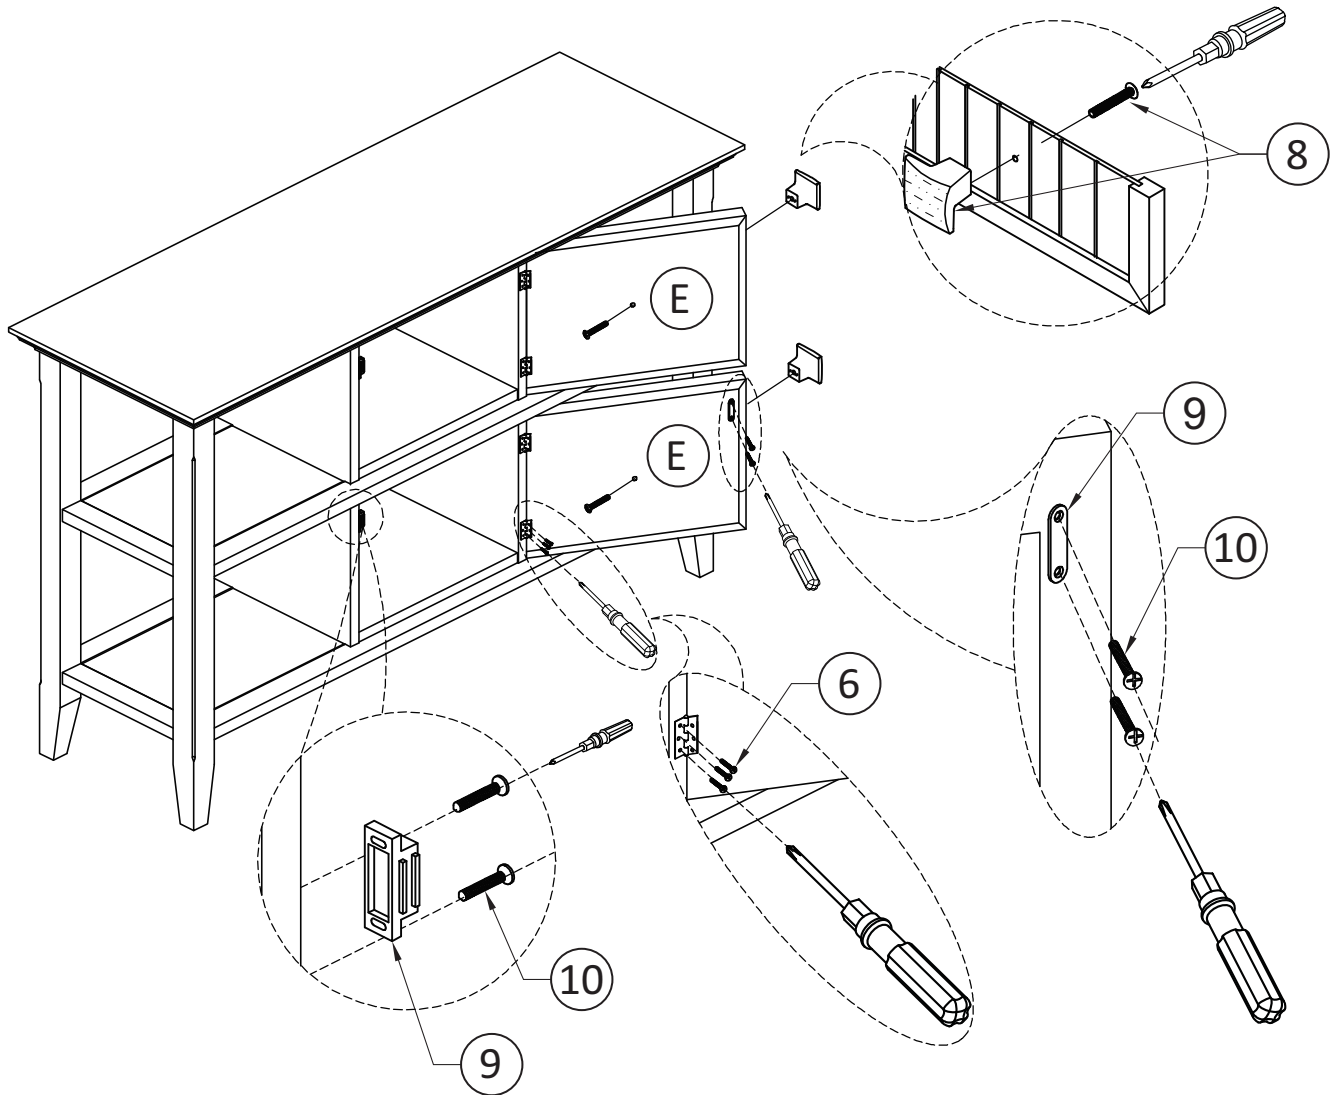


1. Attach Doors (E) to Shelf Side (C1) using Phillips Short Screws (6) into guide holes.
2. Attach two Magnet Plates (9) to top side of Doors (E) using Phillips Short Screws (10) into guide holes on Doors (E).
3. Attach two Magnets (9) using Phillips Short Screws (10) into guide holes on Shelf Side (C).
4. Use Phillips screwdriver to attach Handles (8) to Doors.
5. Use Phillips screwdriver to snugly tighten screws.

 STEP 6



 NOTE: The screwdriver is not included in the hardware pack.

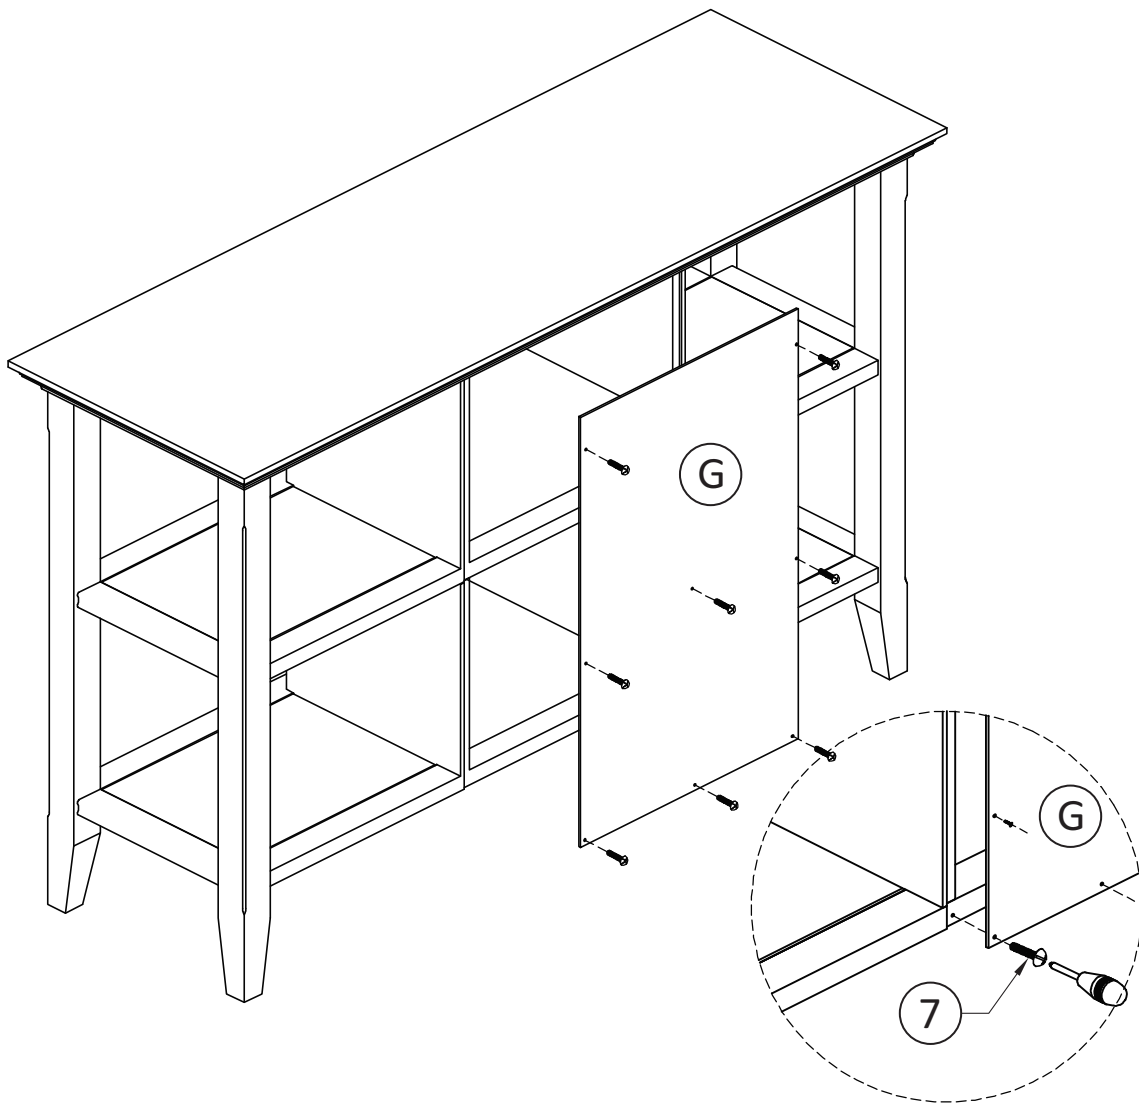

1. Use Phillips Round Head Screws (7) to attach Back Panel (G) to back of Console Table.
2. Use Phillips screwdriver to snugly tighten screws.



WARRANTY

Thank you for purchasing a **Simpli Home – Wyndenhall – Brooklyn + Max** product. These products have been made to demanding, high-quality standards and are guaranteed for domestic use against manufacturing faults for a period of 12 months from the date of purchase. This warranty does not affect your statutory rights.

In case of any malfunction of your product (failure, missing parts, etc.) please contact us at our toll free service line at 1-866-518-0120 ext. 262 from 9 am to 4 pm, Monday to Friday, Eastern Standard Time or by email at [simpli-home.com/customer-support](https://www.simpli-home.com/customer-support).

We reserve the right to repair or replace the defective product, at its discretion.

This product is guaranteed for 12 months if used for normal purposes. Any warranty is invalid if the product has been overloaded or subject to neglect, improper use or an attempted repair by other than an authorized agent. Heavy-duty or daily professional/commercial usage are not guaranteed.

Due to continuous product improvement, we reserve the right to change the product specifications without prior notice.



Question, problems, missing parts?

Before returning your product
please email Customer Support at
simpli-home.com/customer-support

or call

Customer Support at 1-866-518-0120 ext. 262
Monday to Friday between 9 am – 4 pm EST

For more information visit us on our website
www.simpli-home.com

Like us on facebook
www.facebook.com/simplihomefurnishings