

BT-70222-NW PARTS

ASSEMBLY INSTRUCTION

(1)X1	(9)X2	①	②
(2)X1	(10)X4		
(3)X1(L)X1(R)	(11)X2		
(4)X1	(12)X4	③	④
(5)X1	(13)X4		
(6)X1	(14)X1	⑤	⑥
(7)X4	(15)X1		
(8)X4	(16)X1		
	(17)X1		