
 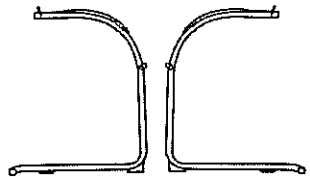
 


BT-509 PARTS

ASSEMBLY INSTRUCTION

(1)X1 	(5)X4 
(2)X1(L)x1(R) 	(6)X2 
(3)X1 	(7)X2 
(4)X1 	(8)X1 

