

ASSEMBLY INSTRUCTION

SUNPAN

Sunpan Product Name: **HERRIOT CONSOLE TABLE**

Please visit our website www.sunpan.com for more great products

For assembly questions please call **1-800-787-1019 (or +1-416-736-0094)** outside North America or email to info@sunpan.com

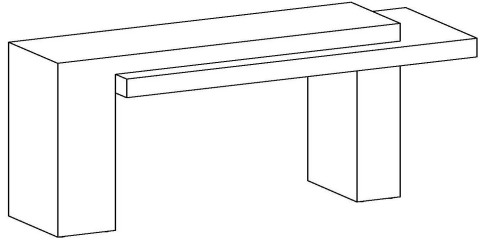
PARTS LIST

Before you begin, please layout all parts and ensure you have the correct count.

| PARTS | DESCRIPTION | QUANTITY | ILLUSTRATION |
|-------|----------------------|----------|--------------|
| A | Base 1 | 1 | |
| B | Top | 1 | |
| C | Base 2 | 1 | |
| D | Socket wrench #17 | 1 | |
| E | Hexagon Bolt M10x90 | 2 | |
| F | Washers M10x26x2 | 4 | |
| G | Hexagon Nut M10 | 2 | |
| H | Threaded Rod M10x690 | 2 | |

ASSEMBLY INSTRUCTIONS

| STEPS | DESCRIPTION | ILLUSTRATION |
|-------|---|--------------|
| 1 | Insert Threaded Rods (H) into bottom of Base 1 (A). Tighten the Rods. | |
| 2 | Insert Threaded Rods through Top (B). Attach Top to Base 1 with Hexagon Bolts M10x90 (E) and Washers (F). Tighten using Socket Wrench #17 (D). | |
| 3 | Insert Threaded Rods through Base 2 (C). Attach with Hexagon Nuts M10 (G) and Washers (F), using Socket Wrench #17 (D) to tighten. Turn the unit to its upright position. | |

| | | |
|---|---------------------|--|
| 4 | Assembly completed. |  |
|---|---------------------|--|

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.
 Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.
 Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.
 Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement.
 Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:
 Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.
 Excessive exposure to sunlight may cause fading.
 Excessive temperature and humidity or cold may cause cracking or splitting.
 Dust with a clean, damp, lint free cloth.
 Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.
 Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.