ASSEMBLY INSTRUCTIONS

(For LD1238DSF-44)

ATTENTION:

- 1. Please read these instructions carefully before assembly.
- 2. Aluminum is soft metal over tighten may strip threads or break the part.
- 3. DO NOT use power tools.
- 4. Check parts against the parts list to make sure you have all parts needed for proper assembly.
- 5. Familiarize yourself with the inventory of parts and the accompanying illustrations to ensure safe and proper assembly.

Parts list	Parts picture	Description	Q'ty	Parts list	Parts picture	Description	Q'ty
				F	(M8*35)	Bolt	4
A		Table top	1	G		Big flat washer	4
				Н	0	Big lock washer	4
В	9999	Door	1	I		Big nut	4
				J	Œ	Nut cap	4
С		Side panel	2	K	(M6*25)	Bolt	5
				K1		Small flat washer	11
D	0000000 00000000	Back panel	1	L	0	Small lock washer	10
_	Tank	Tank sings	1	М	9	PVC washer	1
Q		Tank ring		N	(M6*20)	Bolt	6
R		Basin cover	1	Р	(B)	PVC cover	10
				Т		Wrench	1
S		Cross stretcher	1				
0	(N)	Wrench	1	U		Gas grill basin	1
W		Foot leveler	Factory already assembled	\ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \			1
X		Umbrella ring	1	V	**	Volcano	ı

Made in China

***DO NOT OVER TIGHTEN**

***NO POWER TOOLS**

***NO SOCKET DRIVERS**





ASSEMBLY INSTRUCTIONS

(For LD1238DSF-44)

Assembly steps:

- 1. Loosely attach the Side panel (C)to the table top(A) with bolts(F),big flat washers(G),lock washers(H),nuts(I)and nut caps(J).DO NOT over-tighten.Loosely attach the Back panel (D)to the Side panel (C) with bolt(K),small flat washer(K1) and small lock washer(L).
- 2. Loosely attach the door(B)to the Foot box(C)with PVC washer(T), small flat washers(L) and bolt(J). Tighten all the bolts and nuts completely.
- 3. Loosely attach the Cross stretcher(S) to the Side panel(C) with small flat washers(K1), small lock washers(L), bolts(N) and PVC covers(P).
- 4. Loosely attach the Tank ring (Q) to the door(B) with small flat washers(K1),small lock washers(L),bolts(N) and PVC covers(P). Tighten all the bolts completely.
- 5. Turn the table as needed upright and put Basin cover(R) on the table top. Use the levelers to adjust the table.
- 6. Loosely attach the gas grill basin(U) on the table. Connect the tank with gas grill basin(U).Resistance to volcano(V) is poured into the gas grill basin(U).Note: volcano out of the crater can not caver off! Finally open the gas grill basin appear to fire just fine.

Warning: DO NOT use acid or alkaline washing liquid to clean the product.

