


# SWING CHIAR

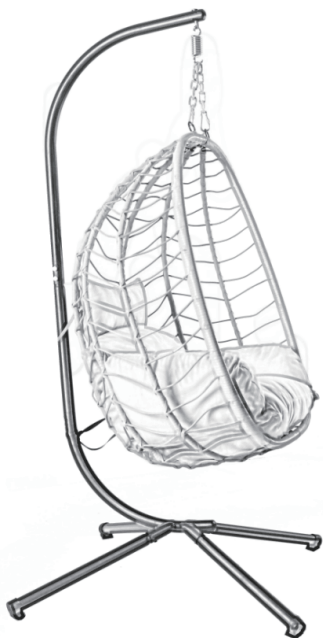

ITEM NO.: F93

## IMPORTANT

PLEASE READ BEFORE YOU COMMENCE ASSEMBLY  
Follow the guidelines in this user guide to ensure correct  
assembly and care for this product.

# COMPONENTS

## Parts list



(1)X1PC



(2)X4PCS



(3)X1PC


 










(4)X1PC



(5) X1PC

## Hardware list


A		1PC	E	 M6*15	4PCS
B		1PC	F	 M6*15	4PCS
C		2PCS	G	 M15	2PCS
D	 M10*60	2PCS	H	 M4	1PC
			I		1PC
			J	 M10	1PC

# ASSEMBLY


## NOTE

Do not use power tools when assembling this product. They may cause damage to fasteners and may affect your warranty.


## Step 1

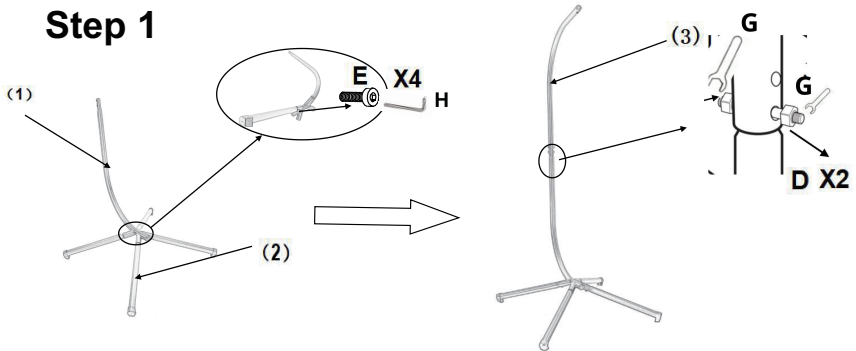

## Step 2

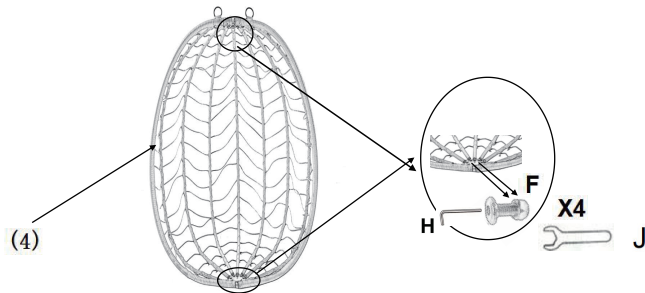

### Step 3

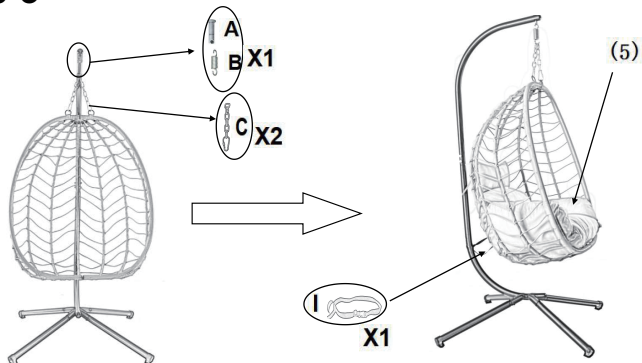

## CARE & MAINTENANCE

Depending on the amount of use this product received, it may be necessary to tighten the fixings from time to time. This is normal for any flat pack furniture.

For cleaning, use a damp cloth (not wet), dry duster and normal furniture polish.

Note that the product cannot swing around like a swing, and accidental injuries caused by improper use of the product have nothing to do with our company.

Note:

- Design and specifications are subject to change without notice.
- Weight and dimension shown are approximate.