 


# CONVENIENCE CONCEPTS

131125

## NEWPORT BENTLY TV STAND

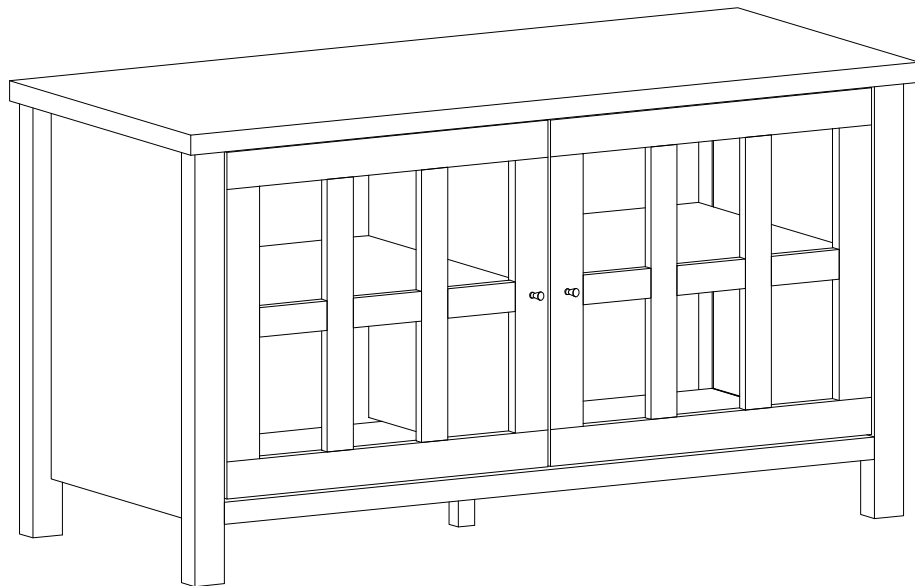

### Assembly instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow, step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give you years of enjoyment.



Please do not return to the store

Broken or missing Hardware?

 
Need help with Assembly?

If you have any questions just call 1-800-468-6447 or email us at

[parts@convenience-concepts.com](mailto:parts@convenience-concepts.com)

# PARTS IDENTIFICATION

ITEM#:131125

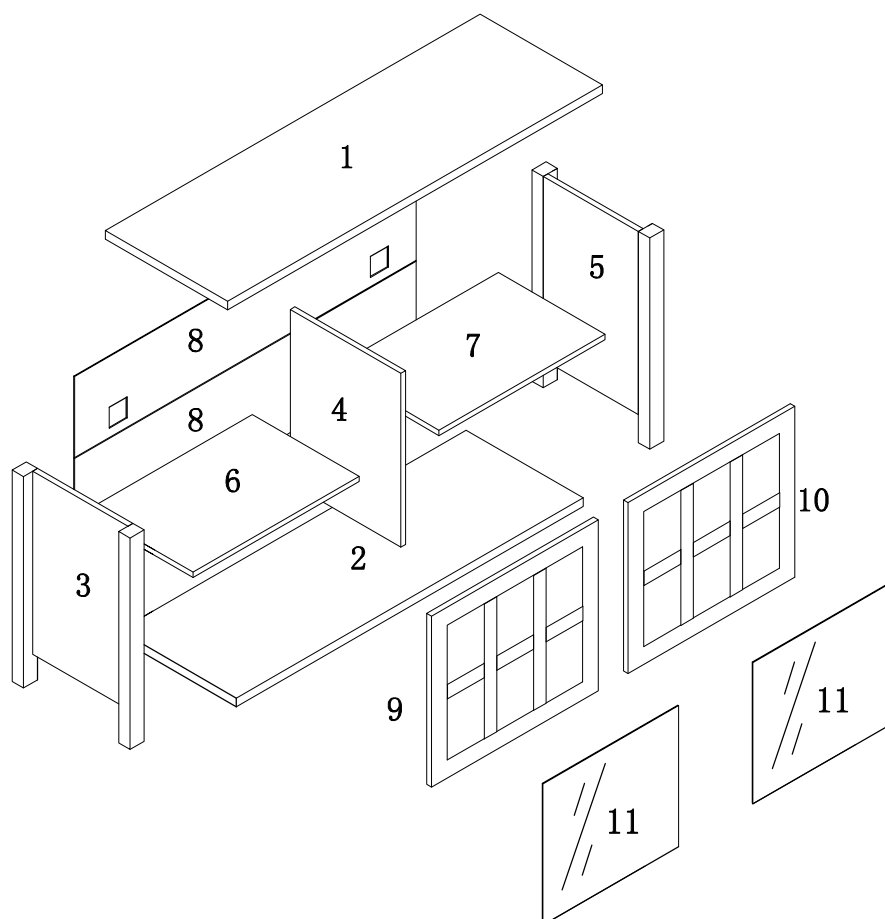

 

 


 

 
 

 

 


**Please count and verify all parts before assembly**

 
 
 
 
 
(1) Top Panel	1pc	(8) Back Panel	2pc
(2) bottom Panel	1pc	(9) Left Door Frame	1pc
(3) Left Side Panel	1pc	(10) Right Door Frame	1pc
(4) Divider Panel	1pc	(11) Glass Door	2pcs
(5) Right Side Panel	1pc		
(6) Left Shelf	1pcs		
(7) Right Shelf	1pcs		

# HARDWARE IDENTIFICATION

## ITEM#:131125

<b>A</b>		Small Screw	Ø3.5×12	8pcs
<b>B</b>		Glass Clip		8pcs
<b>C</b>		Large Screw	Ø4×35	2pcs
<b>D</b>		Dowel	Ø8×25	14pcs
<b>E</b>		Metal Leg	H85	1pc
<b>F</b>		Knob Screw	M4x22	2pcs
<b>G</b>		Knob		2pcs
<b>H</b>		Cambolt	L29	18pcs
<b>I</b>		Camlock	Ø15	18pcs
<b>J</b>		Sticker	Ø20	6pcs
<b>K</b>		Nail		30pcs
<b>L</b>		Hinge	301A	4pcs
<b>M</b>		Middle Screw	Ø4x16	18pcs
<b>N</b>		Foot Pin		4pcs
<b>O</b>		Glue	Glue: For securing please apply to wood dowel first before inserting into panel.	1pc


### Assembling the unit with camlocks and wood dowels.

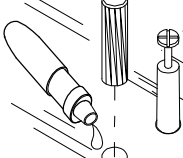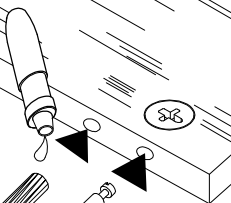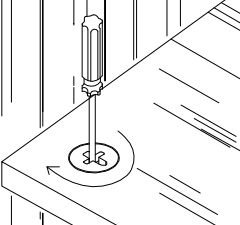				
Insert camlock, camlock must face bolt hole	Gently screw cam dowel into the threaded anchor	lightly glue one end of wood dowel and tap into hole.	lightly glue dowel and connect to second panel by inserting dowels into holes	Gently screw the cam clockwise into locked position. Do not overtighten.

# Step1

 PAGE: 4 of 7


Attach glass doors (11) to door frames(9,10) using glass clips (B) and screws (A) as shown.

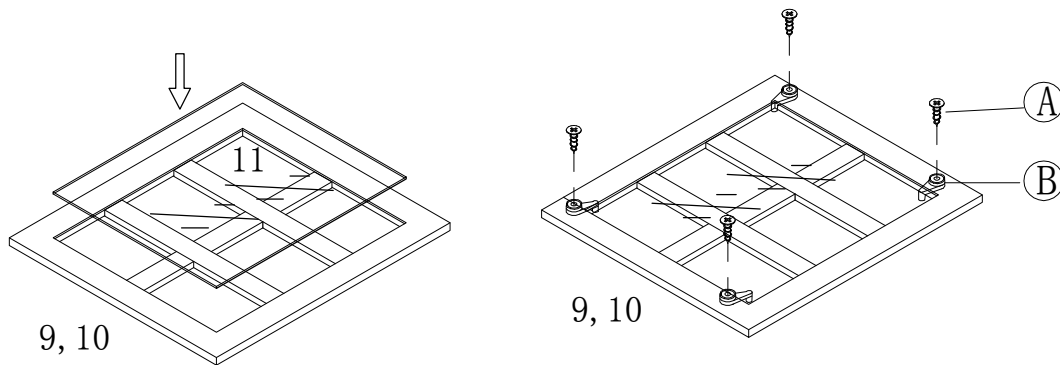

Note: \* Place item on a smooth/soft surface such as a towel or carpet.

# Step2

 
1. Attach dowels (D) cambolts (H) into shelf (6), shelf (7) and bottom panel (2).
2. Attach divider panel (4) to shelf (6) and bottom panel (2) using screws (C) and camlocks (I) as shown.
3. Do not overtighten camlocks.

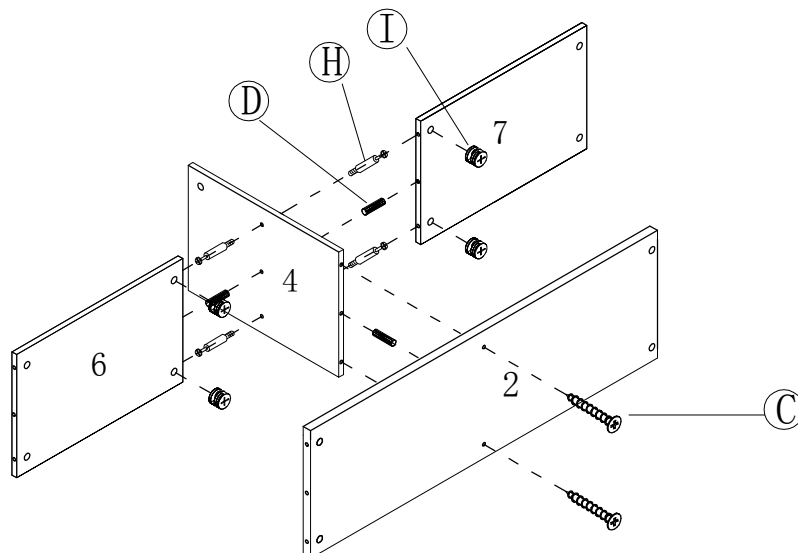

# Step3


PAGE: 5 of 7

 1. Attach dowels (D) and cambolts (H) into side panel.
2. Attach side panel (3,4) assembly to shelf (6) and bottom panel (2) using camlocks (I) as shown.

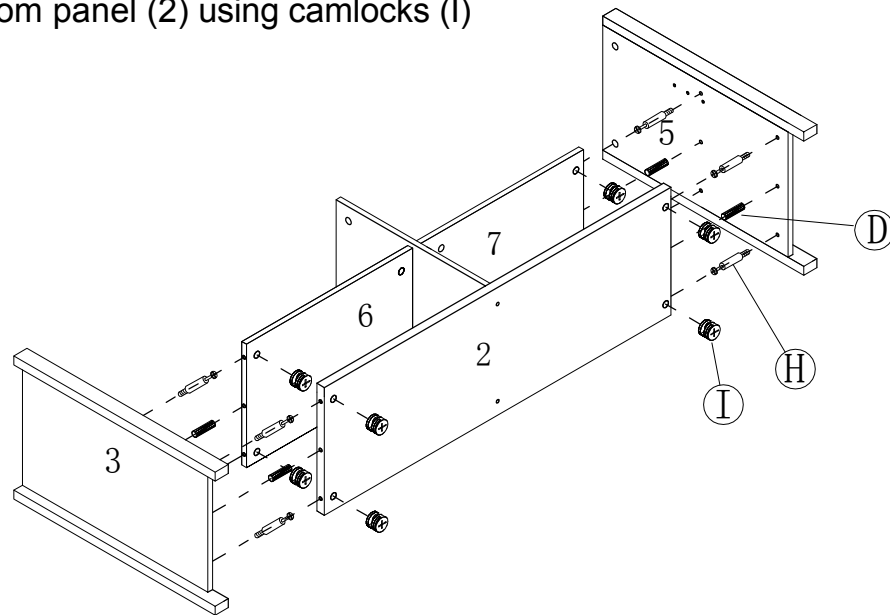

# Step4

 
1. Attach dowels (D) and cambolts (H) into top panel (1).
2. Attach top panel (1) to side panel (3,5) and divider panel (4) using camlocks (I) as shown.
3. Place sticker over holes.

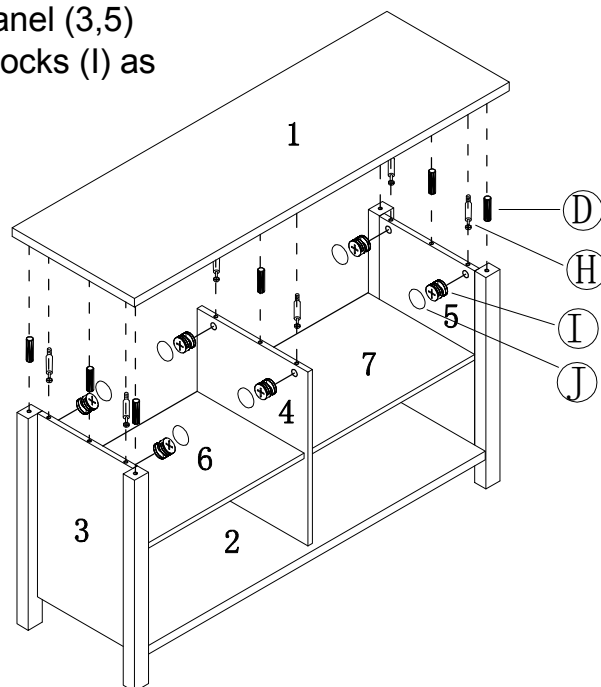

# Step5


PAGE: 6 of 7

 1. Attach back panel (7,8) using Nails (K) as shown.
2. Tap foot pin (N) to legs.
3. Connect metal leg (E) to bottom panel (2) as shown.

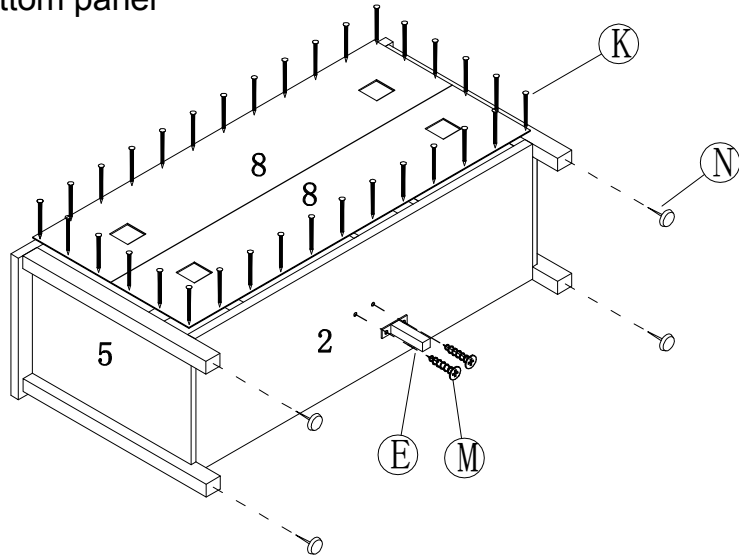

# Step6

 
Attach hinges (L) into door frames (9, 10) and side panels (3,4) using screws (M) as shown.

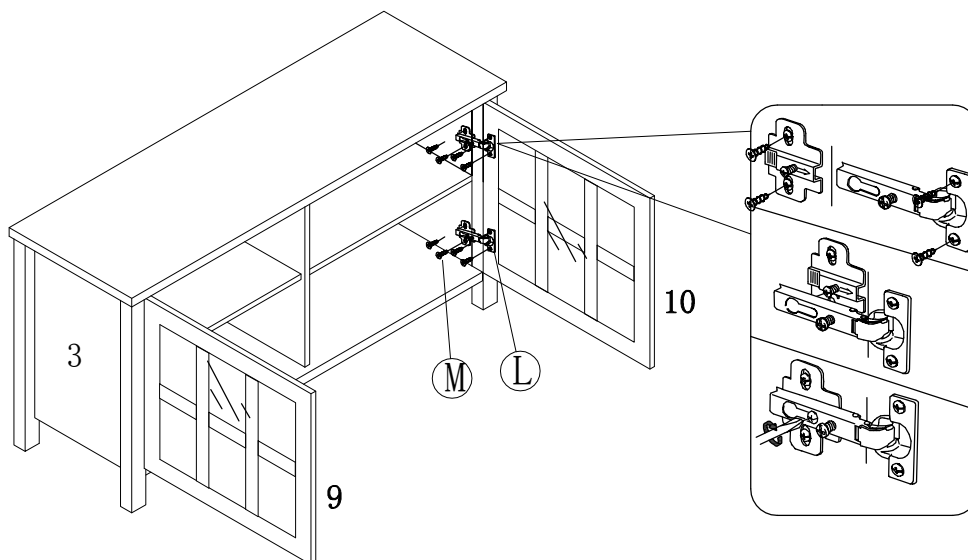

# Step7

PAGE: 7 of 7

 Attach Knob (G) to door using knob screw and washer (F) as shown.

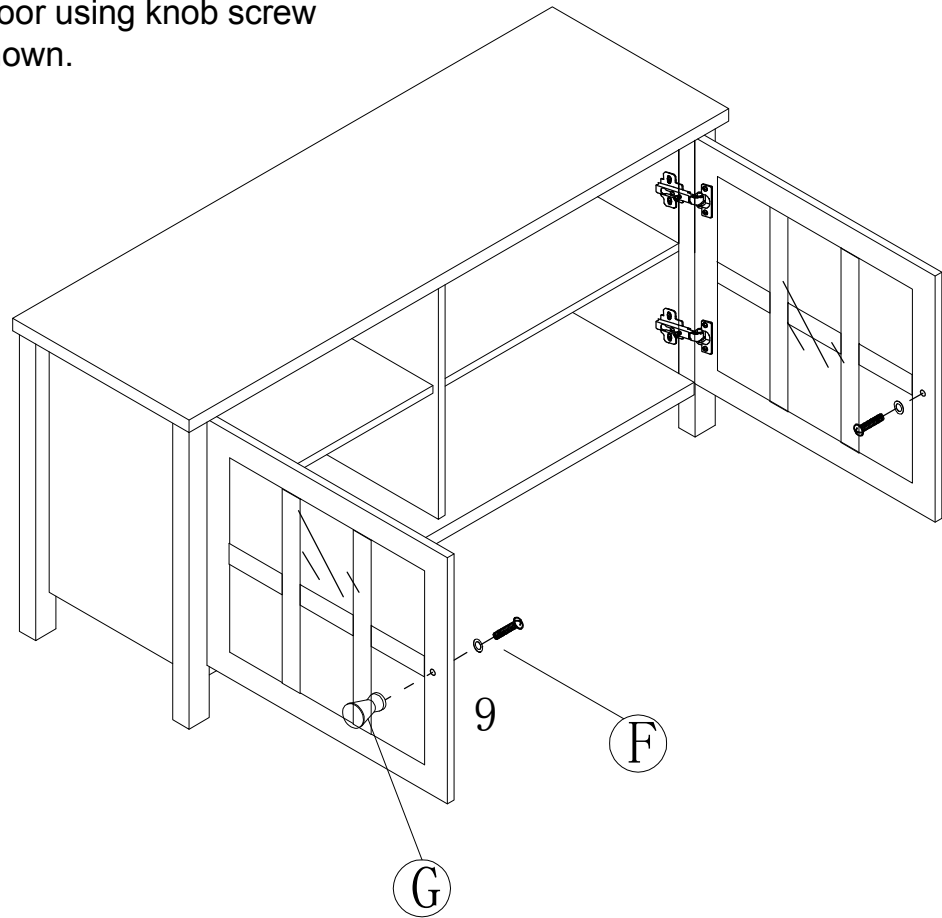

# Step8

Enjoy your TV stand!

