
		A B C D	
Attentions for lamp insta	Illation:		
 Please hire the profes The load-bearing of the second second	manual carefully before the install ssional electrician to install the lan ne customeri's ceiling must be ov ut off until the whole lamp is instal lectric shock and cause the unner	np. er 3 times of the light weight. lled well.	
	g the lamp.		
5. To avoid getting an el	-	C. Crossbar Screws	
5. To avoid getting an el power when cleaning	-	C. Crossbar Screws	

USER MANUAL FOR MODEL# HG8882


Light Bulb:E12 1i

lig	ht:E1	2 * 4
-----	-------	--------------

(Rated 110-130V/60Hz, bulb 60W maximum.)

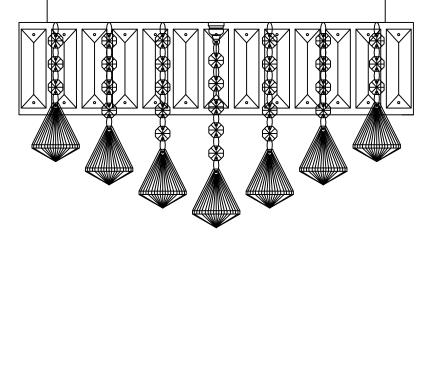

Please note: The parts in this table are completely unassembled, for illustrative purpose. In the actual product that you receive, some parts are assembled and attached together.

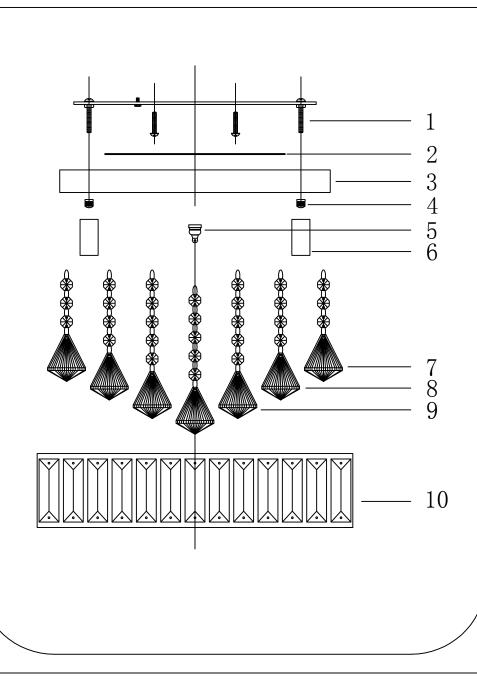

Products packing list

NO	Distance	Quantity
NO.	Picture	Quantity
1	Î	1 pcs
2		1 pcs
3		1 pcs
4	3	2 pcs
5		2 pcs
6		4 pcs
7		18 pcs
8		12 pcs
9		7 pcs
10		1 pcs

