GENERAL

This controller system provides safe and convenient remote on/off switching of two 120 V load. The system consists of the following:

> Controller, P/N SAFPAC272 Air Transmitter, P/N MPT-3428 Air Hose, 6 feet, P/N TU7-006

OPERATION

The control system works on a sealed air displacement principle. As the air transmitter button is pressed and released, sealed air is displaced and is transmitted through the interconnecting air hose, to the pressure sensitive electrical switch, completing the electrical circuit and turning the disposer on and the second device off. The circuit will remain energized until the air transmitter button is depressed and released again, turning the disposer off and the second device on.

CAUTION:

To avoid damage to this equipment, or the

INSTALLATION INSTRUCTIONS

Read all instructions before installing control system.

1) The air transmitter must be mounted within 6 feet of the controller outlet. Select a location which is convenient for user operation and easily accessible for service and/or removal. See Fig. 3

2) Drill a 1-1/4" to 1-3/8" diameter hole at the transmitter mounting location selected. The air transmitter body can be mounted through surfaces from 1/16 in. to 2 in. thick.

3) Remove the mounting nut from the air transmitter. Insert the threaded body through the mounting hole and re secure the mounting nut.

4) Connect one end of the air hose (supplied) to the fitting on the air transmitter. See Fig. 2 for additional information.


5) Route the air hose to the controller in a convenient path where it will not be kinked, cut, or become disconnected. Attach the remaining end of the air hose to the fitting on the controller. See Fig. 1.

6) Plug the controller into a dedicated, grounded, 120 V AC outlet which is continuously energized.

7) Plug the disposer into the controller.

CAUTION: The disposer may begin to operated. If it does, simply press and release the air transmitter button to turn the disposer off.

8) Be sure that the control system is operating properly before using the disposer. Press and release the air transmitter to turn the disposer on and the second device off. Press and release the air transmitter again to turn the disposer off and the second device on.

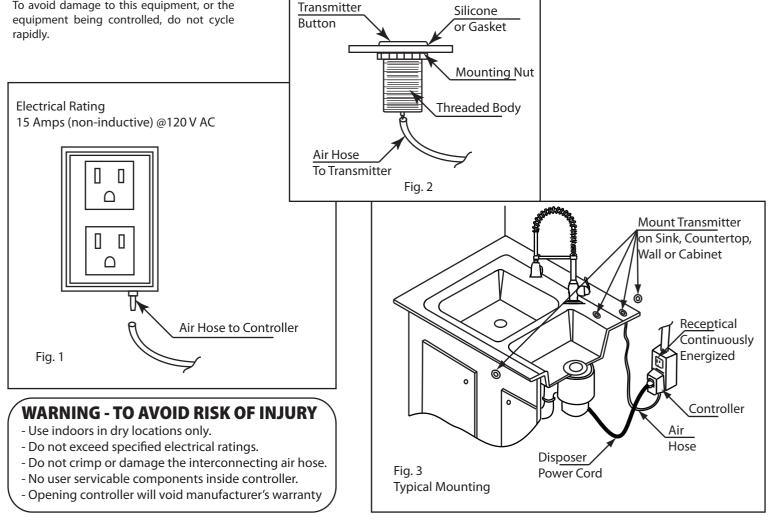






Westbrass Decorative 2429 E. Olympic Blvd. Los Angeles, CA 90021 www.westbrass.com

ASB DUAL OUTLET

DESCRIPTION:


N: Westbrass decorative ASB DUAL OUTLET is a simple and convenient remote on/off air switch. The unit plugs into any standard household wall receptacle. Any 120V, 1HP motor can be plugged directly into either of the MT 951 receptacles. Pressing a remote AIR BUTTON will alternately activate or deactivate two pieces of equipment.

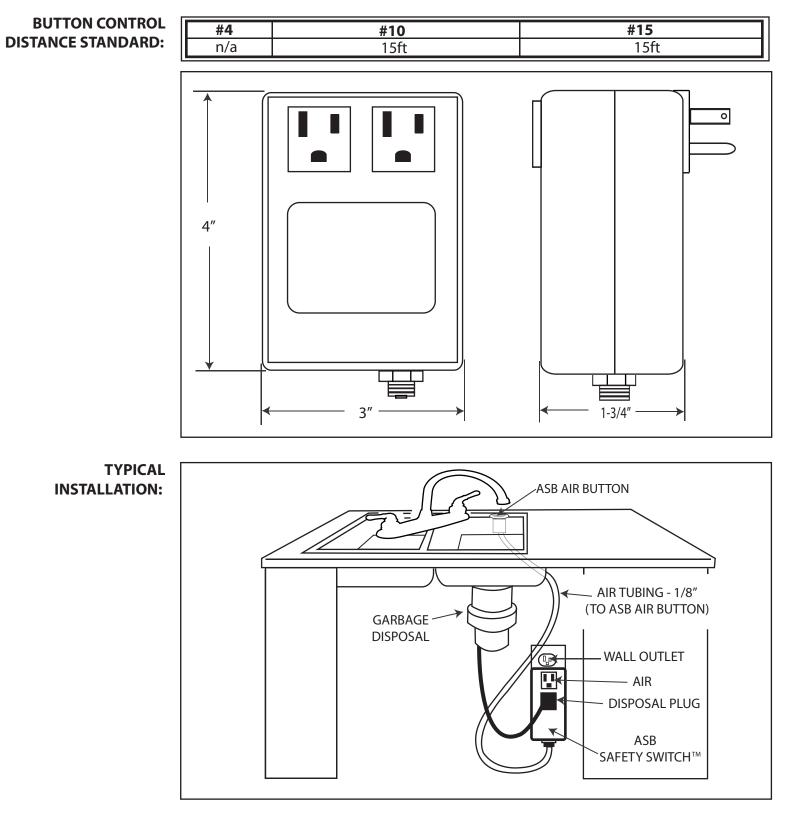

READ AND SAVE THESE INSTRUCTIONS

INSTRUCTIONS:

- Connect 7/8" outlet hose (B) to air gap using #16 worm gear clamp, leaving other end loose. Then connect dishwasher 5/8" discharge hose (C) to air gap using worm gear clamp. Avoid kinking hoses.
- 2. Push air gap threaded neck through deck hole. Adjust nut so threads protrude not more than 1/2" above sink top.
- Connect air gap outlet hose to disposer or to dishwasher tailpiece above the water level of sink trap; use #16 worm gear clamp. Avoid any low spots that could trap water. Install top washer and top nut. Slip on cap with relief opening facing wall.

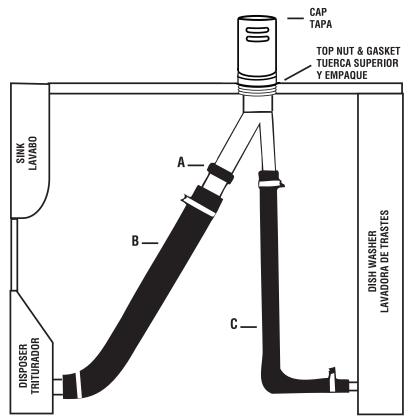

INSTRUCCIONES:

- Conecte la manguera de salida de 7/8 de pulgada (B) a el intervalo de aire con una abrazadera gusano de engrane #16, dejando el otro extremo suelto. Luego conecte la manguera de la lavadora de trastes de 5/8 de pulgada (C) al intervalo de aire usando una abrazadera de engranaje de gusano. Evite enrollar las mangueras.
- Empuje el cuello roscado del boquete aéreo a través del agujero de la cubierta. Ajuste la tuerca para que las roscas no sobresalgan más de 1/2 pulgada arriba del borde del lavabo.
- 3. Conecte la manguera de salida del boquete aéreo a el triturador o al tubo de la lavadora de trastes arriba del nivel del agua de la trampa del lavabo; use una abrazadera de engranaje de gusano #16. Evite cualquier punto bajo que pudiera detener agua. Instale la arandela y la tuerca superior. Coloque la tapa con la abertura dirigida hacia la pared.

D200; D200-1; R200; and R200-1 Installation Instructions


D217/R217 Instructions

INSTRUCTIONS:

1. If your sink has an extra hole drilled, slide body and escutcheon through hole. Seal to sink top with a thin bead of silicone. Choose proper length extension for thickness of sink.

2. Thread nut onto threaded extension and tighten with pliers.

- 3. Thread bottle onto bottom of extension.
- 4. Fill with soap from top of unit.

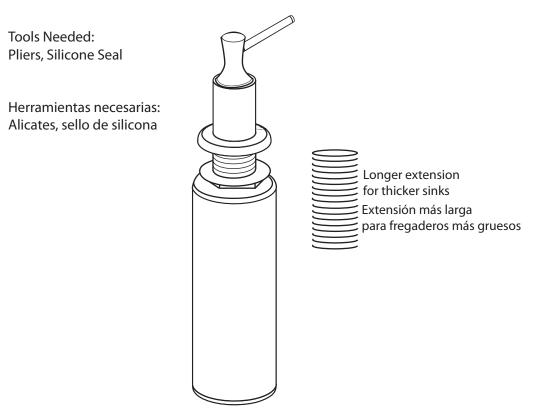

INSTRUCCIONES:

1. Si su fregadero tiene un orificio extra perforado, deslice el cuerpo y el chapetón a través del orificio. Selle para hundir la parte superior con una fina capa de silicona. Elija la extensión de longitud adecuada para el grosor del fregadero.

- 2. Enrosque la tuerca en la extensión roscada y apriete con unos alicates.
- 3. Enrosque la botella en el fondo de la extensión.
- 4. Llene con jabón desde la parte superior de la unidad.

WESTBRASS

2429 E. Olympic Blvd., Los Angeles, CA 90021 (213) 627-8441 • (213) 627-2844 orders@westbrass.com • www.westbrass.com