ASSEMBLY INSTRUCTION

6-DRAWER DRESSER

















This pages lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

Insert and secure Cam Bolt (X) to Top Panel (A).



2 Insert Dowel (V) to Left & Right Side Panel (B & C). Attach Cam Lock (W) to Left & Right Side Panel (B & C). Attach Cam Bolt (X) to Left & Right Side Panel (B & C).

NOTE : - Make sure arrows on each Cam Lock points towards nearest edge with holes







EXTENSION RUNNER DISASSEMBLE STEPS:



Disassemble the glides to tighten on panel. Glides will be disassembled in 2 parts, 1 part to fix on side panel and the other part to fix on drawer side.



Insert Dowel (V) to Partition (E). Attach Cam Lock (W) to Partition (E). Attach Cam Bolt (X) to Partition.

NOTE : - Make sure arrows on each Cam Lock points towards nearest edge with holes.







EXTENSION RUNNER DISASSEMBLE STEPS:



Disassemble the glides to tighten on panel. Glides will be disassembled in 2 parts, 1 part to fix on side panel and the other part to fix on drawer side.



Attach Post (G) to Bottom Frame (D) and secure with Flat Washer (AB), Spring Washer (AC) and JCBC Bolt (AD) and tighten with Allen Key (AE) clockwise. 6











8 Insert Dowel (V) to Center Bar (F). Attach Cam Lock (W) to Center Bar (F).

NOTE : - Make sure arrows on each Cam Lock points towards nearest edge with holes.





9 Attach Center Bar (F) to both side of Partition (E) and secure with Cam Lock (W). Cover Cam Lock (W) with Cam Lock Cover (Z).



10 Attach Left & Right Side Panel (B & C) to Center Bar (F) and secure with Cam Lock (W). Cover Cam Lock (W) with Cam Lock Cover (Z).



11 Attach Bottom Frame (D) to Left & Right Side Panel (B & C) and secure with Cam Lock (W). Cover Cam Lock (W) with Cam Lock Cover (Z). Secure Bottom Frame (D) to Partition (E) using Screw (AH) to secure.



12 Attach Top Panel (A) to Left & Right Side Panel (B & C) and Partition (E) and secure with Cam Lock (W). Cover Cam Lock (W) with Cam Lock Cover (Z).









14 Attach Extension Runner (U) to Left & Right Small Drawer Side (J & K) using Screw (T) to secure.





Flip over Left & Right Small Drawer Side (J & K). Insert Dowel (Y) to Left & Right Small Drawer Side (J & K) & Small Drawer Back (L). Attach Cam Lock (W) to Left & Right Small Drawer Side (J & K) & Small Drawer Back (L). Attach Cam Bolt (X) to Left & Right Small Drawer Side (J & K) & Small Drawer Front (I / R).







17 Slot Drawer Base (M) in corresponding grooves. Attach Small Drawer Front (I / R) to Drawer Box and secure with Cam Lock (W). Use Cam Lock Cover (Z) to cover Cam Lock (W).
Step B



18 Attach Handle (AF) to Small Drawer Front (I / R) and secure using Panhead Screw (AG).



19 Attach Extension Runner (U) to Left & Right Big Drawer Side (O & Q) using Screw (T) to secure.





Flip over Left & Right Big Drawer Side (O & Q). Insert Dowel (Y) to Left & Right Big Drawer Side (O & Q) & Big Drawer Back (P). Attach Cam Lock (W) to Left & Right Big Drawer Side (O & Q) & Big Drawer Back (P). Attach Cam Bolt (X) to Left & Right Big Drawer Side (O & Q) & Big Drawer Front (N / S).



21 Attach Left & Right Big Drawer Side (O & Q) to Big Drawer Back (P) and secure with Cam Lock (W). Use Cam Lock Cover (Z) to cover Cam Lock (W).



22 Slot Drawer Base (M) in corresponding grooves. Attach Big Drawer Front (N / S) to Drawer Box and secure with Cam Lock (W). Use Cam Lock Cover (Z) to cover Cam Lock (W).









Attach Anti-Tipping Kit (AI) to wall. Attach Bracket (vertically) to wall using the Long Screw provided. Attach Bracket (vertically) to furniture back (directly below top) with Short Screw. Place Bracket as close to center of furniture back as possible in relation to wall stud and the desired position in the room. Move furniture to its final position. Thread the strap through Bracket, and pull it tight.



Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.